MHC-2750

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model

- MHC-2750 is composed of following models. As for the service manual, it is issured for each component model, then, please refer to it.

COMPONENT MODEL NAME FOR MHC-2750

AMPLIFIER, CASSETTE DECK	DXA-H2750
CD PLAYER	CDP-H3750
TUNER	ST-H2750
SPEAKER SYSTEM	SS-H2750

Note :
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Note :
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

SPECIFICATIONS

Power requirements
US, Canadian model:
120 V AC, 60 Hz
AEP, G, IT model:
220 V—230 V AC, 50/60 Hz
UK model:
240 V AC, 50 Hz

Power consumption
AEP, G, IT model: 110 watts
UK model: 235 watts
US model: 105 watts
Canadian model: 115 watts

Dimensions
Approx. 225 × 365 × 310 mm (w/h/d)
($8^7/_8 \times 14^3/_8 \times 12^1/_4$ inches)
incl. projecting parts and controls

Weight
Approx. 11.3 kg (24 lb 15 oz)

Supplied accessories
Remote Commander (1)
(US, Canodian model: RM-S375)
(AEP, UK, G, IT model: RM-S375X)
Sony SUM-3 (NS) batteries (2)
AM loop antenna (1)
FM antenna (1)
AC power cord (1)
Flat cord (2)
Speaker cord (2)
(US, Canadian model)

Design and specifications subject to change without notice.

- G : Germany model
- IT : Italian model

PARTS LIST

NOTE:
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Ref. No.	Part No.	Description	Remark
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-501-369-11	ANTENNA (AEP, UK, G, IT)	
	1-501-374-11	ANTENNA, LOOP	
	1-557-954-21	CORD, SPEAKER CONNECTION (US, Canadian)	
⚠	1-558-032-11	CORD, POWER (UK)	
	1-574-927-21	CORD (WITH CONNECTOR) (DXA-ST)	
⚠	1-575-131-11	CORD, POWER (AEP, UK, G, IT)	
⚠	1-575-706-11	CORD, POWER (US, Canadian)	
	1-693-168-11	REMOTE COMMANDER (RM-S375) (US, Canadian)	
	1-693-169-11	REMOTE COMMANDER (RM-S375X) (AEP, UK, G, IT)	
	1-696-412-11	CORD (WITH CONNECTOR) (DXA-CDP)	
	3-694-922-01	SHEET, PROTECTION (SS)	
	3-755-706-11	MANUAL, INSTRUCTION (AEP, UK) (ENGLISH, FRENCH, SPANISH, CHINESE, DUTCH)	
	3-755-706-21	MANUAL, INSTRUCTION (US, Canadian) (ENGLISH, FRENCH)	
	3-755-706-41	MANUAL, INSTRUCTION (AEP, G, IT) (GERMAN, ITALIAN, SWEDISH, PORTUGUESE)	
*	4-945-080-01	CUSHION (SS)	
*	4-953-551-01	CUSHION (R) (ST)	
*	4-953-633-01	CUSHION (L) (ST)	
*	4-953-667-01	CUSHION (R) (CDP)	
*	4-953-668-01	CUSHION (L) (CDP)	
*	4-953-669-01	CUSHION (R) (DXA)	
*	4-953-670-01	CUSHION (L) (DXA)	
*	4-954-962-01	INDIVIDUAL CARTON (AEP, UK) (CDP, DXA, ST)	
*	4-954-964-01	INDIVIDUAL CARTON (AEP, G, IT) (CDP, ST)	
*	4-954-965-01	INDIVIDUAL CARTON (US, Canadian) (CDP, DXA, SS, ST)	
	9-910-999-33	INSTRUCTION (US)	

MINI Hi-Fi COMPONENT SYSTEM

SONY®

MICROFILM
9-957-395-11

Sony Corporation
Audio Group

English
92H0493-1
Printed in Japan
© 1992. 8
Published by Customer Relations and Service Group

MC-Service

SONY-06169

ST-H2750/H3750

SERVICE MANUAL

AEP Model
UK Model

Photo is ST-H3750

This set is the tuner
section in MHC-2750/3750

SPECIFICATIONS

System	FM stereo, FM/AM superheterodyne tuner
FM tuner section	
Tuning range	87.5 — 108 MHz
Antenna terminals	75 ohm unbalanced
Intermediate frequency	10.7 MHz
AM tuner section	
Tuning range	AEP, UK, Germany model: MW: 531—1,602kHz LW: 153—279kHz Italian model: MW: 522—1,611kHz LW: 144—288kHz
Antenna	AM loop antenna, External antenna terminals
Intermediate frequency	450 kHz

Design and specifications subject to change without notice.

TABLE OF CONTENTS

Section *Title* *Page*

1. SERVICING NOTES
1-1. Supply of Power During Services 2
1-2. Service Mode to Check Timer ON-OFF 2
1-3. Service Mode to Check FL Tube and Key Input .. 3
1-4. How to Forcefully Turn Power ON 3

2. GENERAL 4
Parts Identification 4
Clock Setting 4
Tuning in Automatically 5
Tuning in Manually 5
Storing Stations 6
To Tune in a Preset Station 6

3. ELECTRICAL ADJUSTMENTS 7

4. DIAGRAMS
4-1. Block Diagram 9
4-2. Schematic Diagram —Tuner Section— 13
4-3. Printed Wiring Boards —Tuner Section— 15
4-4. Schematic Diagram —Display Section— 17
4-5. Printed Wiring Board —Display Section— 19
4-6. Pin Description 21
4-7. Semiconductor Lead Layouts 22

5. EXPLODED VIEW 23

6. ELECTRICAL PARTS LIST 24

MICROFILM

FM STEREO/FM-AM TUNER

SONY®

MODEL IDENTIFICATION

—BACK PANEL—

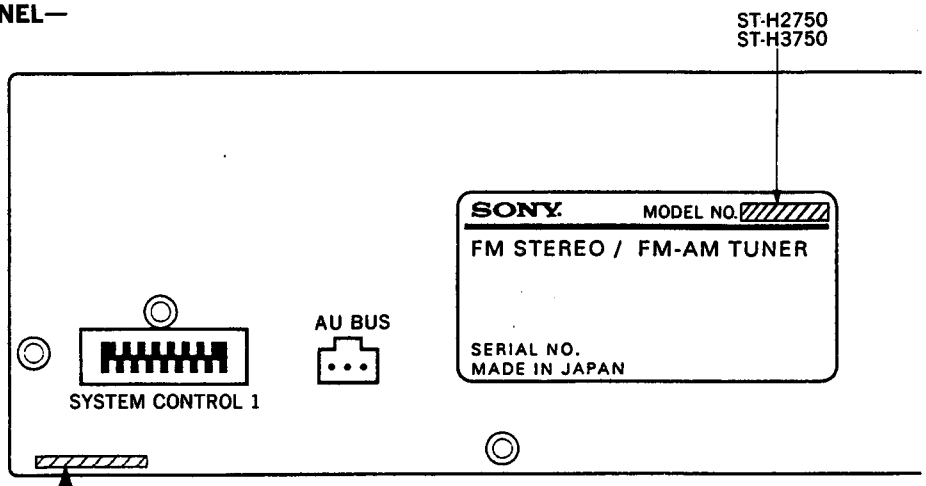

4-953-719-11 (AE) : ST-H2750: AEP, UK model
4-953-719-21 (IT) : ST-H2750: Italian (IT) model
4-953-719-31 (AE4): ST-H2750: Germany (G) model
4-953-719-51 (AE) : ST-H3750: AEP, UK model
4-953-719-61 (IT) : ST-H3750: Italian (IT) model

SECTION 1
SERVICING NOTES

1-1. SUPPLY OF POWER DURING SERVICES

Because the equipment is not provided with any power supply, it is operated with power supplied from the amplifier DXA-H2750/H3750 used in the series. The equipment requires the following 4 types of voltages. Therefore, connect the equipment to DXA-H2750/H3750 for services such as repairing with power supplied, because it will be too complicated to supply these voltages individually.

VOLTAGE	MAJOR CIRCUIT IN USE
AC 3.9V	FL tube filament voltage (VF)
DC −24V	Display controller IC701 grid voltage (VG)
DC 5.6V	Display controller IC701, Tuner PLL IC81 Vcc
DC 12V	Tuner RF, FM/AM DET IC21 Vcc

1-2. SERVICE MODE TO CHECK TIMER ON-OFF

It is possible to check whether the timer normally functions while being connected with an amplifier.

(1) Connect the equipment to the amplifier DXA-H2750/H3750 and set the SYSTEM POWER switch to STAND-BY state.
(2) Set the time of the tuner to any time.
(3) Press 3 switches "BAND", "−" and "MEMORY/NEXT" at the same time (while pressing "BAND" and "−" beforehand, finally press "MEMORY/NEXT")

(4) FL display tube

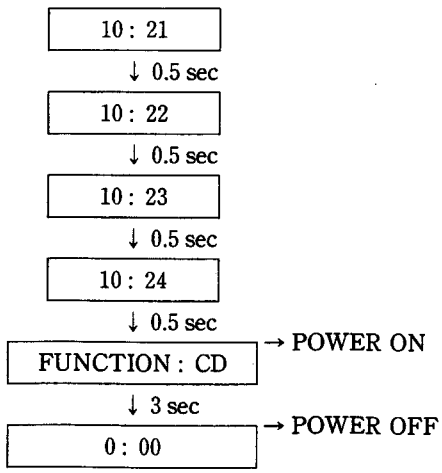

(5) Completion

Note : After completion of the checking above, data preset in the memory IC702 is erased while resetting the memory to the next page state upon shipping from the works, so be sure to recover the same frequency as that before the repairing.

• **Frequencies initially preset**

	AEP, UK, Germany model			Italian model		
	FM	MW	LW	FM	MW	LW
1	87.5MHz	531kHz	153kHz	87.5MHz	522kHz	144kHz
2	88.0MHz	603kHz	162kHz	88.0MHz	603kHz	162kHz
3	98.0MHz	999kHz	216kHz	98.0MHz	999kHz	216kHz
4	100.0MHz	1404kHz	270kHz	100.0MHz	1404kHz	270kHz
5	108.0MHz	1602kHz	279kHz	108.0MHz	1611kHz	288kHz
6—20	*1	*2	*2	*1	*2	*2

*1 The same frequency values are set for the preset memory No. 6—No. 10, No. 11—No. 15 and No. 16—No. 20 as for No. 1—No. 5 respectively.
*2 The same frequency values are set for the preset memory No. 6—No. 10 as for No. 1—No. 5.

1-3. SERVICE MODE TO CHECK FL TUBE AND KEY INPUT

It is possible to check FL tube all ON grid, segment and key input.

(1) Connect the equipment to the amplifier DXA-H2750/H3750 and remove the AC cord of the amplifier out of the AC receptacle.
(2) While pressing 3 switches "BAND", "−" and "MEMORY/NEXT" at the same time, insert the AC cord of the amplifier into the receptacle.
(3) Thus, all FL display tubes light up. By pressing "+" or "TIMER CONTROL" in this state, partial lighting or key input checking, respectively, is effected.

Partial lighting: Indicates the mode to check complete connection between the grid and segment of the FL tube. The condition is normal when the following indication is effected. By pressing "+" or "−" in the partial lighting mode, the status returns to key input checking or all ON in (3), respectively.

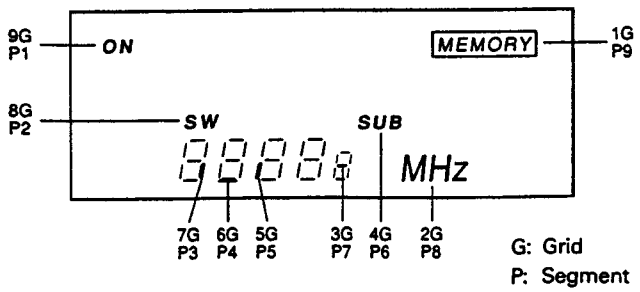

Key input checking: Shows the mode to check key input into 9 keys on the front panel. "0" is indicated at first, and every time a different key is pressed, indicated number is increased. After completion of pressing all 9 keys, "PASS" is indicated.
(Once a key is pressed, pressing it again is rejected.)

(4) After the completion of the checking, the equipment recovers normal operation by once removing the AC cord and inserting it again into the AC receptacle.

1-4. HOW TO FORCEFULLY TURN POWER ON

The equipment is not provided with any power switch. Therefore, power ON/OFF is controlled in the amplifier side. However, even without an amplifier, power is supplyable to the equipment according to the following methods provided any type of power is available, e.g. using a special jig or supplying the 4 types of voltages individually.
(When power is supplied from the amplifier, power is turned ON only for the tuner.)

(1) Supply power.
(2) Press 3 switches "STEREO/MONO", "−" and "MEMORY/NEXT" at the same time.
(Press "STEREO/MONO" and "−" beforehand, and finally press "MEMORY/NEXT".)

However, when the equipment is started up by the methods above, service modes TIMER ON/OFF and FL tube and key input checking are not operable.

SECTION 2
GENERAL

This section is extracted from instruction manual.

Parts Identification

Refer to the pages indicated in ● for use of the buttons.

Tuner Section A

1. Remote control sensor
2. REC/TIMER button ●
3. Display window
4. MEMORY/NEXT button ● ● ● ●
5. STEREO/MONO (stereo/monaural) button ●
6. MODE button and TUNING/PRESET indicators ● ● ●
7. TUNING PRESET/TIMER –/+ buttons
8. BAND selector ●
9. WAKE UP TIMER 1, 2 /CLOCK SET buttons ● ●

A

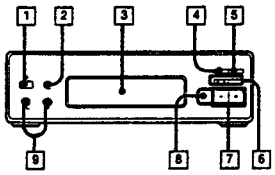

Clock Setting

Setting the Clock

Example: Set to 9:25 in the morning.

1 **Press WAKE UP TIMER 1 and 2 at the same time.**

2 **Set the hour with the – or + button.**

3 **Press MEMORY/NEXT.**

4 **Set the minute with the – or + button.**

5 **Press MEMORY/NEXT.**
The clock starts operating.

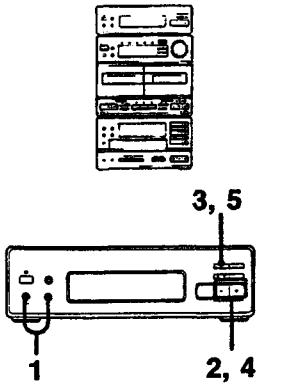

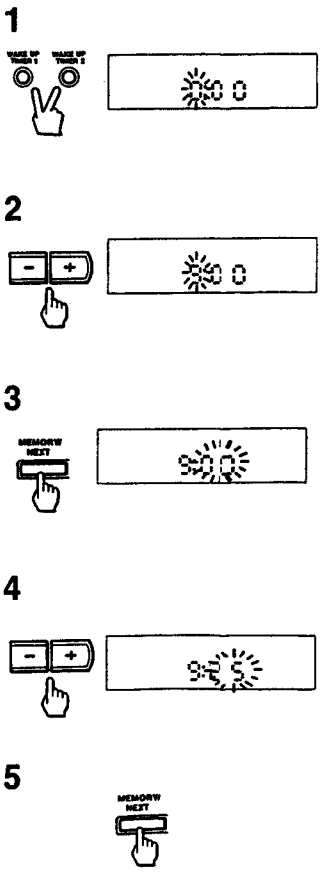

When a power interruption occurs
The clock and timer settings are all erased, and "0:00" will flash on the display.

To change the frequency display to the time display
Press CLOCK DISPLAY on the remote commander. Press it again to change to the frequency display.

22

Radio Reception

The automatic tuning allows you to receive stations whose signal is strong enough. When the signal is too weak, use the manual tuning.

Tuning in Automatically

1 Press BAND repeatedly until the desired band appears.
As you press BAND, the band changes as follows:

FM → MW → LW

2 Press MODE so that the TUNING indicator lights up.

3 Keep – or + depressed for more than 1 second.
"AUTO" appears on the display and the unit tunes in a station automatically.

Repeat step 3 until the desired station appears.

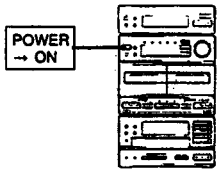

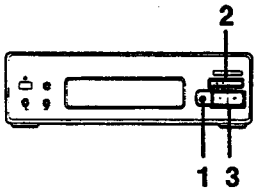

1

2

3



Radio Reception

Tuning in Manually

1 Press BAND repeatedly until the desired band appears.

2 Press MODE so that the TUNING indicator lights up.

3 Press – or + repeatedly until the desired station appears.

Indicators on the display

TUNED: Appears when a station with sufficient signal strength is tuned in.
STEREO: Appears when an FM stereo program with sufficient signal strength is received.

Antenna adjustment A

For MW and LW reception, find the best location for the supplied AM loop antenna.

When an FM program is noisy or hard to receive

Press STEREO/MONO so that "MONO" appears in the display. There will be no stereo effect, but the reception will be improved. Press the button again to restore the stereo effect.

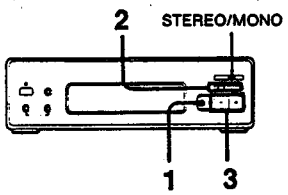

1



2

3



A

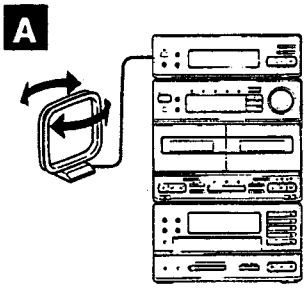

Radio Reception

Storing Stations

You can store FM stations and MW/LW stations in a desired sequence, so that you can tune in the stored station directly by entering the preset station number.

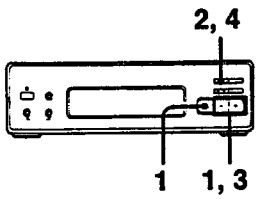

- You can store 20 FM stations, 10 MW stations, and 10 LW stations.

This operation is not possible with the remote commander.

1 **Tune in the desired station.**

2 **Press MEMORY/NEXT.**
"MEMORY" and the preset station numbers appear on the display.

3 **While "MEMORY" is on (for several seconds), press – or + to select a desired preset number.**

4 **Press MEMORY/NEXT.**
"MEMORY" disappears, and the station is stored.

Repeat steps 1 to 4 for each station to be stored.

1



2



3



4



If you cannot store a station successfully
Press MEMORY/NEXT again so that "MEMORY" appears, and then proceed with steps 3 and 4 above.
Be sure to operate while "MEMORY" is on (about 4 seconds).

When you have selected the wrong preset station number
Press MEMORY/NEXT again and then proceed with the steps 3 and 4.

To change the preset station
Store a desired station at the desired preset number by proceeding with the above steps.
The station previously preset will be replaced with the new station.
Erasing only is not possible.

Radio Reception

To Tune in a Preset Station

1 **Press BAND to select a desired band.**

2 **Press MODE so that the PRESET indicator lights up.**

3 **Press – or + to select the desired preset station number.**

To tune in a preset station directly A

(Possible only with the remote commander)
1 Set the TUNER/EQ/CD numeric button function selector to TUNER.
2 Press BAND to select a desired band.
3 Press the numeric buttons to select the desired preset station number.

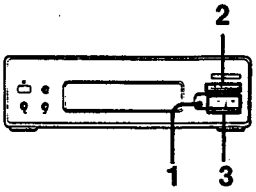

1



2

3



A

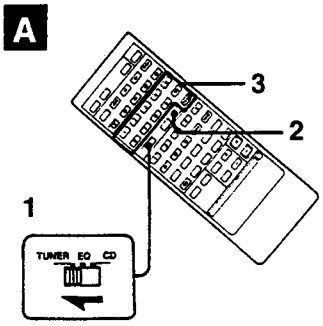

MC-Service

SECTION 3
ELECTRICAL ADJUSTMENTS

Precautions in Repairing

If the front end unit fails, it is difficult to repair the inner circuits, so replace the entire front end unit.

FM SECTION

FM Discriminator Adjustment (NULL Adjustment)

Setting :

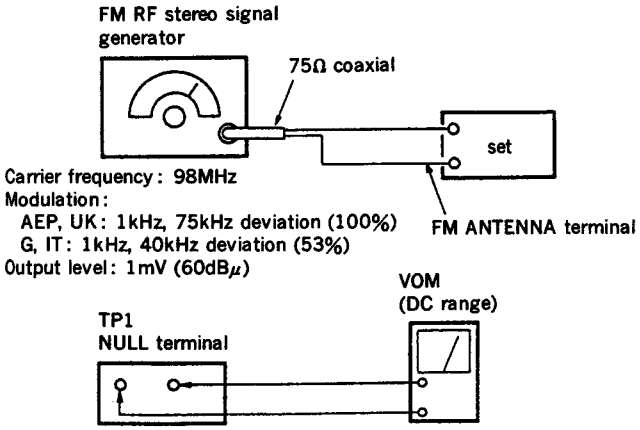

Procedure :

1. Tune the set to 98MHz.
2. Adjust T21 for 0V reading on the VOM.

Note : FM Tuning Level adjustment should be made after FM discriminator alignment.

FM Tuning Level Adjustment

Setting :

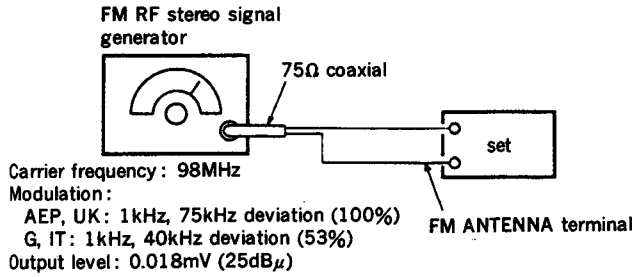
FM RF stereo signal generator
75Ω coaxial
set
Carrier frequency : 98MHz
Modulation :
AEP, UK : 1kHz, 75kHz deviation (100%)
G, IT : 1kHz, 40kHz deviation (53%)
Output level : 0.018mV (25dBμ)
FM ANTENNA terminal

Procedure :

1. Tune the set to 98MHz.
2. Adjust RV24 so that the TUNED indicator goes on.

- G : Germany model
- IT : Italian model

FM Stereo Separation Adjustment

Setting :

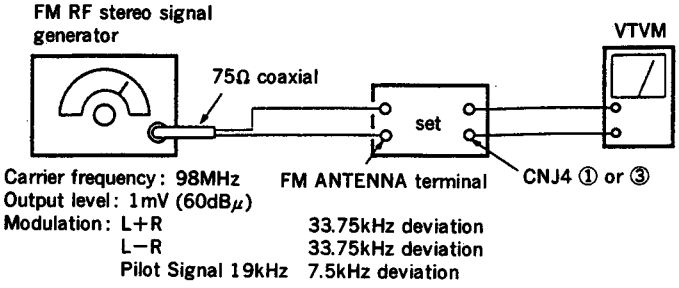

Procedure :

Tune the set to 98MHz.

FM stereo Signal generator Output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV21 for minimum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV21 for minimum reading.

L-CH Stereo separation : Ⓐ—Ⓑ
R-CH Stereo separation : Ⓒ—Ⓓ

The separations of both channels should be equal.

AM SECTION

AM Tuning Level Adjustment

Setting :

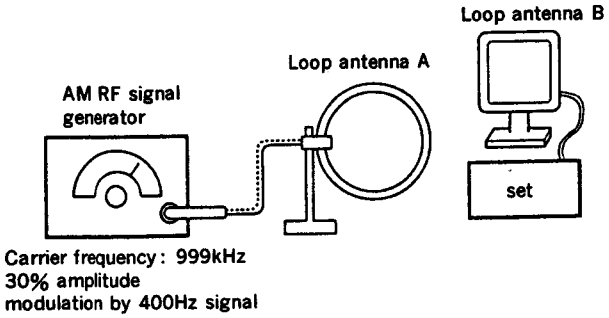

Procedure :

1. Set loop antenna A so that the loop antenna B input level becomes 58dBμ/m (0.8mV/m)
2. Tune the set to 999kHz.
3. Adjust the RV22 so that the TUNED indicator goes on.

Adjustment Location :

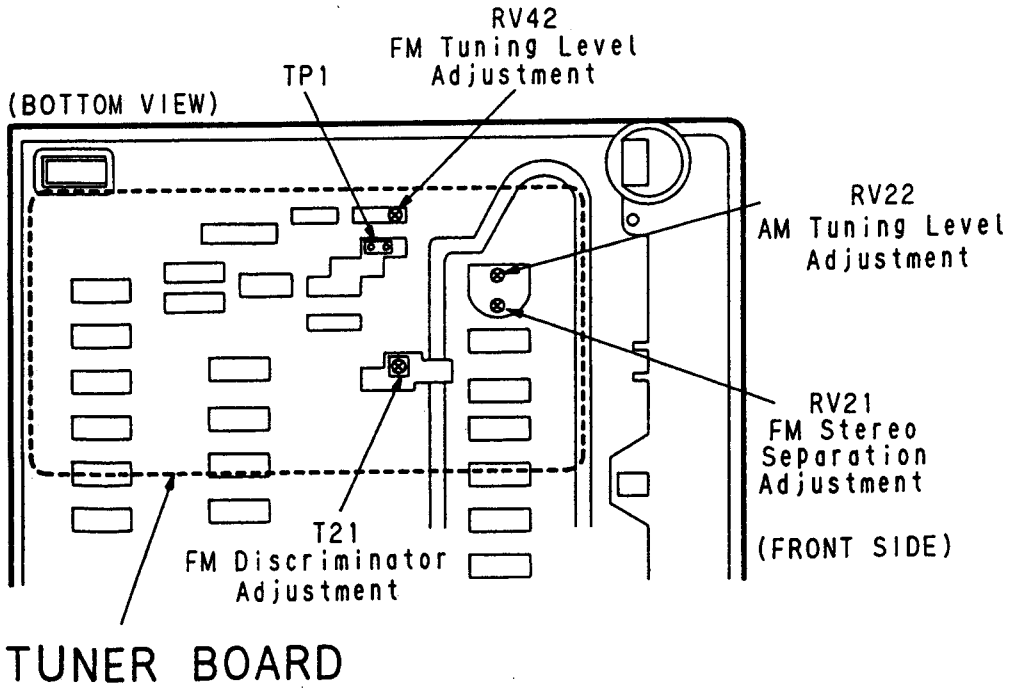

MC-Service

SECTION 4
DIAGRAMS

4-1. BLOCK DIAGRAM

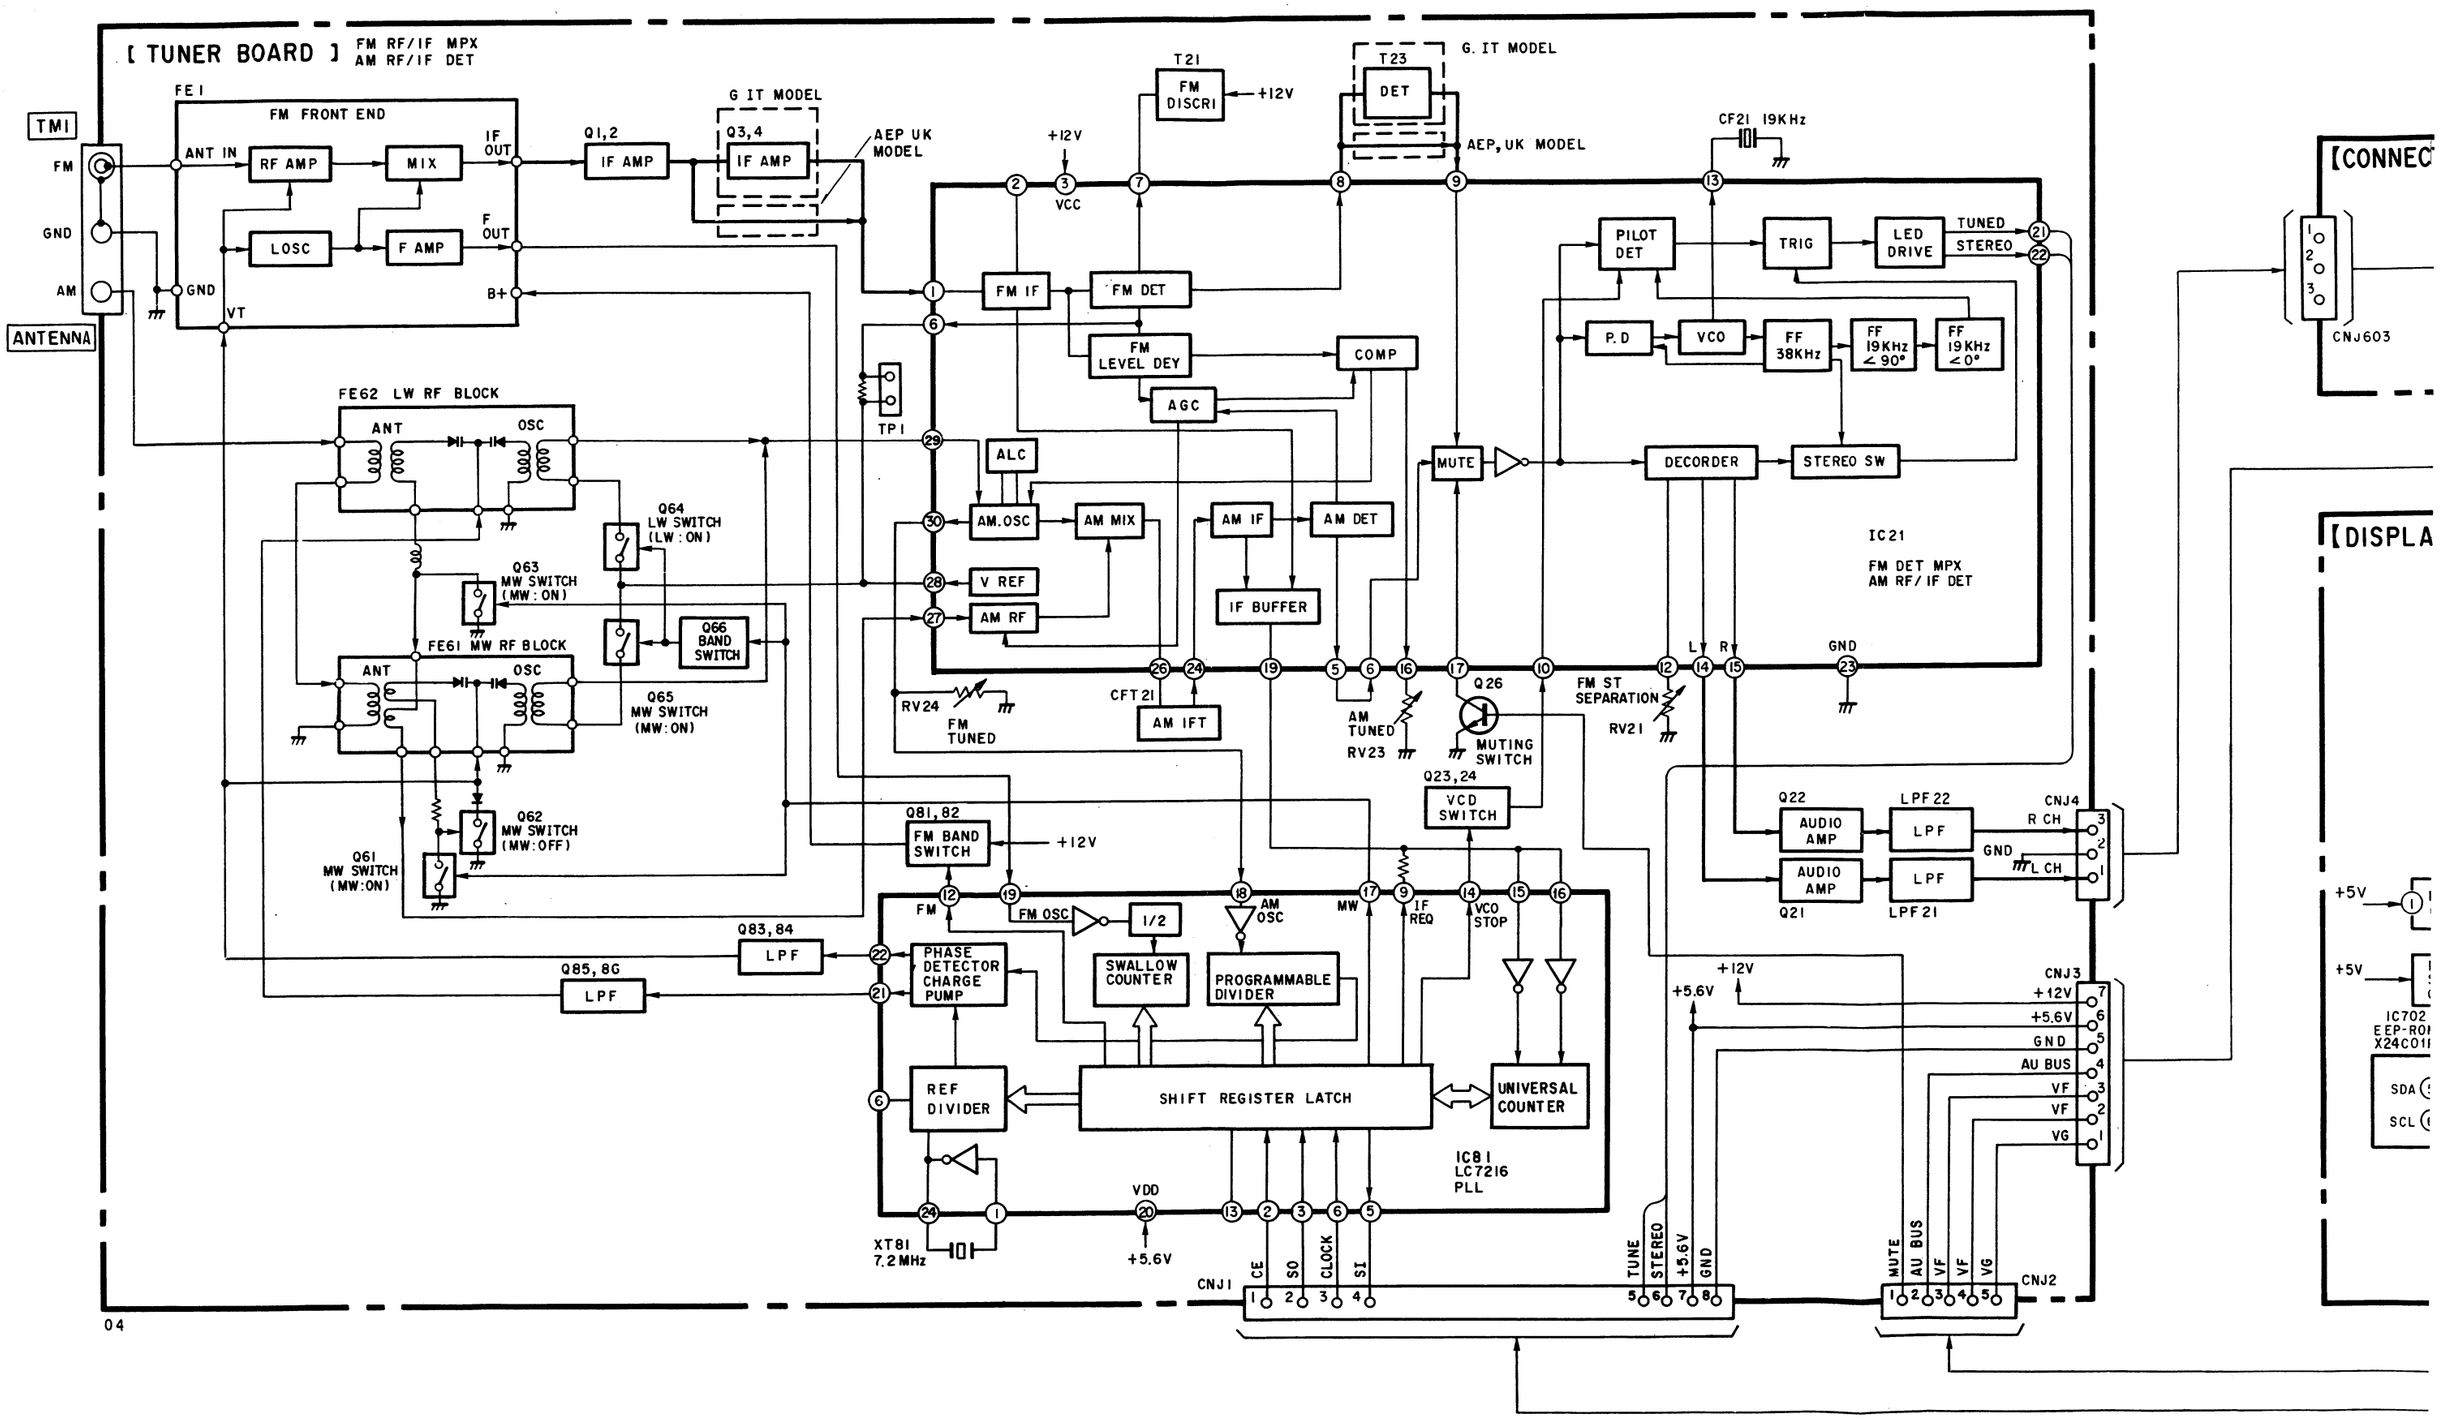

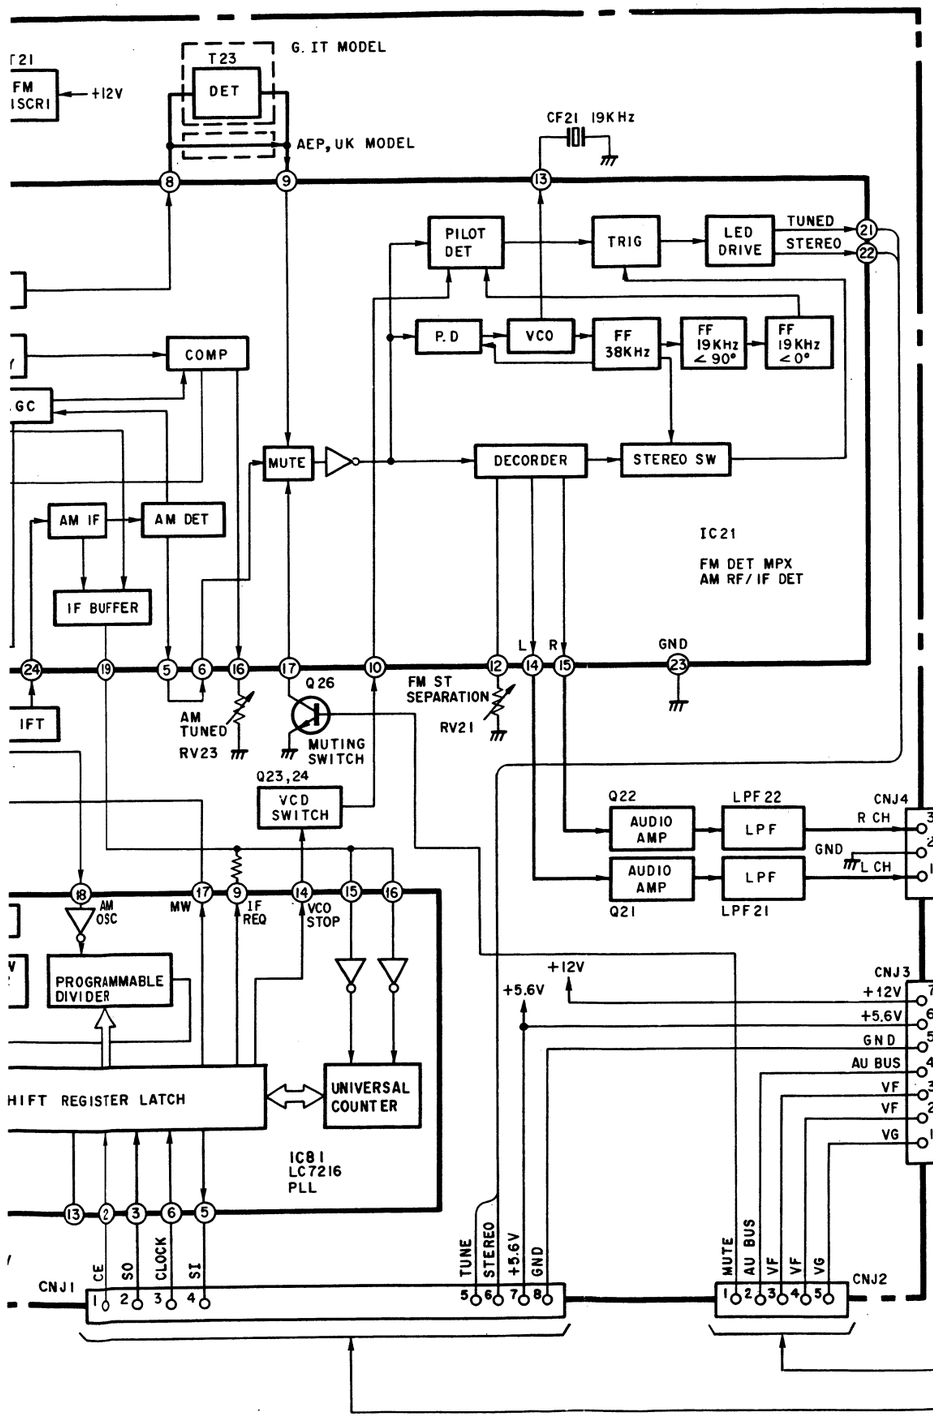

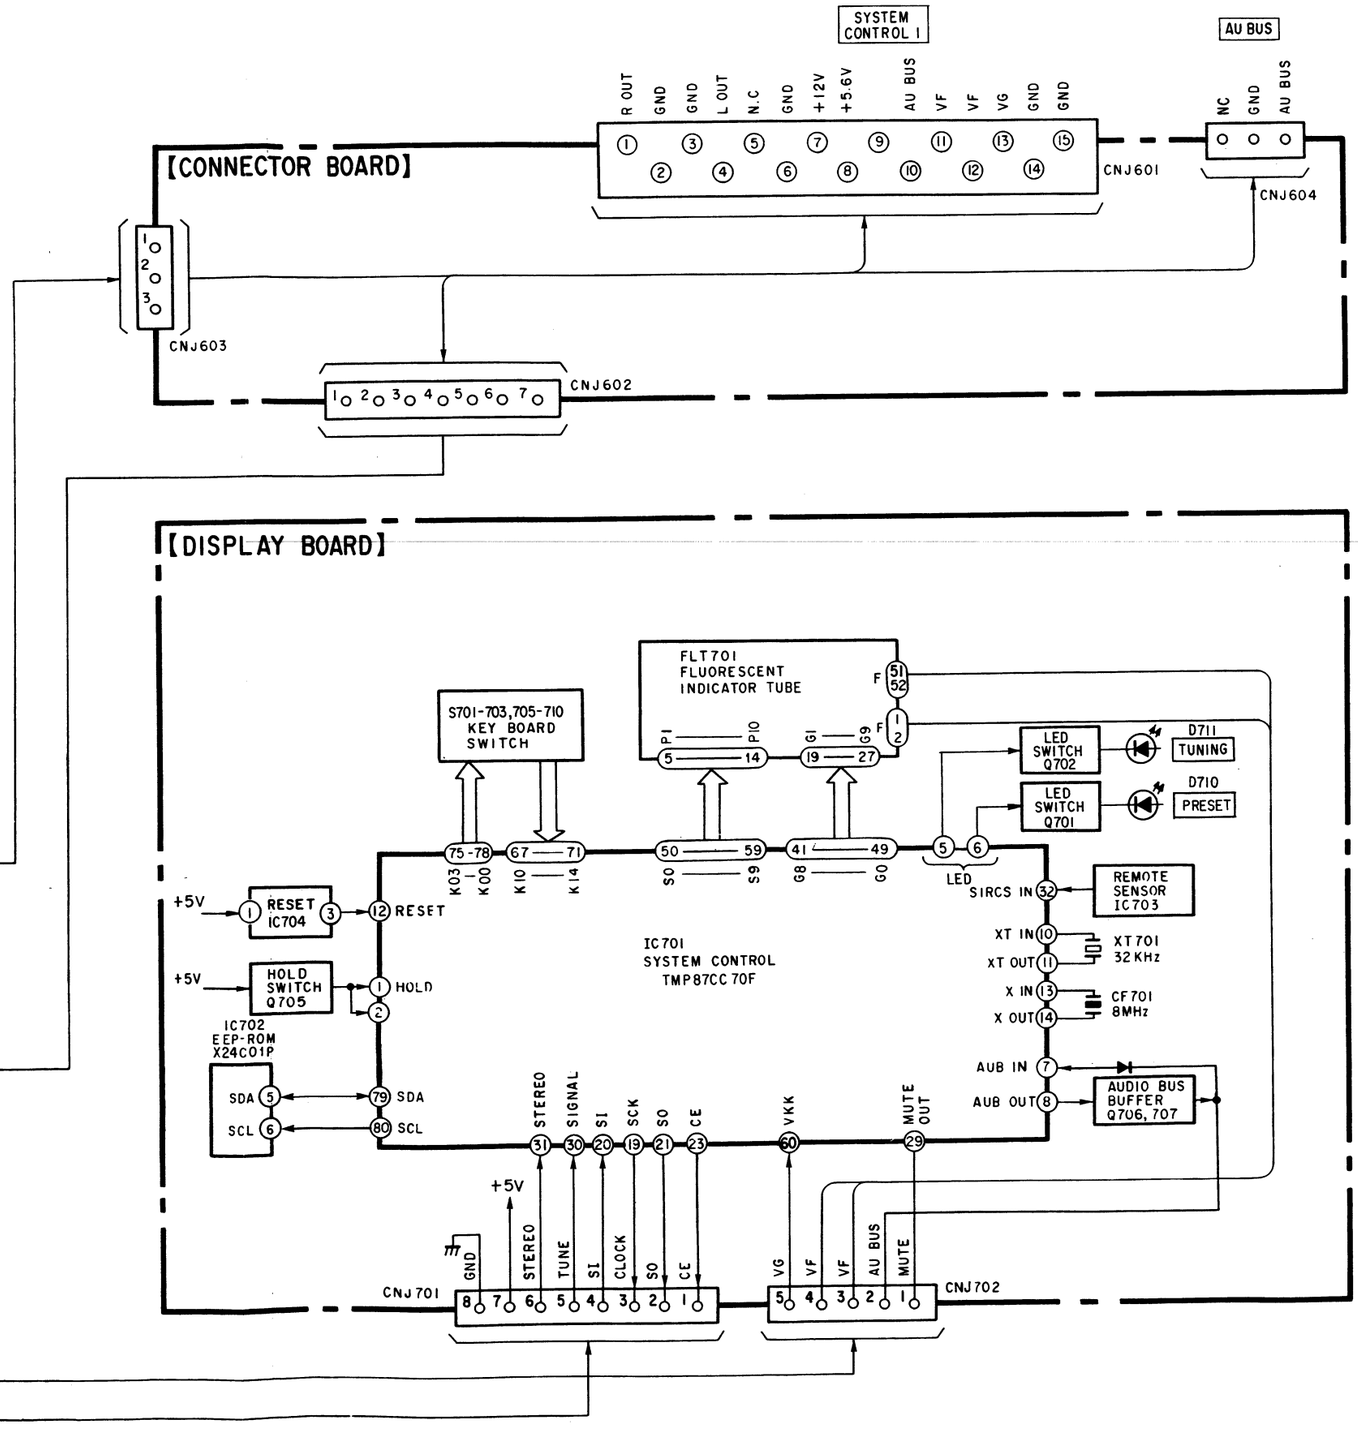

SONY-06169 / Druck2

• IC Block Diagrams

IC21 LA1851N

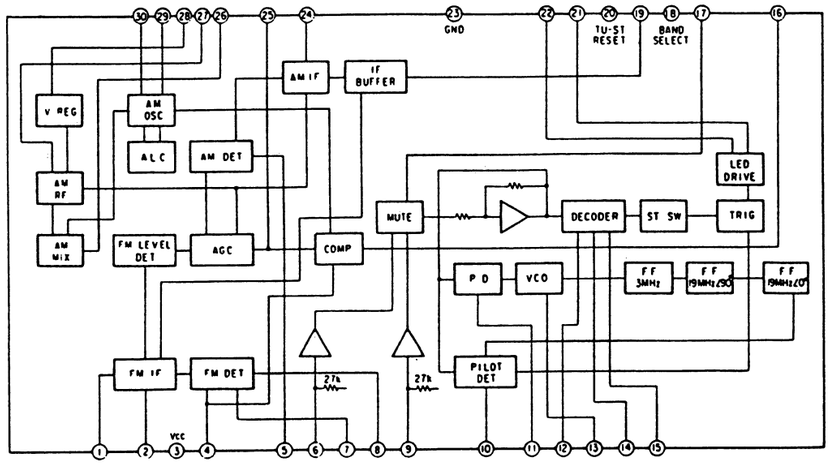

IC81 LC7218

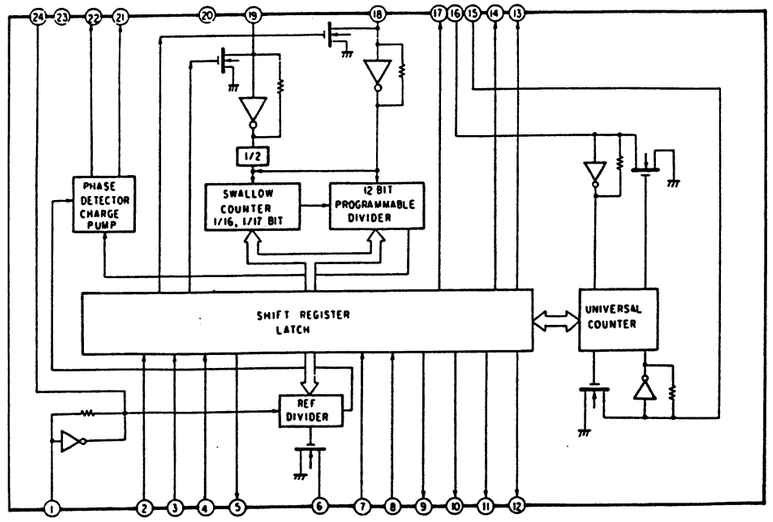

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- ⊟ : nonflammable resistor.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

- ▭ : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark: FM
  ( ): MW
  < >: LW
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ⇨ : FM
- G : Germany model
- IT : Italian model

4-2. SCHEMATIC DIAGRAM —TUNER SECTION—

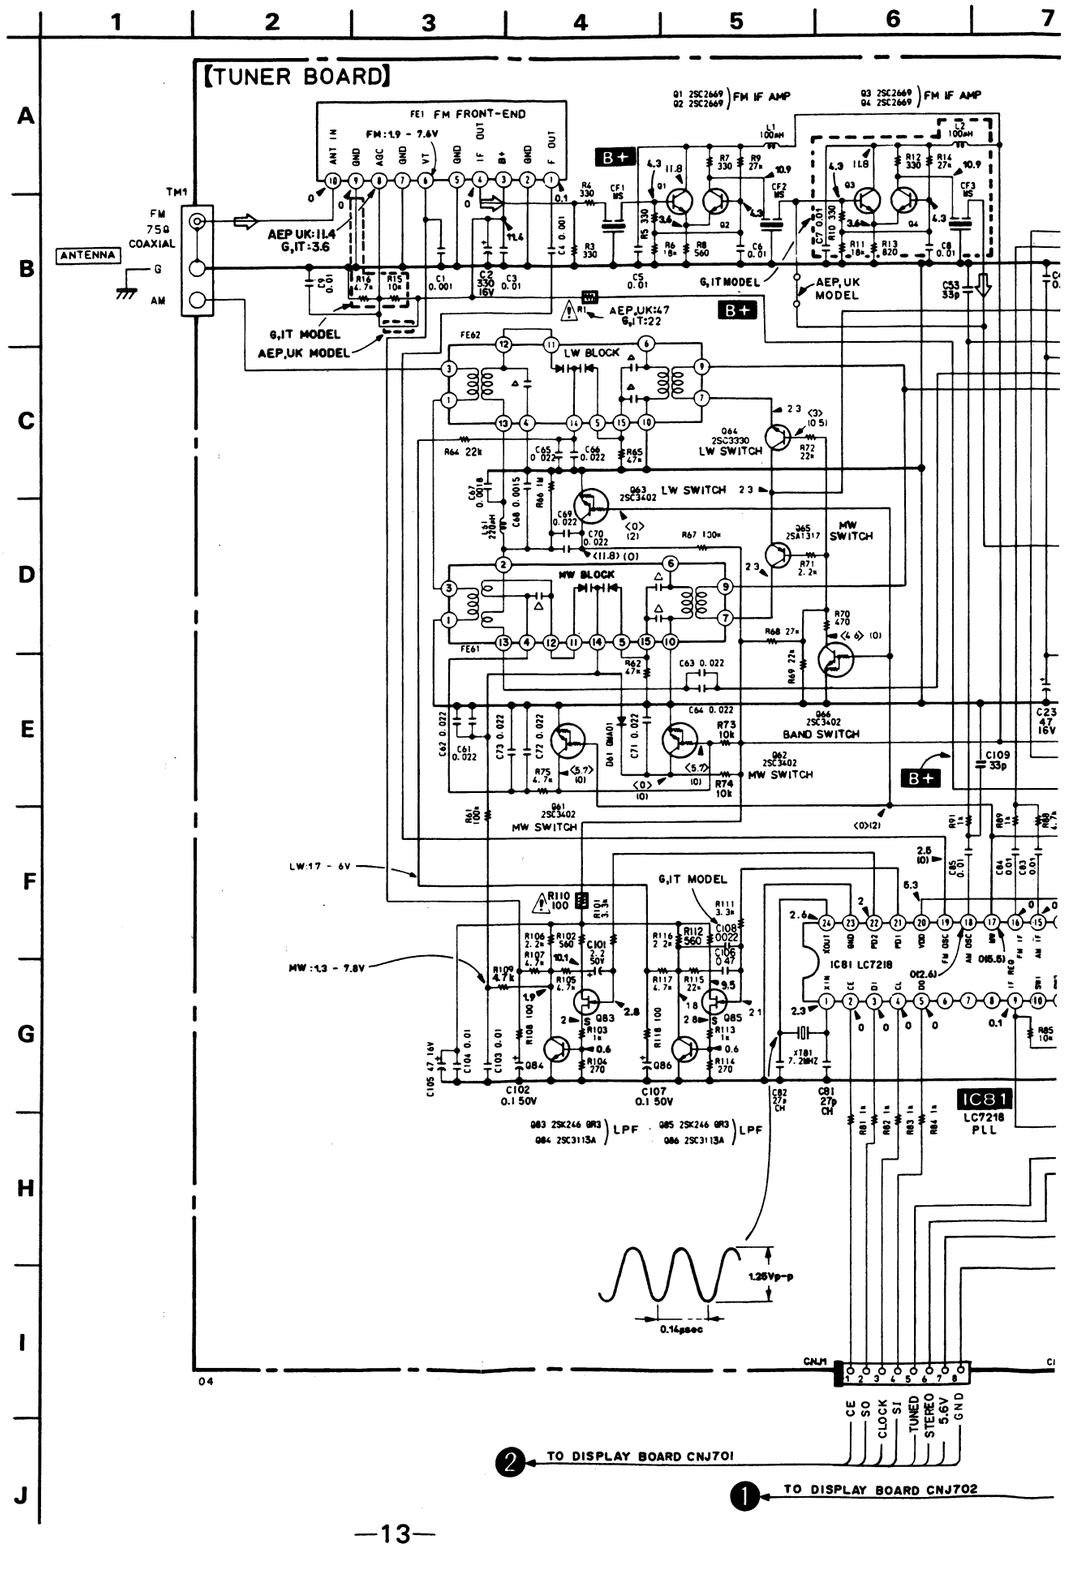

4-2. SCHEMATIC DIAGRAM —TUNER SECTION—

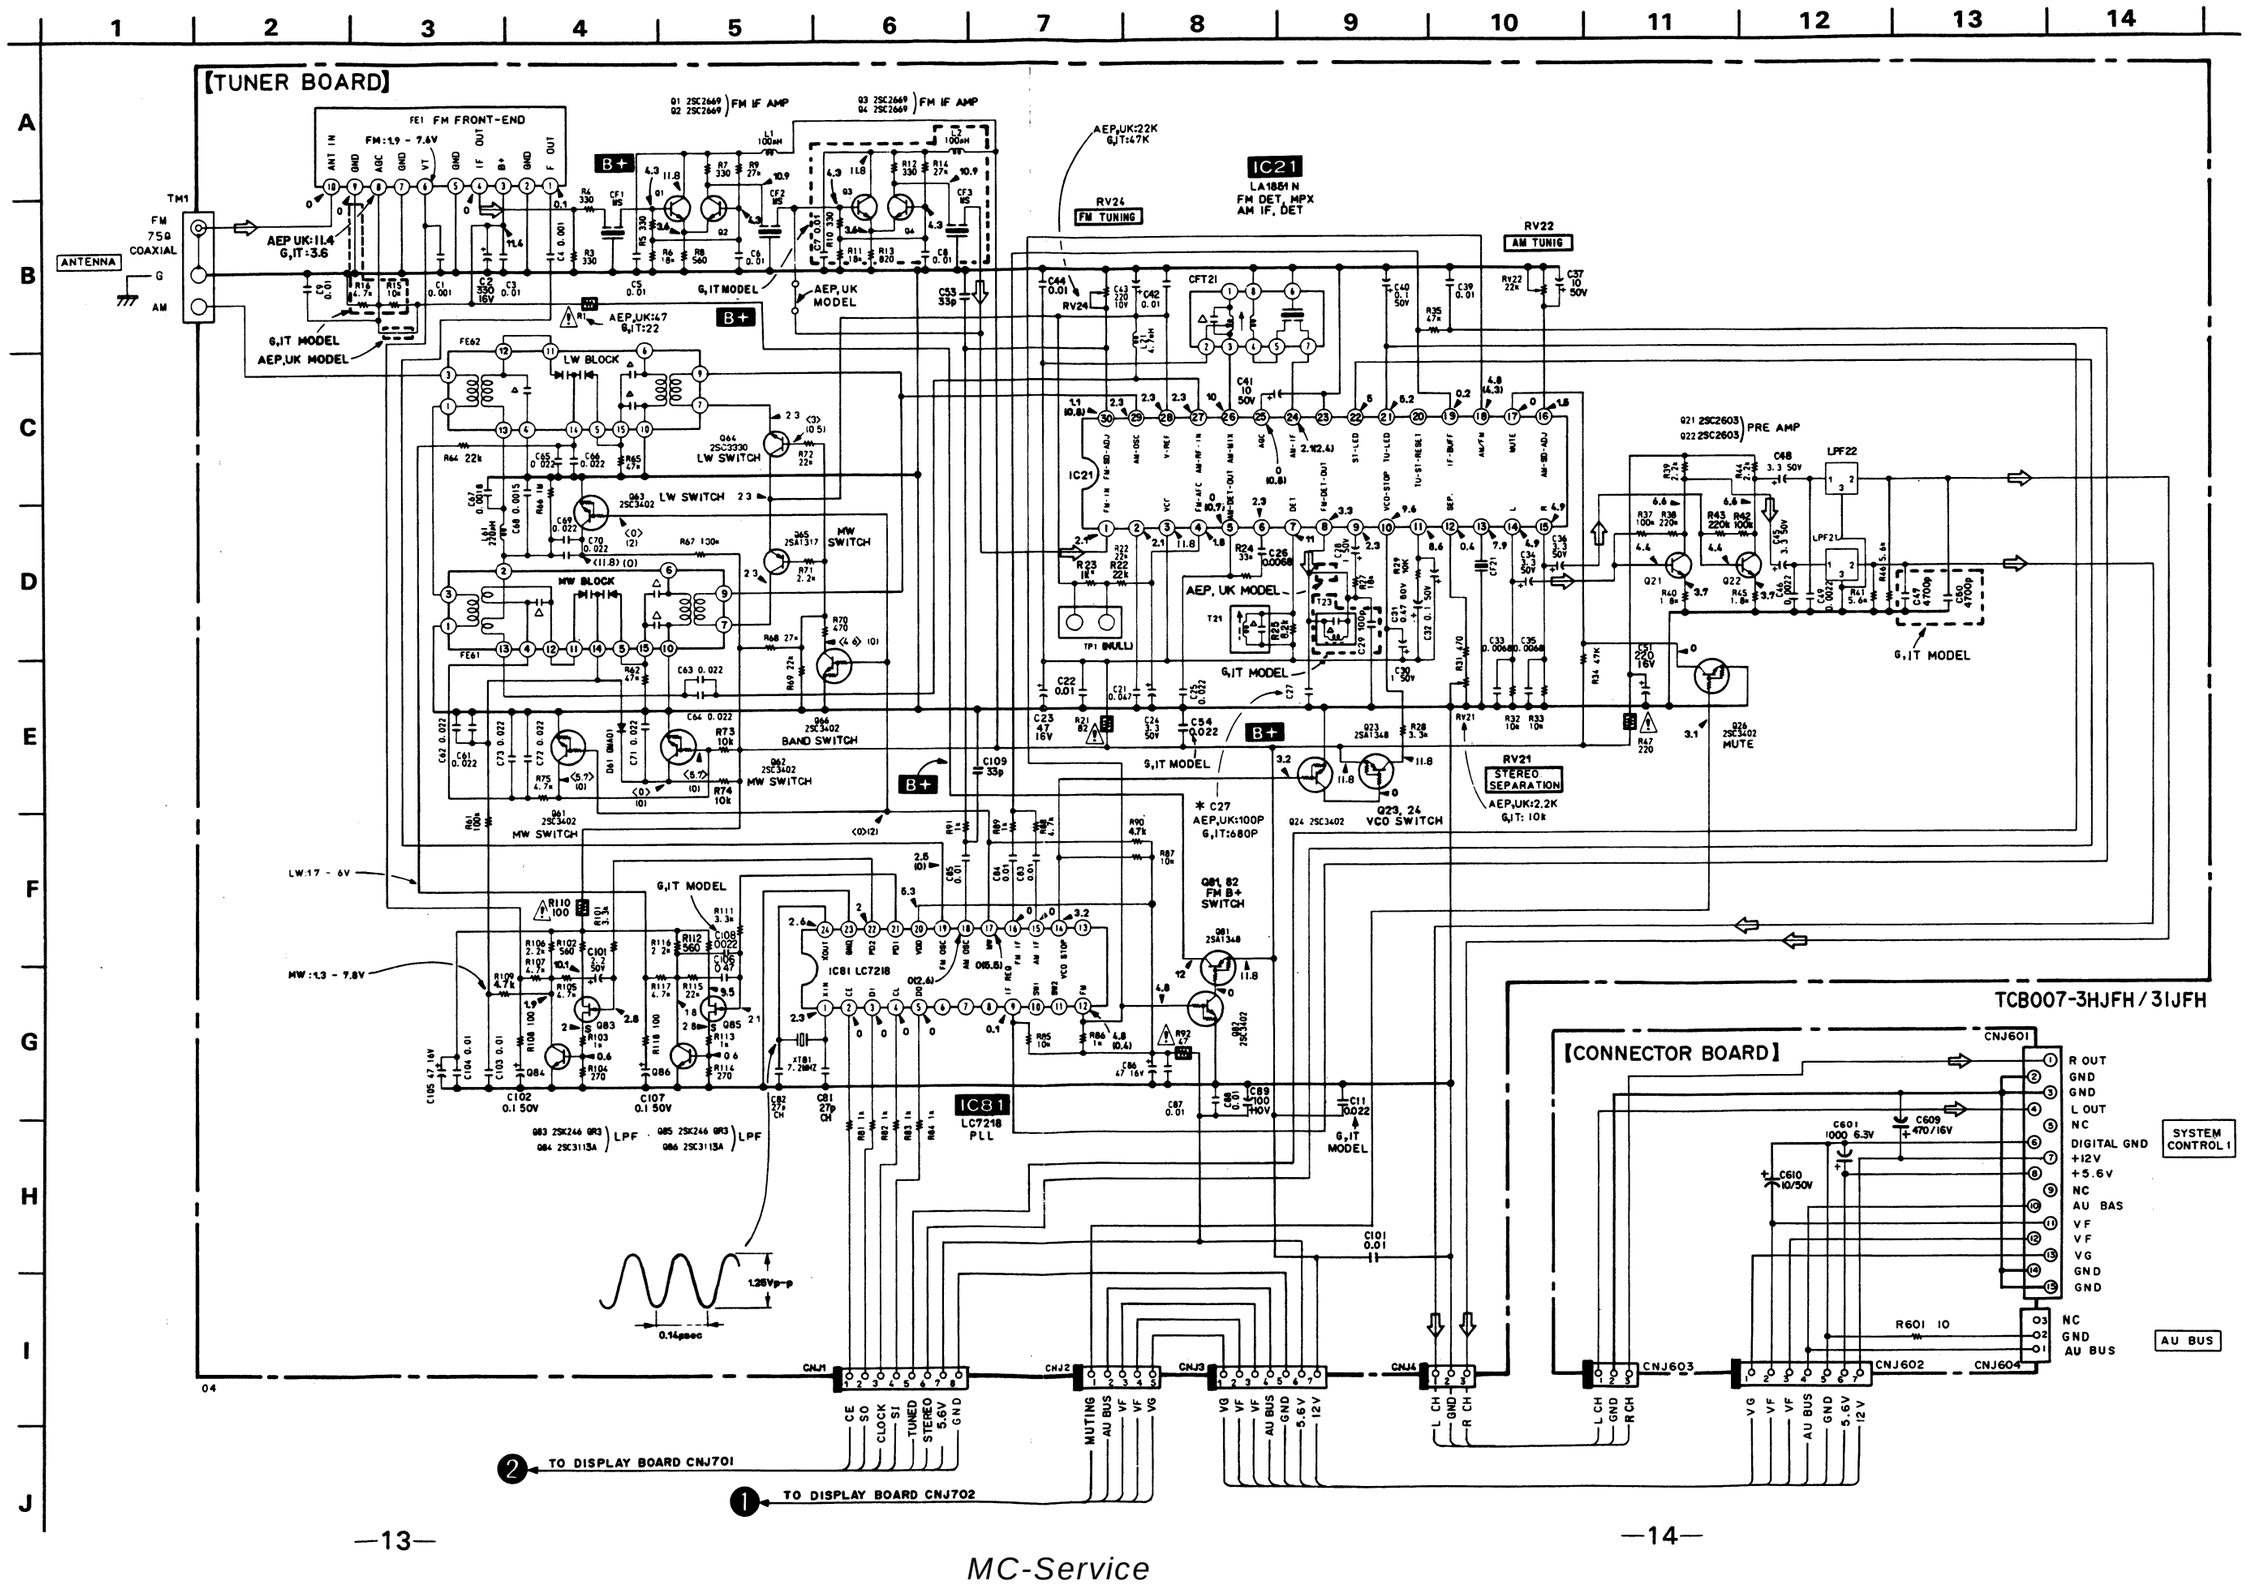

wise noted. pF: μμF
cept for electrolytics

less unless otherwise

mark ⚠ or dotted
r safety.
specified.

h respect to ground

t Impedance 10MΩ).
ue to normal produc-

ope.
ue to normal produc-

SONY-06169 / Druck4

4-3. PRINTED WIRING BOARDS —TUNER SECTION— • Refer to page 22 for Semiconductor Lead Layouts.

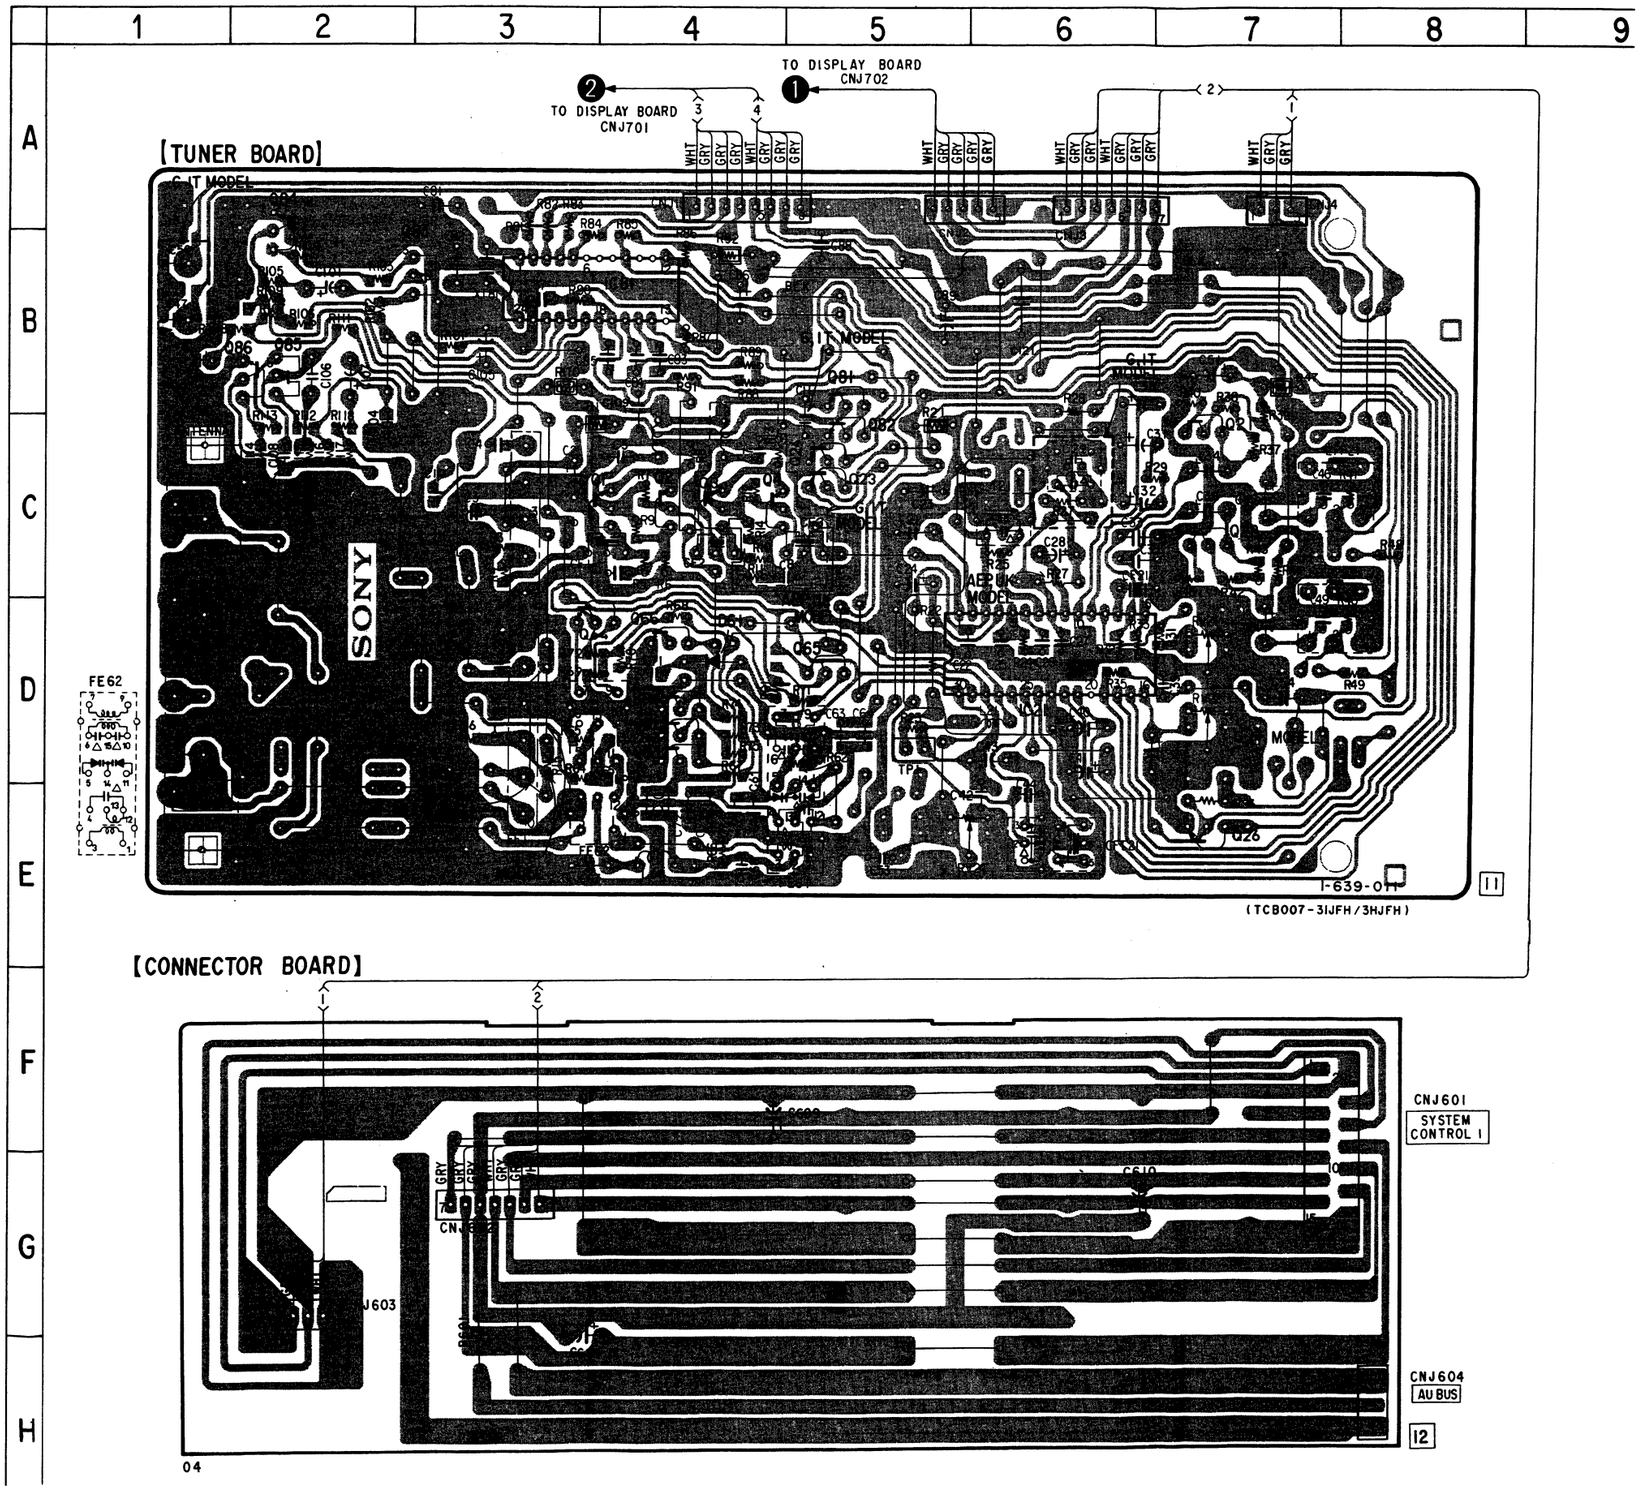

• Semiconductor Location

Ref. No.	Location
D61	D-4
IC21	D-6
IC81	B-4
Q1	C-4
Q2	C-4
Q3	C-4
Q4	C-4
Q21	C-7
Q22	C-7
Q23	C-5
Q24	C-5
Q26	E-7
Q61	D-4
Q62	D-4
Q63	D-4
Q64	D-3
Q65	D-5
Q66	D-4
Q81	B-5
Q82	C-5
Q83	B-3
Q84	A-2
Q85	B-2
Q86	B-2

Note:

- ○—— : parts extracted from the component side.
- G : Germany model
- IT : Italian model

4-4. SCHEMATIC DIAGRAM —DISPLAY SECTION—

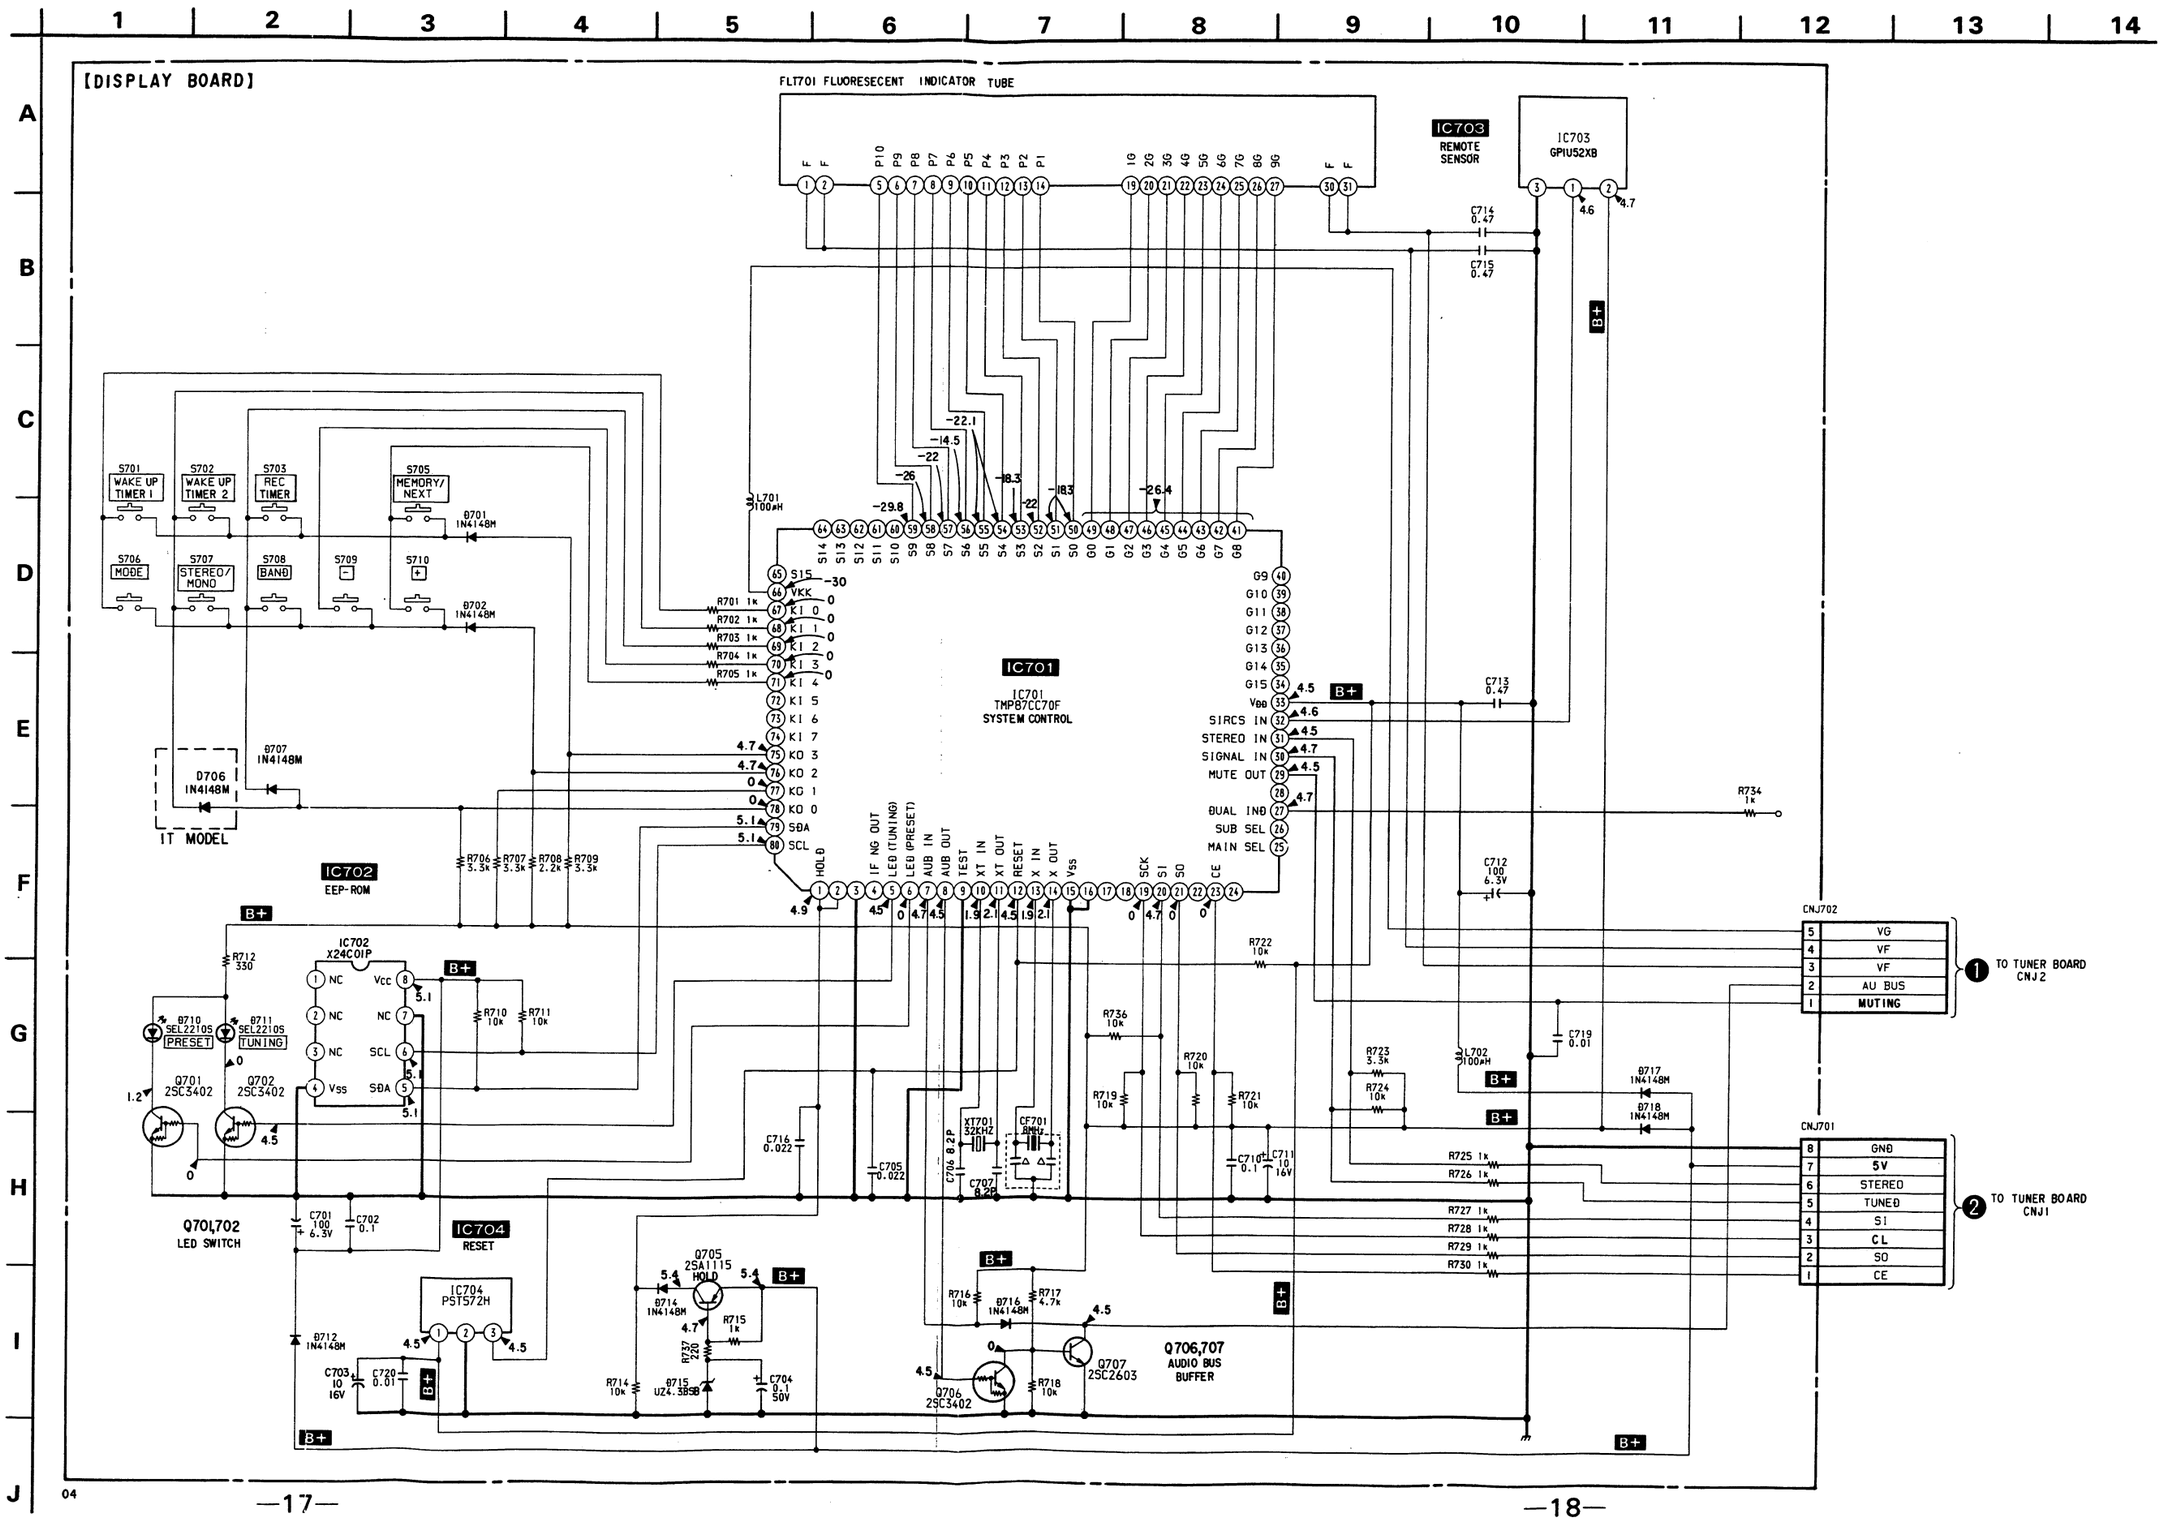

4-5. PRINTED WIRING BOARD —DISPLAY SECTION—

• Refer to page 22 for Semiconductor Lead Layouts.

(7G) (6G ~ 1G)

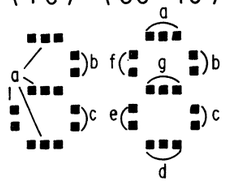

FL701 FLUORESCENT INDICATOR TUBE

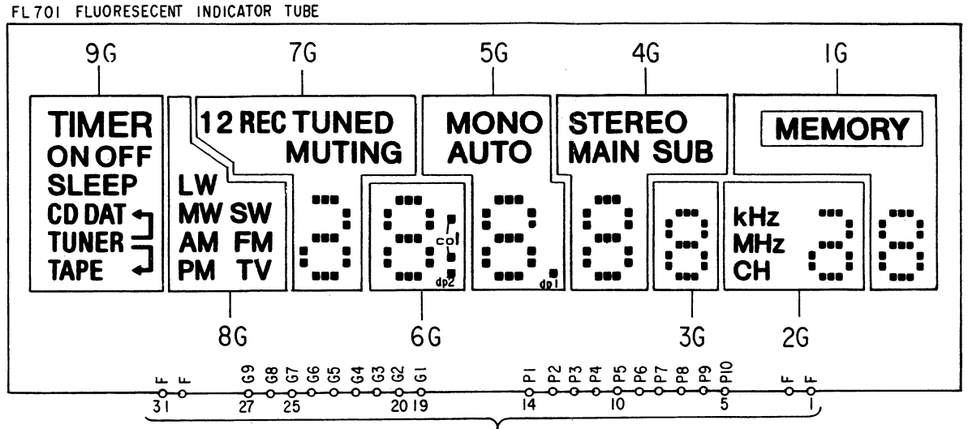

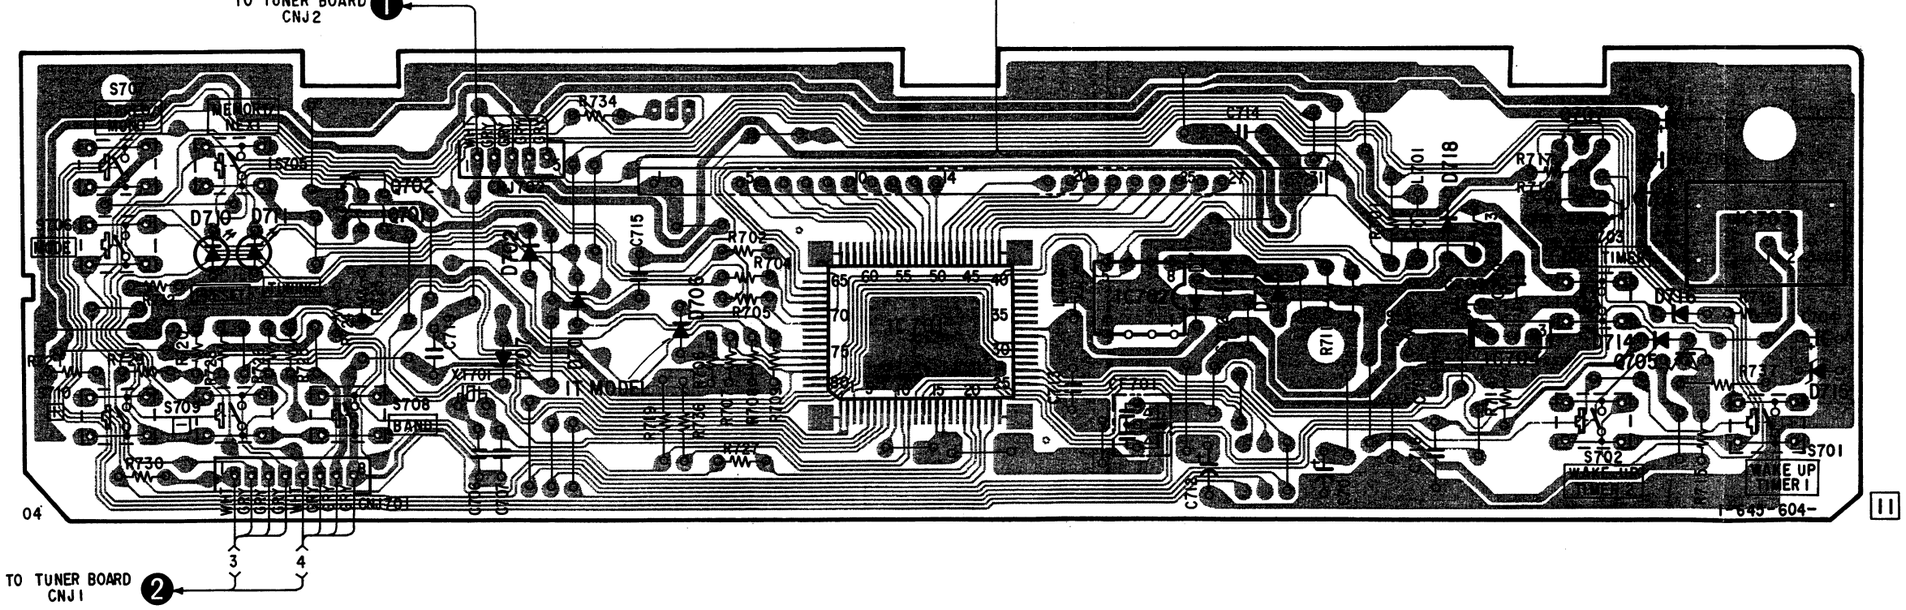

• Semiconductor Location

Ref. No.	Location
D701	D-3
D702	D-3
D706	E-4
D707	E-3
D710	D-2
D711	D-2
D712	D-7
D714	E-8
D715	E-9
D716	E-8
D717	D-6
D718	D-7
IC701	E-5
IC702	D-6
IC703	D-9
IC704	E-8
Q701	D-2
Q702	D-2
Q705	E-8
Q706	D-8
Q707	D-8

Note on Printed Wiring Board:

- ○—— : parts extracted from the component side.
- IT : Italian model

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼W or less unless otherwise specified.
- △ : internal component.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- IT : Italian model

MC-Service

4-6. PIN DESCRIPTION

• IC701 System Controller (TMP87CC70F)

The terminals work to control tuner section (IC21, 81), FL tube display and reading and writing of IC702 (preset data), etc. according to key input and signal from the remote controller.

PIN No.	PIN NAME	I/O	ACTIVE	PIN FUNCTION
1	HOLD	I	↓	HOLD detecting interrupt terminal
2	HOLD RESET	I	↑	HOLD resetting interrupt terminal
3		I		Not in use
4	IF NGOUT	O	H	IF count NG output
5	LED1	O	H	TUNING LED ON
6	LED2	O	H	PRESET LED ON
7	AUB IN	I	L	AUDIO BUS input
8	AUB OUT	O	L	AUDIO BUS output
9	TEST	I	H	Test terminal
10	XT IN	I		Low frequency oscillator connection terminal (32KHz)
11	XT OUT	O		Low frequency oscillator connection terminal (32KHz)
12	RESET	I	L	Reset signal input
13	X IN	I		High frequency oscillator connection terminal (8MHz)
14	X OUT	O		High frequency oscillator connection terminal (8MHz)
15	VSS			GND
16		I		Not in use
17, 18		O		Not in use
19	SCK	O		PLL serial clock output
20	SI	I		PLL serial data input
21	SO	O		PLL serial data output
22				Not in use
23	CE	O	H	PLL chip enable
24				Not in use
25	MAIN SEL	O	L	Main sound selection terminal (Not in use)
26	SUB SEL	O	L	Sub sound selection terminal (Not in use)
27	DUAL IND	I	L	Sound dual signal detection terminal (Not in use)
28				Not in use
29	MUTE OUT	O	L	MUTING output
30	SIGNAL IN	I	L	TUNED input
31	STEREO IN	I	L	STEREO input
32	SIRCS IN	I	L	SIRCS input
33	VDD			+5V
34 - 40		O		Not in use
41 - 49	G0 - G8	O	H	FL tube digit output
50 - 59	S0 - S9	O	H	FL tube segment output
60 - 65		O	H	Not in use
66	VKK			FL tube driving power supply
67 - 71	KI0 - KI4	I	H	Key input
72		I		Not in use
73, 74				Not in use
75 - 78	KO0 - KO3	O	H	Key output
79	SDA	I/O		Data input/output for EEPROM
80	SCL	O		Clock output for EEPROM

4-7. SEMICONDUCTOR LEAD LAYOUTS

GP1U52XB



2SA1175-HFE
2SC2785-HFE

LA1851N

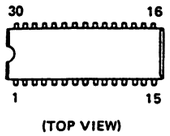

2SC3330-T

LC7218



2SK246-GR3



PST572H



UZ-4.3BSB
1N4148M

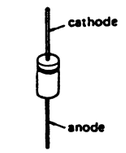

TMP87CC70F

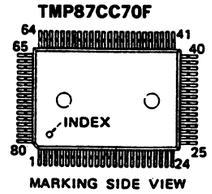

1SS120

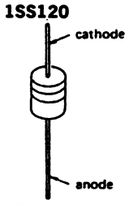

X24C01P

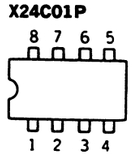

SEL2210S-D

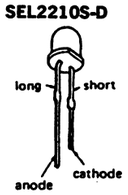

DTA114ES
DTC114ES
2S2603-EF
2SC2669-0Y
2SC3113-AB



SECTION 5
EXPLODED VIEW

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE)... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.

- G : Germany model
- IT : Italian model

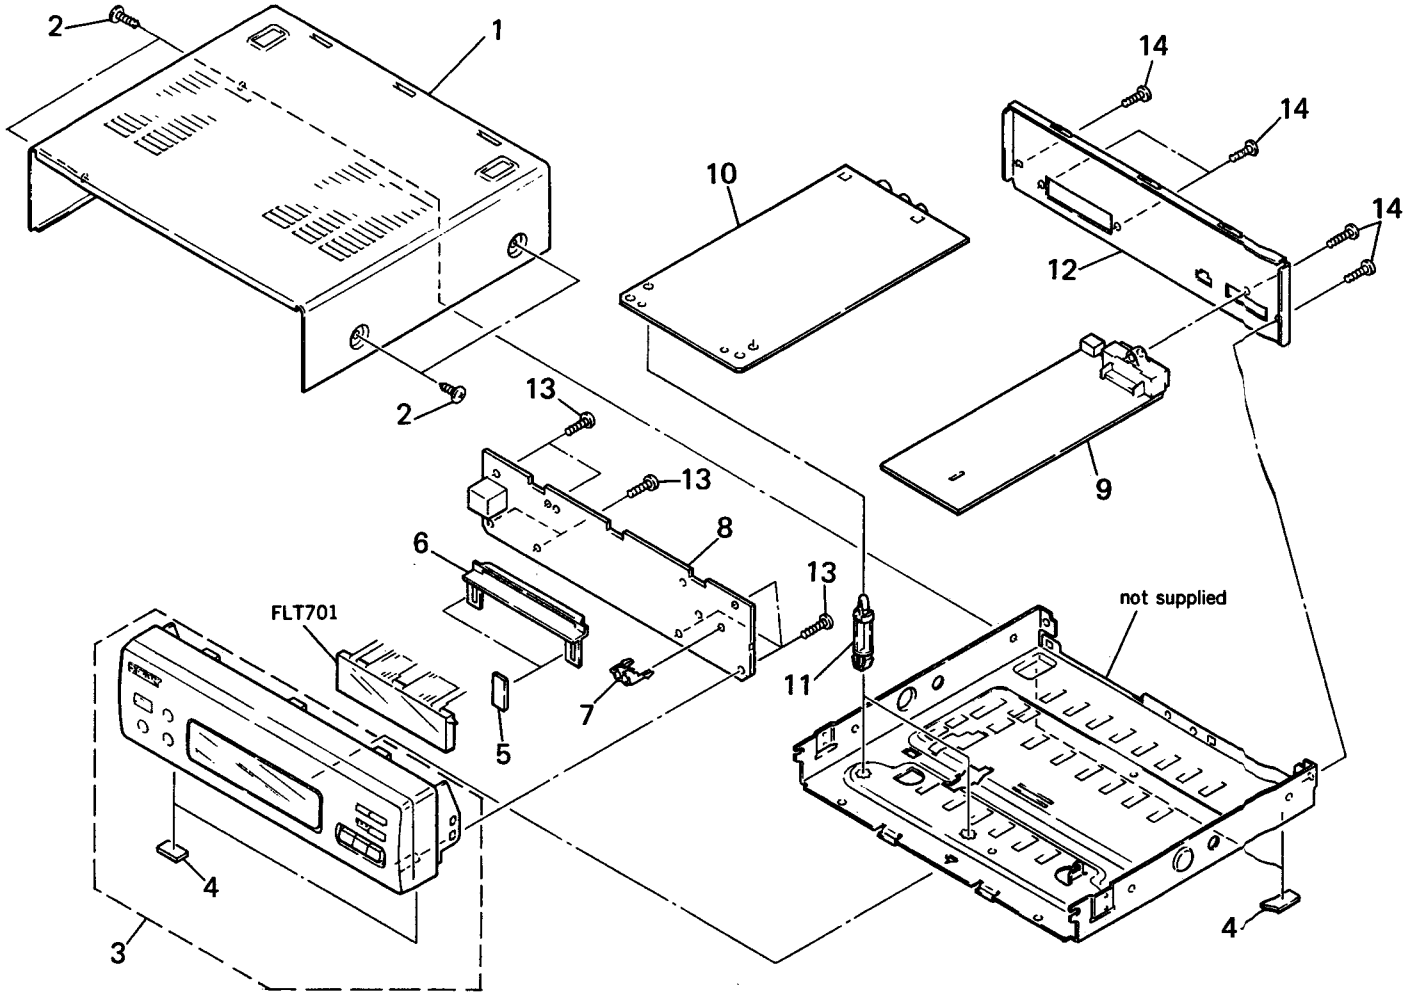

Ref. No.	Part No.	Description	Remark
* 1	4-944-423-61	CASE (K206522)	
2	3-363-099-01	SCREW (CASE 3 TP2)	
3	X-4942-950-1	PANEL ASSY, FRONT (H2750)	
3	X-4942-951-1	PANEL ASSY, FRONT (H3750)	
4	4-930-336-21	FOOT (FELT)	
* 5	4-932-810-11	CUSHION (FL)	
* 6	4-944-441-01	HOLDER (FL TUBE)	
* 7	4-954-788-01	HOLDER (LED)	
* 8	A-4356-144-A	DISPLAY BOARD, COMPLETE (AEP, UK, G)	
* 8	A-4356-146-A	DISPLAY BOARD, COMPLETE (IT)	
* 9	1-645-605-11	CONNECTOR BOARD	
* 10	A-4303-367-A	TUNER BOARD, COMPLETE (TCB007-3UFH) (AEP, UK)	
* 10	A-4303-368-A	TUNER BOARD, COMPLETE (TCB007-3UFH) (G, IT)	
* 11	4-914-008-01	HOLDER, PCB	
* 12	4-953-719-11	PANEL, BACK (H2750:AEP, UK)	
* 12	4-953-719-21	PANEL, BACK (H2750:IT)	
* 12	4-953-719-31	PANEL, BACK (H2750:G)	
* 12	4-953-719-51	PANEL, BACK (H3750:AEP, UK)	
* 12	4-953-719-61	PANEL, BACK (H3750:IT)	
13	4-951-620-01	SCREW (2.6X8), +BVTP	
14	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
FLT701	1-519-709-11	INDICATOR TUBE, FLUORESCENT	

TUNER

SECTION 6
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

- G : Germany model
- IT : Italian model

Ref.No.	Part No.	Description			Remark
	A-4303-367-A	TUNER BOARD, COMPLETE (TCB007-3HJFH)			(AEP, UK)
	A-4303-368-A	TUNER BOARD, COMPLETE (TCB007-3IJFH)			(G, IT)
		**********			
*	4-924-988-11	PLATE (ST), GROUND			
		< CAPACITOR >			
C1	1-162-294-11	CERAMIC CHIP	0.001uF	20% 25V	
C2	1-124-119-00	ELECT	330uF	20% 16V	
C3	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C4	1-162-294-31	CERAMIC CHIP	0.001uF	20% 25V	
C5	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C6	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C7	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	(G, IT)
C8	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	(G, IT)
C9	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C11	1-101-005-00	CERAMIC	0.022uF	50V	(G, IT)
C21	1-101-006-00	CERAMIC	0.047uF	50V	
C22	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C23	1-124-477-11	ELECT	47uF	20% 25V	
C24	1-123-382-00	ELECT	3.3uF	20% 100V	
C25	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C26	1-163-019-00	CERAMIC CHIP	0.0068uF	20% 12V	
C27	1-162-516-11	CERAMIC CHIP	100pF	10% 50V	(AEP, UK)
C27	1-163-007-11	CERAMIC CHIP	680pF	20% 50V	(G, IT)
C28	1-124-903-11	ELECT	1.0uF	20% 50V	
C29	1-162-516-11	CERAMIC CHIP	100pF	10% 50V	(G, IT)
C30	1-124-903-11	ELECT	1.0uF	20% 50V	
C31	1-124-902-00	ELECT	0.47uF	20% 50V	
C32	1-124-463-00	ELECT	0.1uF	20% 50V	
C33	1-130-481-00	MYLAR	0.0068uF	5% 50V	
C34	1-123-382-00	ELECT	3.3uF	20% 100V	
C35	1-130-481-00	MYLAR	0.0068uF	5% 50V	
C36	1-123-382-00	ELECT	3.3uF	20% 100V	
C37	1-124-907-11	ELECT	10uF	20% 50V	
C39	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C40	1-124-463-00	ELECT	0.1uF	20% 50V	
C41	1-124-907-11	ELECT	10uF	20% 50V	
C42	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C43	1-126-176-11	ELECT	220uF	20% 10V	
C44	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C45	1-123-382-00	ELECT	3.3uF	20% 100V	
C46	1-161-375-00	CERAMIC CHIP	0.0022uF	20% 25V	
C47	1-163-170-00	CERAMIC CHIP	0.0047uF	20% 25V	(G, IT)
C48	1-123-382-00	ELECT	3.3uF	20% 100V	
C49	1-161-375-00	CERAMIC CHIP	0.0022uF	20% 25V	
C50	1-163-170-00	CERAMIC CHIP	0.0047uF	20% 25V	(G, IT)
C51	1-126-934-11	ELECT	220uF	20% 25V	
C53	1-163-105-00	CERAMIC CHIP	33pF	5% 50V	
C54	1-101-005-00	CERAMIC	0.022uF	50V	(G, IT)
C61	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C62	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C63	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C64	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C65	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C66	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C67	1-102-120-00	CERAMIC	0.0018uF	10% 50V	
C68	1-163-111-11	CERAMIC CHIP	0.0015uF	20% 25V	
C69	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C70	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C71	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C72	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C73	1-163-063-00	CERAMIC MELF	0.022uF	25V	
C81	1-102-961-00	CERAMIC	27pF	5% 50V	
C82	1-102-961-00	CERAMIC	27pF	5% 50V	
C83	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C84	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C85	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C86	1-124-477-11	ELECT	47uF	20% 25V	
C87	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C88	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C89	1-124-443-00	ELECT	100uF	20% 10V	
C101	1-124-925-11	ELECT	2.2uF	20% 100V	
C102	1-124-463-00	ELECT	0.1uF	20% 50V	
C103	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C104	1-163-059-00	CERAMIC MELF	0.01uF	20% 16V	
C105	1-124-477-11	ELECT	47uF	20% 25V	
C106	1-136-173-00	FILM	0.47uF	5% 50V	

Ref. No.	Part No.	Description				Remark
C107	1-124-463-00	ELECT	0.1uF	20%	50V	
C108	1-163-063-00	CERAMIC MELF	0.022uF		25V	(G, IT)
C109	1-162-211-31	CERAMIC	33pF	5%	50V	
C121	1-161-379-00	CERAMIC	0.01uF	30%	16V	(G, IT)
		< FILTER >				
CF1	1-567-389-11	FILTER, CERAMIC				
CF2	1-567-389-11	FILTER, CERAMIC				
CF3	1-567-389-11	FILTER, CERAMIC (G, IT)				
		< OSCILLATOR >				
CF21	1-577-075-11	OSCILLATOR, CERAMIC (19KHz)				
		< IF TRANSFORMER >				
CFT21	1-404-853-11	TRANSFORMER, IF (CERAMIC FILTER)				
		< CONECTOR >				
* CNJ1	1-564-342-11	SOCKET, CONNECTOR 8P				
* CNJ2	1-564-339-00	PIN, CONNECTOR 5P				
* CNJ3	1-564-341-11	PIN, CONNECTOR 7P				
* CNJ4	1-564-337-00	PIN, CONNECTOR 3P				
		< DIODE >				
D61	8-719-912-20	DIODE 1SS120				
		< FM FRONT END >				
FE1	1-463-857-11	FRONT END, FM (G, IT)				
FE1	1-463-862-21	FRONT END, FM (AEP, UK)				
		< ENCAPSULATED COMPONENT >				
FE61	1-236-462-11	ENCAPSULATED COMPONENT (MW RF)				
FE62	1-236-463-11	ENCAPSULATED COMPONENT (LW RF)				
		< IC >				
IC21	8-759-821-45	IC LA1851N				
IC81	8-759-820-91	IC LC7218				
		< INDUCTOR >				
L1	1-410-645-31	MICRO INDUCTOR 100uH				
L2	1-410-645-31	MICRO INDUCTOR 100uH (G, IT)				
L21	1-407-500-00	MICRO INDUCTOR 4.7mH				
L61	1-410-525-11	MICRO INDUCTOR 220uH				
		< LOW PASS FILTER >				
LPF21	1-235-164-00	FILTER, LOW PASS				
LPF22	1-235-164-00	FILTER, LOW PASS				

Ref. No.	Part No.	Description				Remark
		< TRANSISTOR >				
Q1	8-729-230-99	TRANSISTOR	2SC2669-OY			
Q2	8-729-230-99	TRANSISTOR	2SC2669-OY			
Q3	8-729-230-99	TRANSISTOR	2SC2669-OY			(G, IT)
Q4	8-729-230-99	TRANSISTOR	2SC2669-OY			(G, IT)
Q21	8-729-119-78	TRANSISTOR	2SC2785-HFE			
Q22	8-729-119-78	TRANSISTOR	2SC2785-HFE			
Q23	8-729-900-61	TRANSISTOR	DTA114ES			
Q24	8-729-900-80	TRANSISTOR	DTC114ES			
Q26	8-729-900-80	TRANSISTOR	DTC114ES			
Q61	8-729-900-80	TRANSISTOR	DTC114ES			
Q62	8-729-900-80	TRANSISTOR	DTC114ES			
Q63	8-729-900-80	TRANSISTOR	DTC114ES			
Q64	8-729-820-24	TRANSISTOR	2SC3330-T			
Q65	8-729-119-76	TRANSISTOR	2SA1175-HFE			
Q66	8-729-900-80	TRANSISTOR	DTC114ES			
Q81	8-729-900-61	TRANSISTOR	DTA114ES			
Q82	8-729-900-80	TRANSISTOR	DTC114ES			
Q83	8-729-202-67	TRANSISTOR	2SK246-GR3			
Q84	8-729-230-93	TRANSISTOR	2SC3113-AB			
Q85	8-729-202-67	TRANSISTOR	2SK246-GR3			
Q86	8-729-230-93	TRANSISTOR	2SC3113-AB			
		< RESISTOR >				
⚠R1	1-249-397-11	CARBON (SMALL)	22	5%	1/4W	F (G, IT)
⚠R1	1-249-401-11	CARBON (SMALL)	47	5%	1/4W	F (AEP, UK)
R3	1-249-329-11	CARBON MELF	330	5%	1/8W	
R4	1-249-329-11	CARBON MELF	330	5%	1/8W	
R5	1-249-329-11	CARBON MELF	330	5%	1/8W	
R6	1-249-350-11	CARBON MELF	18K	5%	1/8W	
R7	1-249-329-11	CARBON MELF	330	5%	1/8W	
R8	1-249-332-11	CARBON MELF	560	5%	1/8W	
R9	1-249-352-11	CARBON MELF	27K	5%	1/8W	
R10	1-249-329-11	CARBON MELF	330	5%	1/8W	(G, IT)
R11	1-249-350-11	CARBON MELF	18K	5%	1/8W	(G, IT)
R12	1-249-329-11	CARBON MELF	330	5%	1/8W	(G, IT)
R13	1-249-334-11	CARBON MELF	820	5%	1/8W	(G, IT)
R14	1-249-352-11	CARBON MELF	27K	5%	1/8W	(G, IT)
R15	1-249-374-11	CARBON MELF	10K	5%	1/8W	(G, IT)
R16	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	(G, IT)
⚠R21	1-249-404-00	CARBON (SMALL)	82	5%	1/4W	F
R22	1-249-433-11	CARBON (SMALL)	22K	5%	1/4W	
R23	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R24	1-249-353-11	CARBON MELF	33K	5%	1/8W	
R25	1-249-346-11	CARBON MELF	8.2K	5%	1/8W	
R27	1-249-432-11	CARBON (SMALL)	18K	5%	1/4W	
R28	1-249-423-11	CARBON (SMALL)	3.3K	5%	1/4W	
R29	1-249-347-11	CARBON MELF	10K	5%	1/8W	

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.

TUNER | DISPLAY | CONNECTOR

Ref. No.	Part No.	Description				Remark
R31	1-249-331-11	CARBON MELF	470	5%	1/8W	
R32	1-249-347-11	CARBON MELF	10K	5%	1/8W	
R33	1-249-347-11	CARBON MELF	10K	5%	1/8W	
R34	1-249-437-11	CARBON (SMALL)	47K	5%	1/4W	
R35	1-249-355-11	CARBON MELF	47K	5%	1/8W	
R37	1-249-359-11	CARBON MELF	100K	5%	1/8W	
R38	1-249-363-11	CARBON MELF	220K	5%	1/8W	
R39	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R40	1-249-338-11	CARBON MELF	1.8K	5%	1/8W	
R41	1-249-344-11	CARBON MELF	5.6K	5%	1/8W	
R42	1-249-359-11	CARBON MELF	100K	5%	1/8W	
R43	1-249-363-11	CARBON MELF	220K	5%	1/8W	
R44	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R45	1-249-338-11	CARBON MELF	1.8K	5%	1/8W	
R46	1-249-344-11	CARBON MELF	5.6K	5%	1/8W	
⚠R47	1-249-409-11	CARBON (SMALL)	220	5%	1/4W	F
R48	1-249-359-11	CARBON MELF	100K	5%	1/8W	
R49	1-249-359-11	CARBON MELF	100K	5%	1/8W	
R61	1-249-359-11	CARBON MELF	100K	5%	1/8W	
R62	1-249-355-11	CARBON MELF	47K	5%	1/8W	
R64	1-249-351-11	CARBON MELF	22K	5%	1/8W	
R65	1-249-355-11	CARBON MELF	47K	5%	1/8W	
R66	1-215-493-00	CARBON MELF	1M	5%	1/5W	
R67	1-249-359-11	CARBON MELF	100K	5%	1/8W	
R68	1-249-352-11	CARBON MELF	27K	5%	1/8W	
R69	1-249-351-11	CARBON MELF	22K	5%	1/8W	
R70	1-249-331-11	CARBON MELF	470	5%	1/8W	
R71	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R72	1-249-351-11	CARBON MELF	22K	5%	1/8W	
R73	1-249-347-11	CARBON MELF	10K	5%	1/8W	
R74	1-249-347-11	CARBON MELF	10K	5%	1/8W	
R75	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R81	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R82	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R83	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R84	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R85	1-249-347-11	CARBON MELF	10K	5%	1/8W	
R86	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R87	1-249-347-11	CARBON MELF	10K	5%	1/8W	
R88	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R89	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R90	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R91	1-249-335-11	CARBON MELF	1K	5%	1/8W	
⚠R92	1-249-401-11	CARBON (SMALL)	47	5%	1/4W	F
R101	1-249-341-11	CARBON MELF	3.3K	5%	1/8W	
R102	1-249-332-11	CARBON MELF	560	5%	1/8W	
R103	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R104	1-249-328-11	CARBON MELF	270	5%	1/8W	
R105	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R106	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R107	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R108	1-249-323-11	CARBON MELF	100	5%	1/8W	
R109	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
⚠R110	1-249-405-11	CARBON (SMALL)	100	5%	1/4W	F
R111	1-249-341-11	CARBON MELF	3.3K	5%	1/8W	
R112	1-249-332-11	CARBON MELF	560	5%	1/8W	
R113	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R114	1-249-328-11	CARBON MELF	270	5%	1/8W	
R115	1-249-351-11	CARBON MELF	22K	5%	1/8W	
R116	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R117	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R118	1-249-323-11	CARBON MELF	100	5%	1/8W	
		< VARIABLE RESISTOR >				
RV21	1-238-598-11	RES, ADJ, CARBON 2.2K (AEP, UK)				
RV21	1-238-600-11	RES, ADJ, CARBON 10K (G, IT)				
RV22	1-238-601-11	RES, ADJ, CARBON 22K				
RV24	1-238-601-11	RES, ADJ, CARBON 22K (AEP, UK)				
RV24	1-238-602-11	RES, ADJ, CARBON 47K (G, IT)				
		< TRANSFORMER >				
T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR				
T23	1-236-465-11	ENCAPSULATED COMPONENT (G, IT)				
		< TERMINAL >				
* TM1	1-537-138-31	TERMINAL BOARD (ANTENNA)				
		< CONNECTOR PIN >				
* TP1	1-560-060-00	PIN, CONNECTOR 2P				
		< CRYSTAL VIBRATOR >				
XT81	1-577-126-11	VIBRATOR, CRYSTAL (7.2MHz)				
**********						
*	A-4356-144-A	DISPLAY BOARD, COMPLETE (AEP, UK, G)				
*	A-4356-146-A	DISPLAY BOARD, COMPLETE (IT)				
		**********				
*	1-645-605-11	CONNECTOR BOARD				
		**********				
*	4-932-810-11	CUSHION (FL)				
*	4-944-441-01	HOLDER (FL TUBE)				
*	4-954-788-01	HOLDER (LED)				
		< CAPACITOR >				
C601	1-124-471-00	ELECT	1000uF	20%	6.3V	
C609	1-126-103-11	ELECT	470uF	20%	16V	
C610	1-124-907-11	ELECT	10uF	20%	50V	
C701	1-126-177-11	ELECT	100uF	20%	10V	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

DISPLAY **CONNECTOR**

Ref. No.	Part No.	Description		Remark
C702	1-164-159-11	CERAMIC	0.1uF	50V
C703	1-126-157-11	ELECT	10uF 20%	16V
C704	1-124-463-00	ELECT	0.1uF 20%	50V
C705	1-161-494-00	CERAMIC	0.022uF	25V
C706	1-162-198-31	CERAMIC	8.2PF 10%	50V
C707	1-162-198-31	CERAMIC	8.2PF 10%	50V
C710	1-164-159-11	CERAMIC	0.1uF	50V
C711	1-126-157-11	ELECT	10uF 20%	16V
C712	1-126-177-11	ELECT	100uF 20%	10V
C713	1-136-173-00	FILM	0.47uF 5%	50V
C714	1-136-173-00	FILM	0.47uF 5%	50V
C715	1-136-173-00	FILM	0.47uF 5%	50V
C716	1-161-494-00	CERAMIC	0.022uF	25V
C719	1-162-306-11	CERAMIC	0.01uF 20%	16V
C720	1-162-306-11	CERAMIC	0.01uF 20%	16V
		< VIBRATOR >		
CF701	1-579-125-11	VIBRATOR, CERAMIC (8MHz)		
		< CONNECTOR >		
* CNJ601	1-566-859-11	SOCKET, CONNECTOR 15P (SYSTEM CONTROL1)		
* CNJ602	1-564-341-11	PIN, CONNECTOR 7P		
* CNJ603	1-564-337-00	PIN, CONNECTOR 3P		
* CNJ604	1-565-561-11	PIN, CONNECTOR 3P (AU BUS)		
* CNJ701	1-564-342-11	PIN, CONNECTOR 8P		
* CNJ702	1-564-339-00	PIN, CONNECTOR 5P		
		< DIODE >		
D701	8-719-987-63	DIODE	1N4148M	
D702	8-719-987-63	DIODE	1N4148M	
D706	8-719-987-63	DIODE	1N4148M (IT)	
D707	8-719-987-63	DIODE	1N4148M	
D710	8-719-301-39	LED	SEL2210S-D (PRESET)	
D711	8-719-301-39	LED	SEL2210S-D (TUNING)	
D712	8-719-987-63	DIODE	1N4148M	
D714	8-719-987-63	DIODE	1N4148M	
D715	8-719-010-29	DIODE	UZ-4.3BSB	
D716	8-719-987-63	DIODE	1N4148M	
D717	8-719-987-63	DIODE	1N4148M	
D718	8-719-987-63	DIODE	1N4148M	
		< FLUORESCENT INDICATOR >		
FLT701	1-519-709-11	INDICATOR TUBE, FLUORESCENT		
		< IC >		
IC701	8-759-059-85	IC	TMP87CC70F	
IC702	8-759-500-31	IC	X24C01P	
IC703	8-749-920-83	IC	GP1U52XB	

Ref. No.	Part No.	Description		Remark
IC704	8-759-515-58	IC	PST572H	
		< COIL >		
L701	1-410-521-11	INDUCTOR	100uH	
L702	1-410-521-11	INDUCTOR	100uH	
		< TRANSISTOR >		
Q701	8-729-900-80	TRANSISTOR	DTC114ES	
Q702	8-729-900-80	TRANSISTOR	DTC114ES	
Q705	8-729-119-76	TRANSISTOR	2SA1175-HFE	
Q706	8-729-900-80	TRANSISTOR	DTC114ES	
Q707	8-729-620-05	TRANSISTOR	2SC2603-EF	
		< RESISTOR >		
R601	1-249-393-11	CARBON	10 5%	1/4W
R701	1-249-417-11	CARBON	1K 5%	1/4W
R702	1-249-417-11	CARBON	1K 5%	1/4W
R703	1-249-417-11	CARBON	1K 5%	1/4W
R704	1-249-417-11	CARBON	1K 5%	1/4W
R705	1-249-417-11	CARBON	1K 5%	1/4W
R706	1-249-423-11	CARBON	3.3K 5%	1/4W
R707	1-249-423-11	CARBON	3.3K 5%	1/4W
R708	1-249-421-11	CARBON	2.2K 5%	1/4W
R709	1-249-423-11	CARBON	3.3K 5%	1/4W
R710	1-249-429-11	CARBON	10K 5%	1/4W
R711	1-249-429-11	CARBON	10K 5%	1/4W
R712	1-249-411-11	CARBON	330 5%	1/4W
R714	1-249-429-11	CARBON	10K 5%	1/4W
R715	1-249-417-11	CARBON	1K 5%	1/4W
R716	1-249-429-11	CARBON	10K 5%	1/4W
R717	1-249-425-11	CARBON	4.7K 5%	1/4W
R718	1-249-429-11	CARBON	10K 5%	1/4W
R719	1-249-429-11	CARBON	10K 5%	1/4W
R720	1-249-429-11	CARBON	10K 5%	1/4W
R721	1-249-429-11	CARBON	10K 5%	1/4W
R722	1-249-429-11	CARBON	10K 5%	1/4W
R723	1-249-423-11	CARBON	3.3K 5%	1/4W
R724	1-249-429-11	CARBON	10K 5%	1/4W
R725	1-249-417-11	CARBON	1K 5%	1/4W
R726	1-249-417-11	CARBON	1K 5%	1/4W
R727	1-249-417-11	CARBON	1K 5%	1/4W
R728	1-249-417-11	CARBON	1K 5%	1/4W
R729	1-249-417-11	CARBON	1K 5%	1/4W
R730	1-249-417-11	CARBON	1K 5%	1/4W
R734	1-249-417-11	CARBON	1K 5%	1/4W
R736	1-249-429-11	CARBON	10K 5%	1/4W
R737	1-249-409-11	CARBON	220 5%	1/4W

DISPLAY CONNECTOR

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
S701	1-554-303-21	SWITCH, TACTILE (WAKE UP TIMER 1)	
S702	1-554-303-21	SWITCH, TACTILE (WAKE UP TIMER 2)	
S703	1-554-303-21	SWITCH, TACTILE (REC TIMER)	
S705	1-554-303-21	SWITCH, TACTILE (MEMORY/NEXT)	
S706	1-554-303-21	SWITCH, TACTILE (MODE)	
S707	1-554-303-21	SWITCH, TACTILE (STEREO/MONO)	
S708	1-554-303-21	SWITCH, TACTILE (BAND)	
S709	1-554-303-21	SWITCH, TACTILE (-)	
S710	1-554-303-21	SWITCH, TACTILE (+)	
		< VIBRATOR >	
XT701	1-527-997-21	VIBRATOR, CRYSTAL (32KHz)	

****

9-957-393-31
Printed by: Schaltungsdienst Lange, Berlin (GERMANY)

Sony Corporation
Audio Group

English
92H0462-1

© 1992. 8

Published by Customer Relations and Service Group

SONY-06197

SS-H2750

SERVICE MANUAL

AEP Model
UK Model

SPECIFICATIONS

Speaker system	3-way
Speaker units	Woofer : 14 cm, cone type
	Mid-range : 6 cm, cone type
	Tweeter: 2 cm, dome type
Enclosure type	Bass reflex
Nominal impedance	6 Ω
Power handling capacity	Music 70W
Sensitivity	89 dB (1W, 1 m), 5W (96 dB, 1 m)
Frequency range	55Hz to 20.000Hz
Dimensions	Approx. 182x362x225 mm (w/h/d)
Weight	Approx. 4,1kg per speaker, net
	Approx. 9,0kg in shipping carton

Design and specifications subject to change without notice.

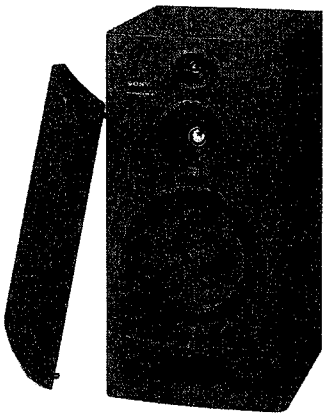

This set is the speaker system in MHC-2750.

1. DISASSEMBLY

1-1. FRONT PANEL ASSY

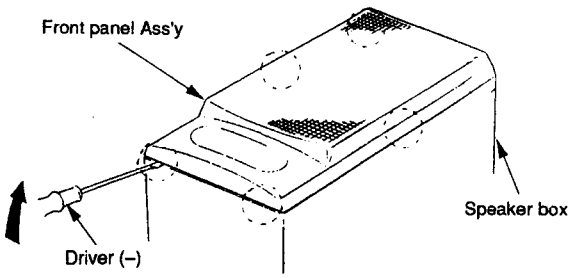

1-2. TERMINAL BOARD

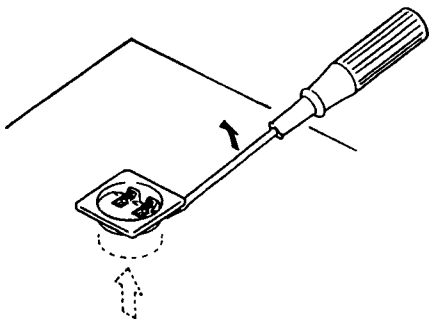

- Hit the terminal with the back of a screwdriver from the inside, and tap it out.
- Insert a slotted screwdriver at the rim of the terminal and remove as shown in the figure.

2. WIRING DIAGRAM

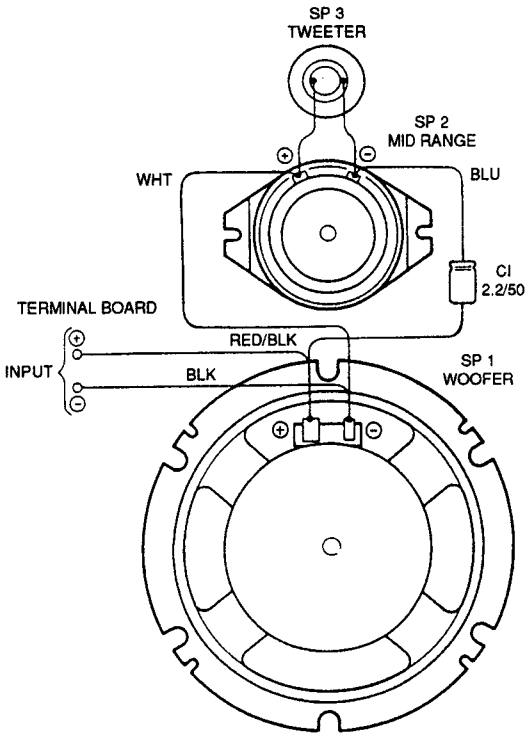

SPEAKER SYSTEM

SONY®

MC-Service

3. EXPLODED VIEW AND PARTS LIST

NOTE:

- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for rotine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
  G : Germany
  IT : Italian

– L - CH –

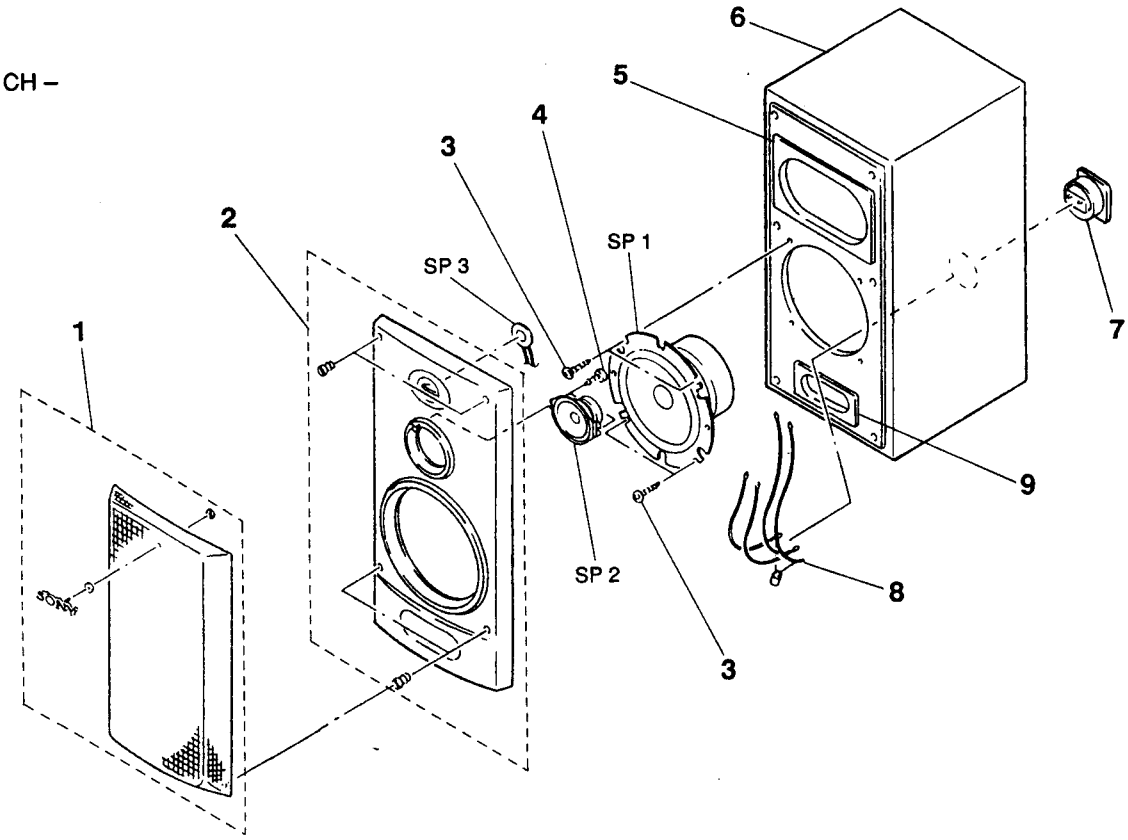

Ref. No.	Part No.	Description	Remark
1	T-8150-566-A	GRILLE FRAME ASSY (UK)	
1	T-8150-554-A	GRILLE FRAME ASSY (AEP, G, IT)	
2	T-8150-552-A	FRONT PANEL (L) ASSY	
2	T-8150-553-A	FRONT PANEL (R) ASSY	
3	T-8151-871-1	TAPPING SCREW +P 4,0X12	(UK)
3	T-8150-573-1	TAPPING SCREW +P 4,0X15	(AEP, G, IT)
4	T-8151-870-1	TAPPING SCREW +P 3,5X9,5	(UK)
4	T-8151-863-1	TAPPING SCREW +P 3,5X8	(AEP, G, IT)
5	T-8151-845-1	GASKET FOR TWEETER	
6	T-8151-836-1	SPEAKER BOX (UK)	
6	T-8151-838-1	SPEAKER BOX (AEP, G, IT)	
7	T-8151-042-1	TERMINAL BOARD	
8	T-8150-543-A	WIRE KIT ASSY (UK)	
8	T-8150-546-A	WIRE KIT ASSY (AEP, G, IT)	
9	T-8151-846-1	GASKET FOR DUCT	

Ref. No.	Part No.	Description	Remark
SP1	1-544-644-11	SPEAKER UNIT (13 cm CONE)	
SP2	1-544-650-21	SPEAKER UNIT (6 cm CONE)	
SP3	1-544-293-31	SPEAKER UNIT (2 cm PIEZO)	
		< ACCESSORIES & PACKING MATERIALS >	
	T-8151-827-2	INSTRUCTION MANUAL (UK)	
	T-8151-829-2	INSTRUCTION MANUAL (AEP, G, IT)	
	T-8110-521-1	SPEAKER CORD	
*	T-8151-912-1	CARTON (UK)	
*	T-8151-875-1	CARTON (AEP, G, IT)	
*	T-8151-803-1	CUSHION (A)	
*	T-8151-851-1	CUSHION (B)	

9-957-487-11

Sony Corporation
Audio Group

English
92J0960-1
© 1992. 10
Published by Customer Relations and Service Group

Printed by: Schaltungsdienst Lange, Berlin (GERMANY)

V13752

CDP-H3750

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Tourist Model

This set is the CD player section in FH-E705C, MHC-2750/3750.

Model Name Using Similar Mechanism	NEW
CD Mechanism Type	CDM23-5BD3
Optical Pick-Up Block Type	BU-5BD3

SPECIFICATIONS

System	Compact disc digital audio system
Laser	Semiconductor laser (λ = 780 nm) Emission duration: continuous
Laser output	Max. 44.6 μW* * This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.
Signal to noise ratio	More than 90 dB
Dynamic range	More than 90 dB
Harmonic distortion	Less than 0.05% (at 1 kHz)
Channel separation	More than 90 dB
Output level	1.6 V (at 50 kilohms)
Load impedance	More than 10 kilohms

Design and specifications subject to change without notice.

For the United Kingdom and European countries.

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the rear exterior.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

MICROFILM

COMPACT DISC PLAYER

SONY®

MC-Service

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

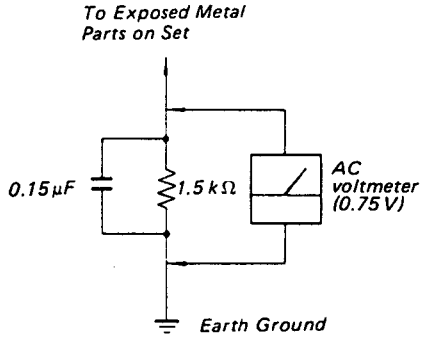

Fig. A. Using an AC voltmeter to check AC leakage.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential diference generated by the charged electrostatic load, etc. on clothing and the human body.
During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30cm away from the objective lens.

LASER DIODE AND FOCUS SERCH OPERATION CHECK

1. Make POWER switch on with no disc inserted and disc table closed.
2. Confirm that the following operation is performed while observing the objective lens.

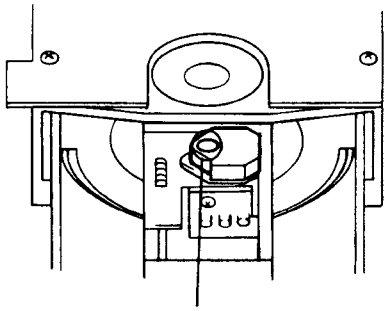

- Confirm that laser beam is spread.
- Up and down motion of the objective lens. (3 times)

TABLE OF CONTENTS

Section *Title* *Page*

1. GENERAL
1-1. Parts Identification 3

2. DISASSEMBLY
2-1. Remove the Main Block 4
2-2. Exchange of Stocker Assy 4
2-3. Exchange of Rotary Encoder 5

3. ELECTRICAL BLOCK CHECKING 6

4. DIAGRAMS
4-1. Semiconductor Lead Layouts 8
4-2. Circuit Boards Location 9
4-3. Printed Wiring Boards 10
4-4. Schematic Diagram 13

5. EXPLODED VIEWS
5-1. Cabinet Section 19
5-2. CD Mechanism Section (1) 20
5-3. CD Mechanism Section (2) 21
5-4. Optical Pick-Up Section 22

6. ELECTRICAL PARTS LIST 23

SECTION 1
GENERAL

This section is extracted from instruction manual.

1-1. PARTS IDENTIFICATION

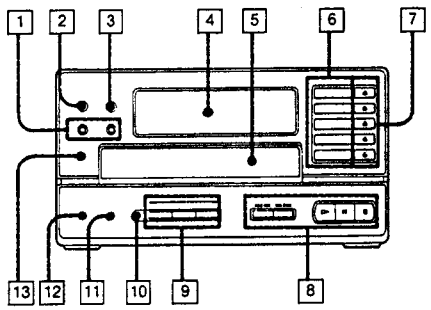

1 CHARACTER ◁/▷ buttons (74)
2 MEMO INPUT button (74)
3 CURSOR button (74)
4 Display window
5 Disc tray door
6 DISC 1 — 5 selectors and disc tray indicators (28) (34)
7 OPEN/CLOSE ⏏ buttons (28)
8 CD operation buttons
■: Stop button
❚❚: Pause button
▷: Play button
⏮◀◀ ▶▶⏭: Manual search (when kept depressed)/AMS* (when pressed) buttons
9 PLAY MODE buttons
PROGRAM button (44)
SHUFFLE button (40)
CONTINUE button (30)
10 REPEAT button (42)
11 TIME/MEMO button (32) (76)
12 SOUND FIELD FILE button (78)
13 ERASE button (76) (78)

MC-Service

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. REMOVE THE MAIN BLOCK

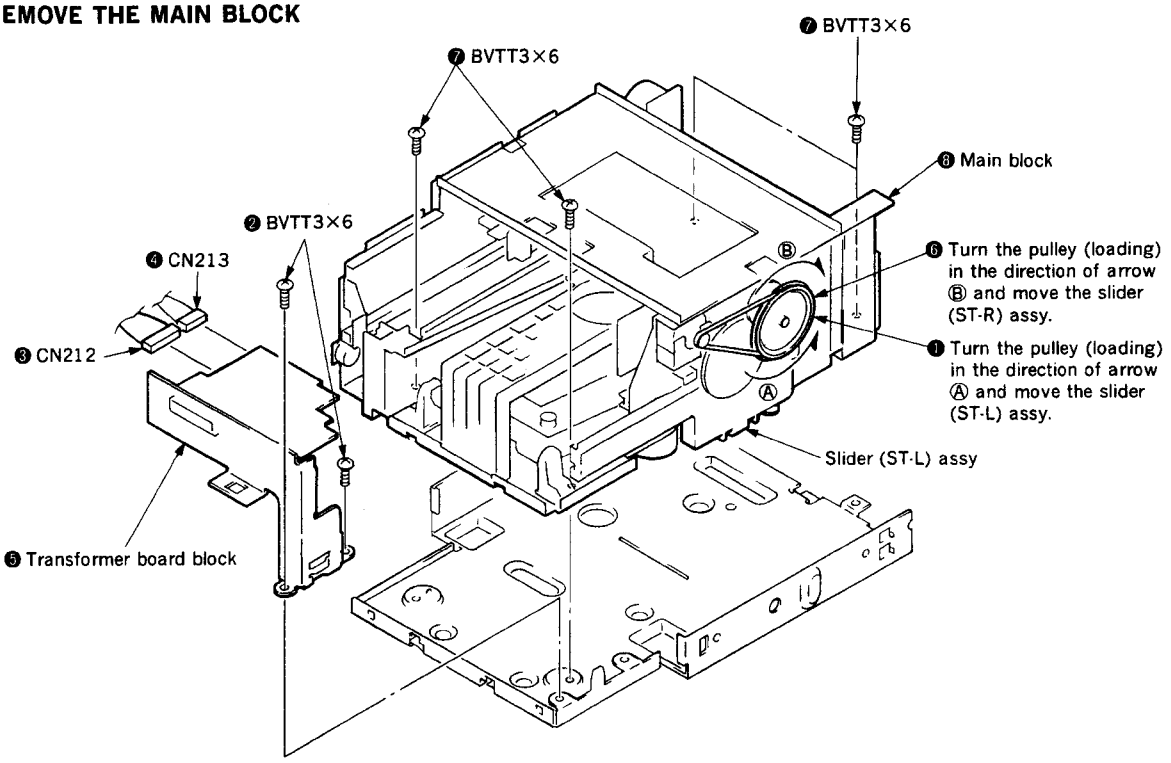
❼ BVTT3×6
❼ BVTT3×6
❽ Main block
❷ BVTT3×6
❹ CN213
❸ CN212
❻ Turn the pulley (loading) in the direction of arrow Ⓑ and move the slider (ST-R) assy.
❶ Turn the pulley (loading) in the direction of arrow Ⓐ and move the slider (ST-L) assy.
Slider (ST-L) assy
❺ Transformer board block

2-2. EXCHANGE OF STOCKER ASSY

How to Attachment
❶ Turn the pulley (loading) set the chassis hole position to slider (ST-L) assy. (See Fig. A)
❷ Turn the pulley (loading) ⓐ set the position of illustration for slider (TB).
❸ Attach the stocker assy.

Note) Sure attach to ditch of chassis side for shaft or claw of stocker assy.

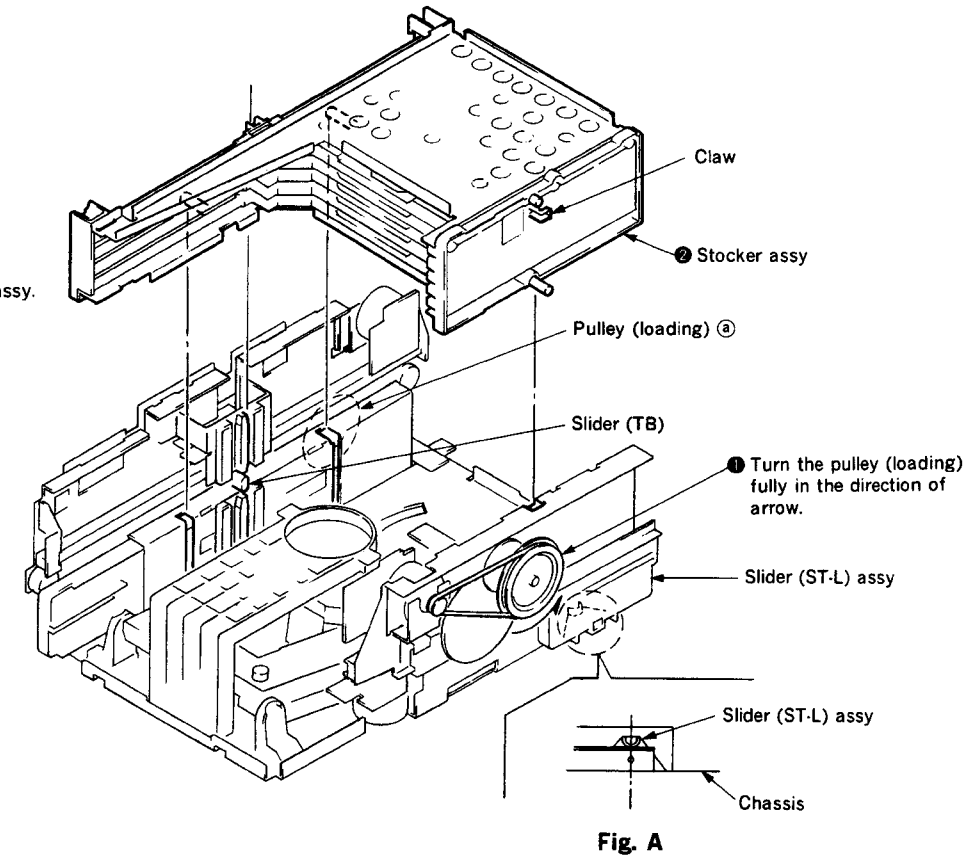

Fig. A

2-3. EXCHANGE OF ROTARY ENCODER

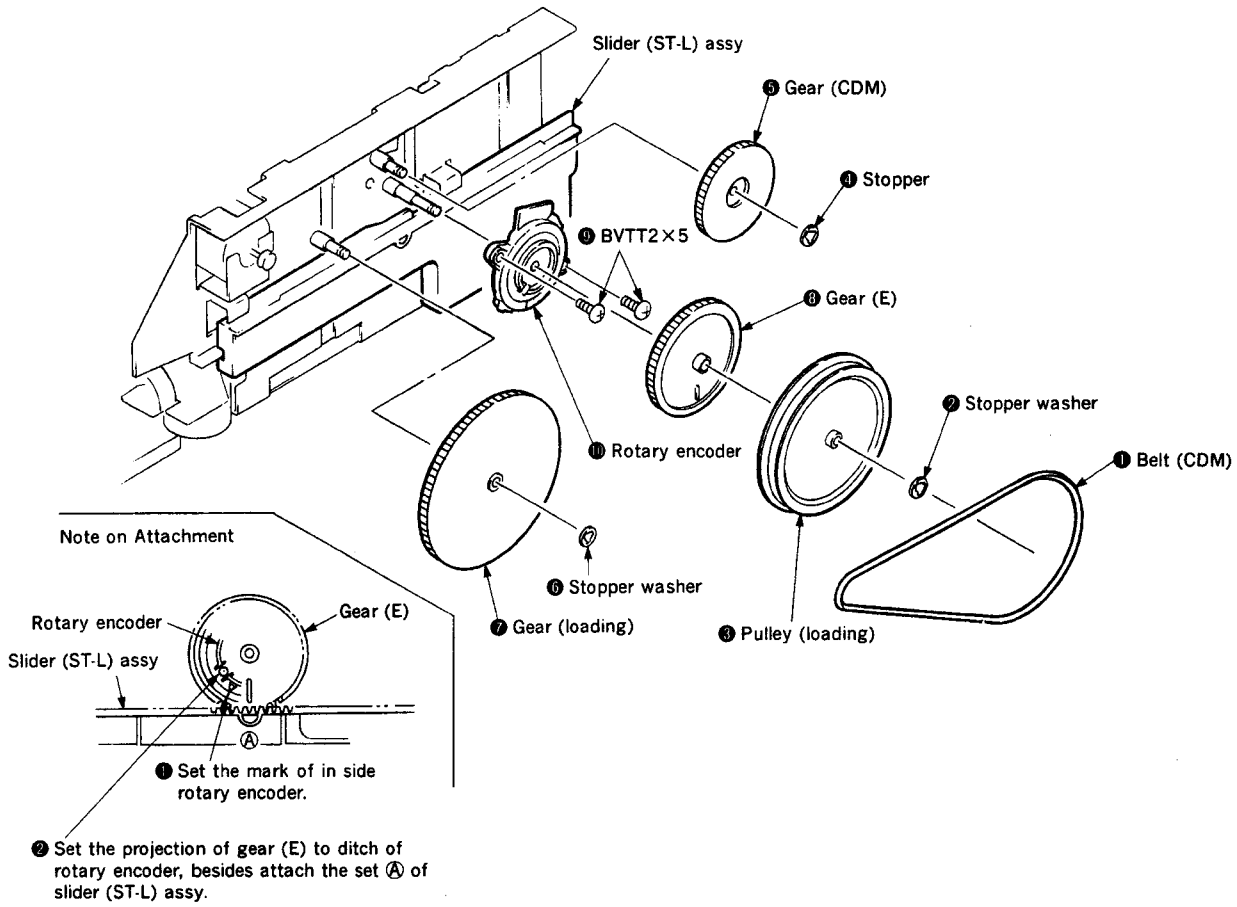
Slider (ST-L) assy
❺ Gear (CDM)
❹ Stopper
❾ BVTT2×5
❽ Gear (E)
❷ Stopper washer
❿ Rotary encoder
❶ Belt (CDM)
❻ Stopper washer
❼ Gear (loading)
❸ Pulley (loading)
Note on Attachment
Rotary encoder
Gear (E)
Slider (ST-L) assy
Ⓐ
❶ Set the mark of in side rotary encoder.
❷ Set the projection of gear (E) to ditch of rotary encoder, besides attach the set Ⓐ of slider (ST-L) assy.

SECTION 3
ELECTRICAL BLOCK CHECKING

Note :

1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than 10MΩ impedance.
4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

S Curve Check

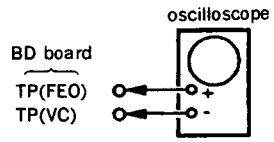

Procedure :

1. Connect oscilloscope to test point TP (FEO) on BD board.
2. Connect between test point TP (FES) and TP (VC) by lead wire.
3. Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within 3±1Vp-p.

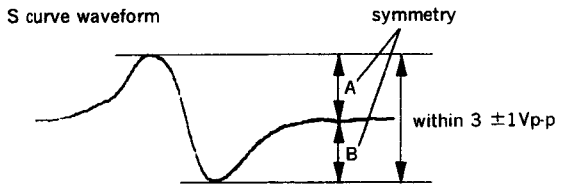

5. After check, remove the lead wire connected in step 2.

Note : • Try to mesure several times to make sure that the ratio of A : B or B : A is more than 10 : 7.
• Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

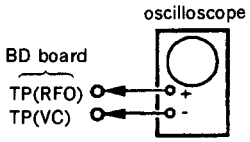

Procedure :

1. Connect oscilloscope to test point TP (RFO) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note :

Clear RF signal waveform means that the shape "◇" can be clearly distinguished at the center of the waveform.

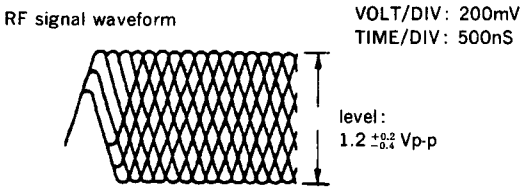

E-F Balance Check

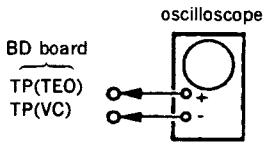

Procedure :

1. Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire.
2. Connect oscilloscope to test point TP (TEO) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the osilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

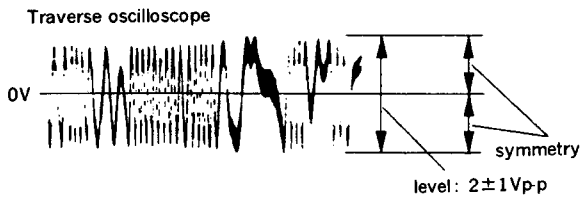

6. Remove the lead wire connected in step 1.

RF PLL Free-run Frequency Check

Procedure :

1. Connect frequency counter to test point (PL) with lead wire.



2. Turn Power switch on.
3. Confirm that reading on frequency counter is 4.3218MHz.

Focus/Tracking Gain

This gain has a margin, so even if it is slightly off.
There is no problem.
Therefore, do not perform, this adjustment.
Please note that it should be fixed to mechanical center position when you moved and do not know original position.

Checking Location :

【BD Board】

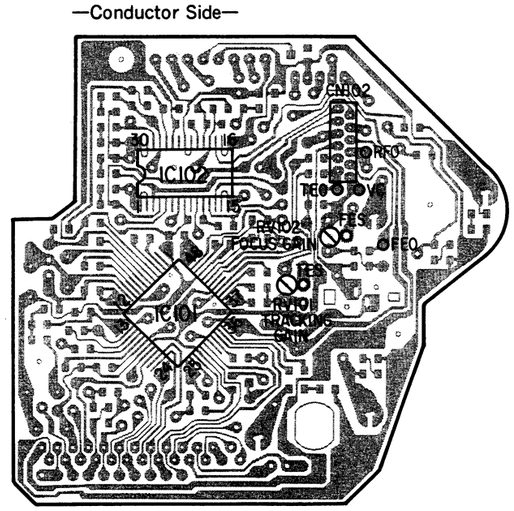

【CDM BORD】—Component Side—

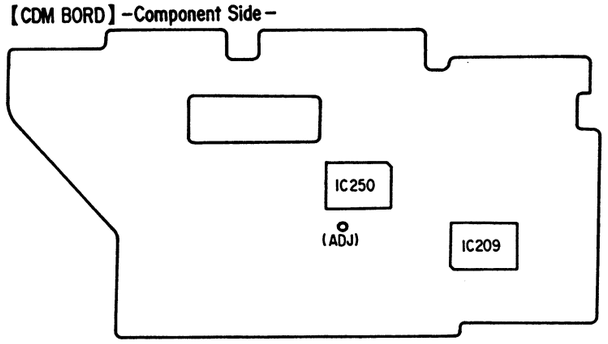

【CDM BOARD】—Conductor Side—

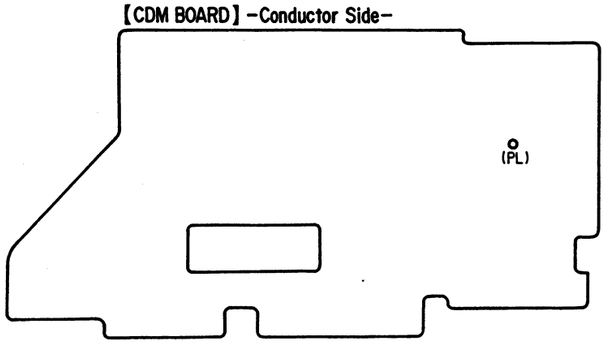

SECTION 4
DIAGRAMS

4-1. SEMICONDUCTOR LEAD LAYOUTS

BA6418N

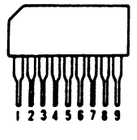

LH5160N-10L

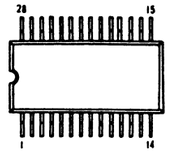

(TOP VIEW)

M66004M4FP

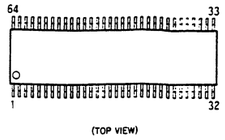

(TOP VIEW)

DCB010

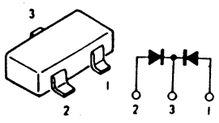

CXA1372AQ

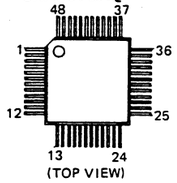

(TOP VIEW)

MC14011BF
MC14093BF

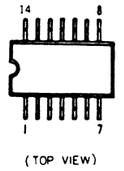

(TOP VIEW)

ON1023-S

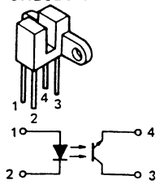

EC10DS2

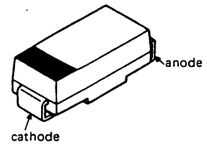

CXD2500AQ
μPD75516GF -399-3B9
μPD75518GF -059-3B9

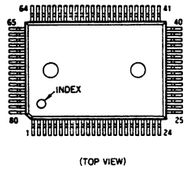

(TOP VIEW)

M5F7807L
M5F7808L



PCM67U

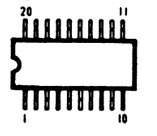

(TOP VIEW)

LN1361C
LN1461C



M5218AFP



DTC144EK
2SA1602
2SC4154-F



UZP-6.8BB
11EQS04
11ES2



CXD2554M

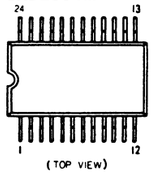

(TOP VIEW)

M5293L



TPS626-F



IN4148M



LA5601

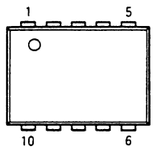

2SB1122-S



TLN117



LA6532M

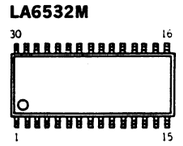

TOP VIEW

SECTION 4
DIAGRAMS

4-1. SEMICONDUCTOR LEAD LAYOUTS

BA6418N

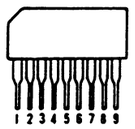

LH5160N-10L

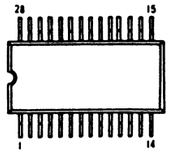

(TOP VIEW)

M66004M4FP



(TOP VIEW)

DCB010



CXA1372AQ

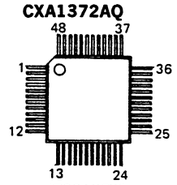

(TOP VIEW)

MC14011BF
MC14093BF

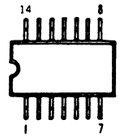

(TOP VIEW)

ON1023-S

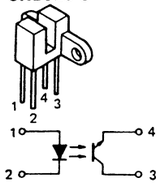

EC10DS2

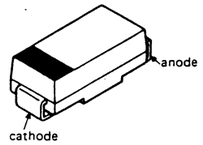

CXD2500AQ
μPD75516GF
-399-3B9
μPD75518GF
-059-3B9

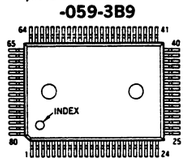

(TOP VIEW)

M5F7807L
M5F7808L



PCM67U

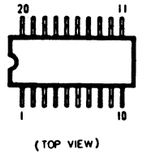

(TOP VIEW)

LN1361C
LN1461C



M5218AFP



DTC144EK
2SA1602
2SC4154-F



UZP-6.8BB
11EQS04
11ES2



CXD2554M

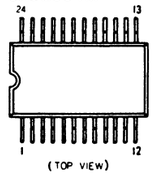

(TOP VIEW)

M5293L



TPS626-F



IN4148M



LA5601

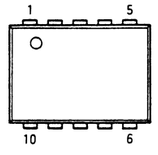

2SB1122-S



TLN117



LA6532M

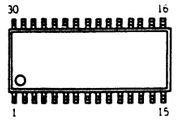

TOP VIEW

4-2. CIRCUIT BOARDS LOCATION

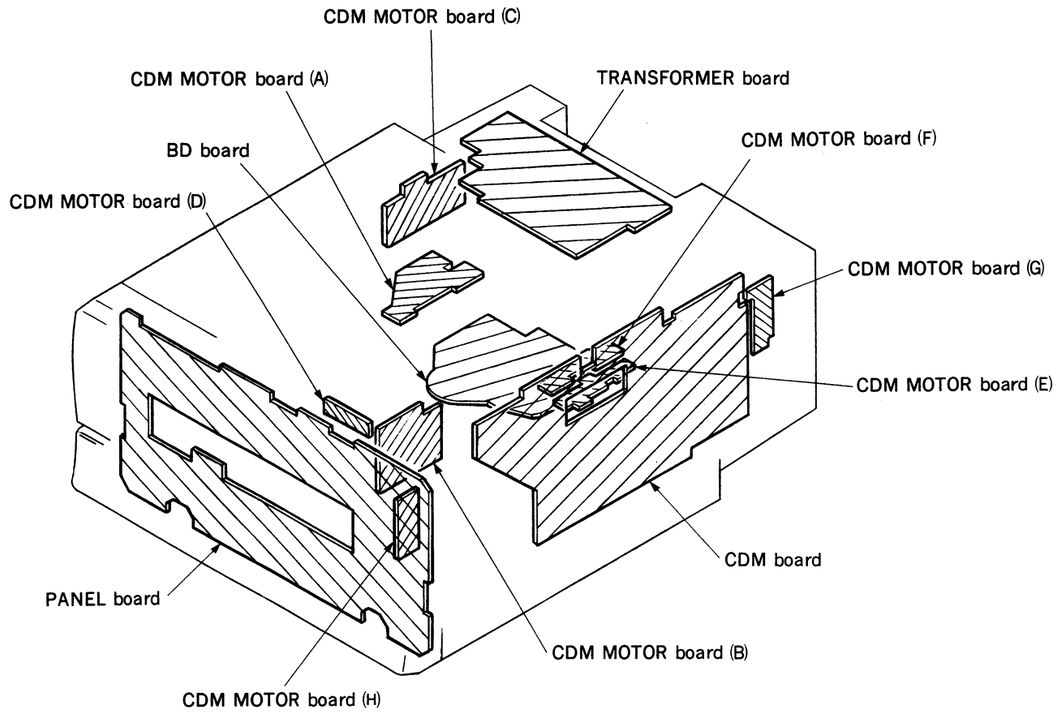

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D201	A-9	IC101	B-16
D202	B-9	IC102	B-17
D203	B-6	IC201	C-7
D204	C-9	IC202	B-5
D205	E-13	IC203	B-7
D206	F-14	IC204	B-8
(D206)	A-7	IC206	E-12
D207	F-14	IC207	F-12
D208	F-14	IC208	G-12
D301	G-4	IC209	B-13
D302	F-8	IC210	B-12
D303	F-8	IC211	C-11
D304	F-8	IC212	D-10
D305	G-8	IC213	C-7
D306	G-8	IC214	D-13
D307	G-8	IC215	E-13
D308	G-8	IC216	F-13
D309	G-8	IC250	D-12
D310	G-8	IC301	G-4
D311	G-8	IC302	G-6
D312	G-8	IC401	G-17
D313	G-8	IC601	F-15
D314	H-8		
D315	H-8	Q101	C-16
D316	H-8	Q201	D-14
D317	F-8	Q202	D-14
D318	F-8	Q301	G-4
D319	G-8	Q302	F-8
D320	G-8	Q303	F-9
D321	G-8	Q304	H-3
D322	G-8	Q306	F-7
D323	G-8	Q307	G-7
D324	G-8	Q308	G-7
D325	H-8	Q309	G-7
D326	H-8	Q311	G-7
D327	H-3	Q312	G-5
		Q313	G-5

( ): TRANSFORMER BOARD

Note:

- ○——: parts extracted from the component side.
- ●: Through hole.
- ▒: Pattern on the side which is seen.
- ○ ▒: Pattern of the rear side.
- G: Germany model
- IT: Italian model

4-3. PRINTED WIRING BOARDS • Refer to page 9 for Semiconductor Lead Layouts.

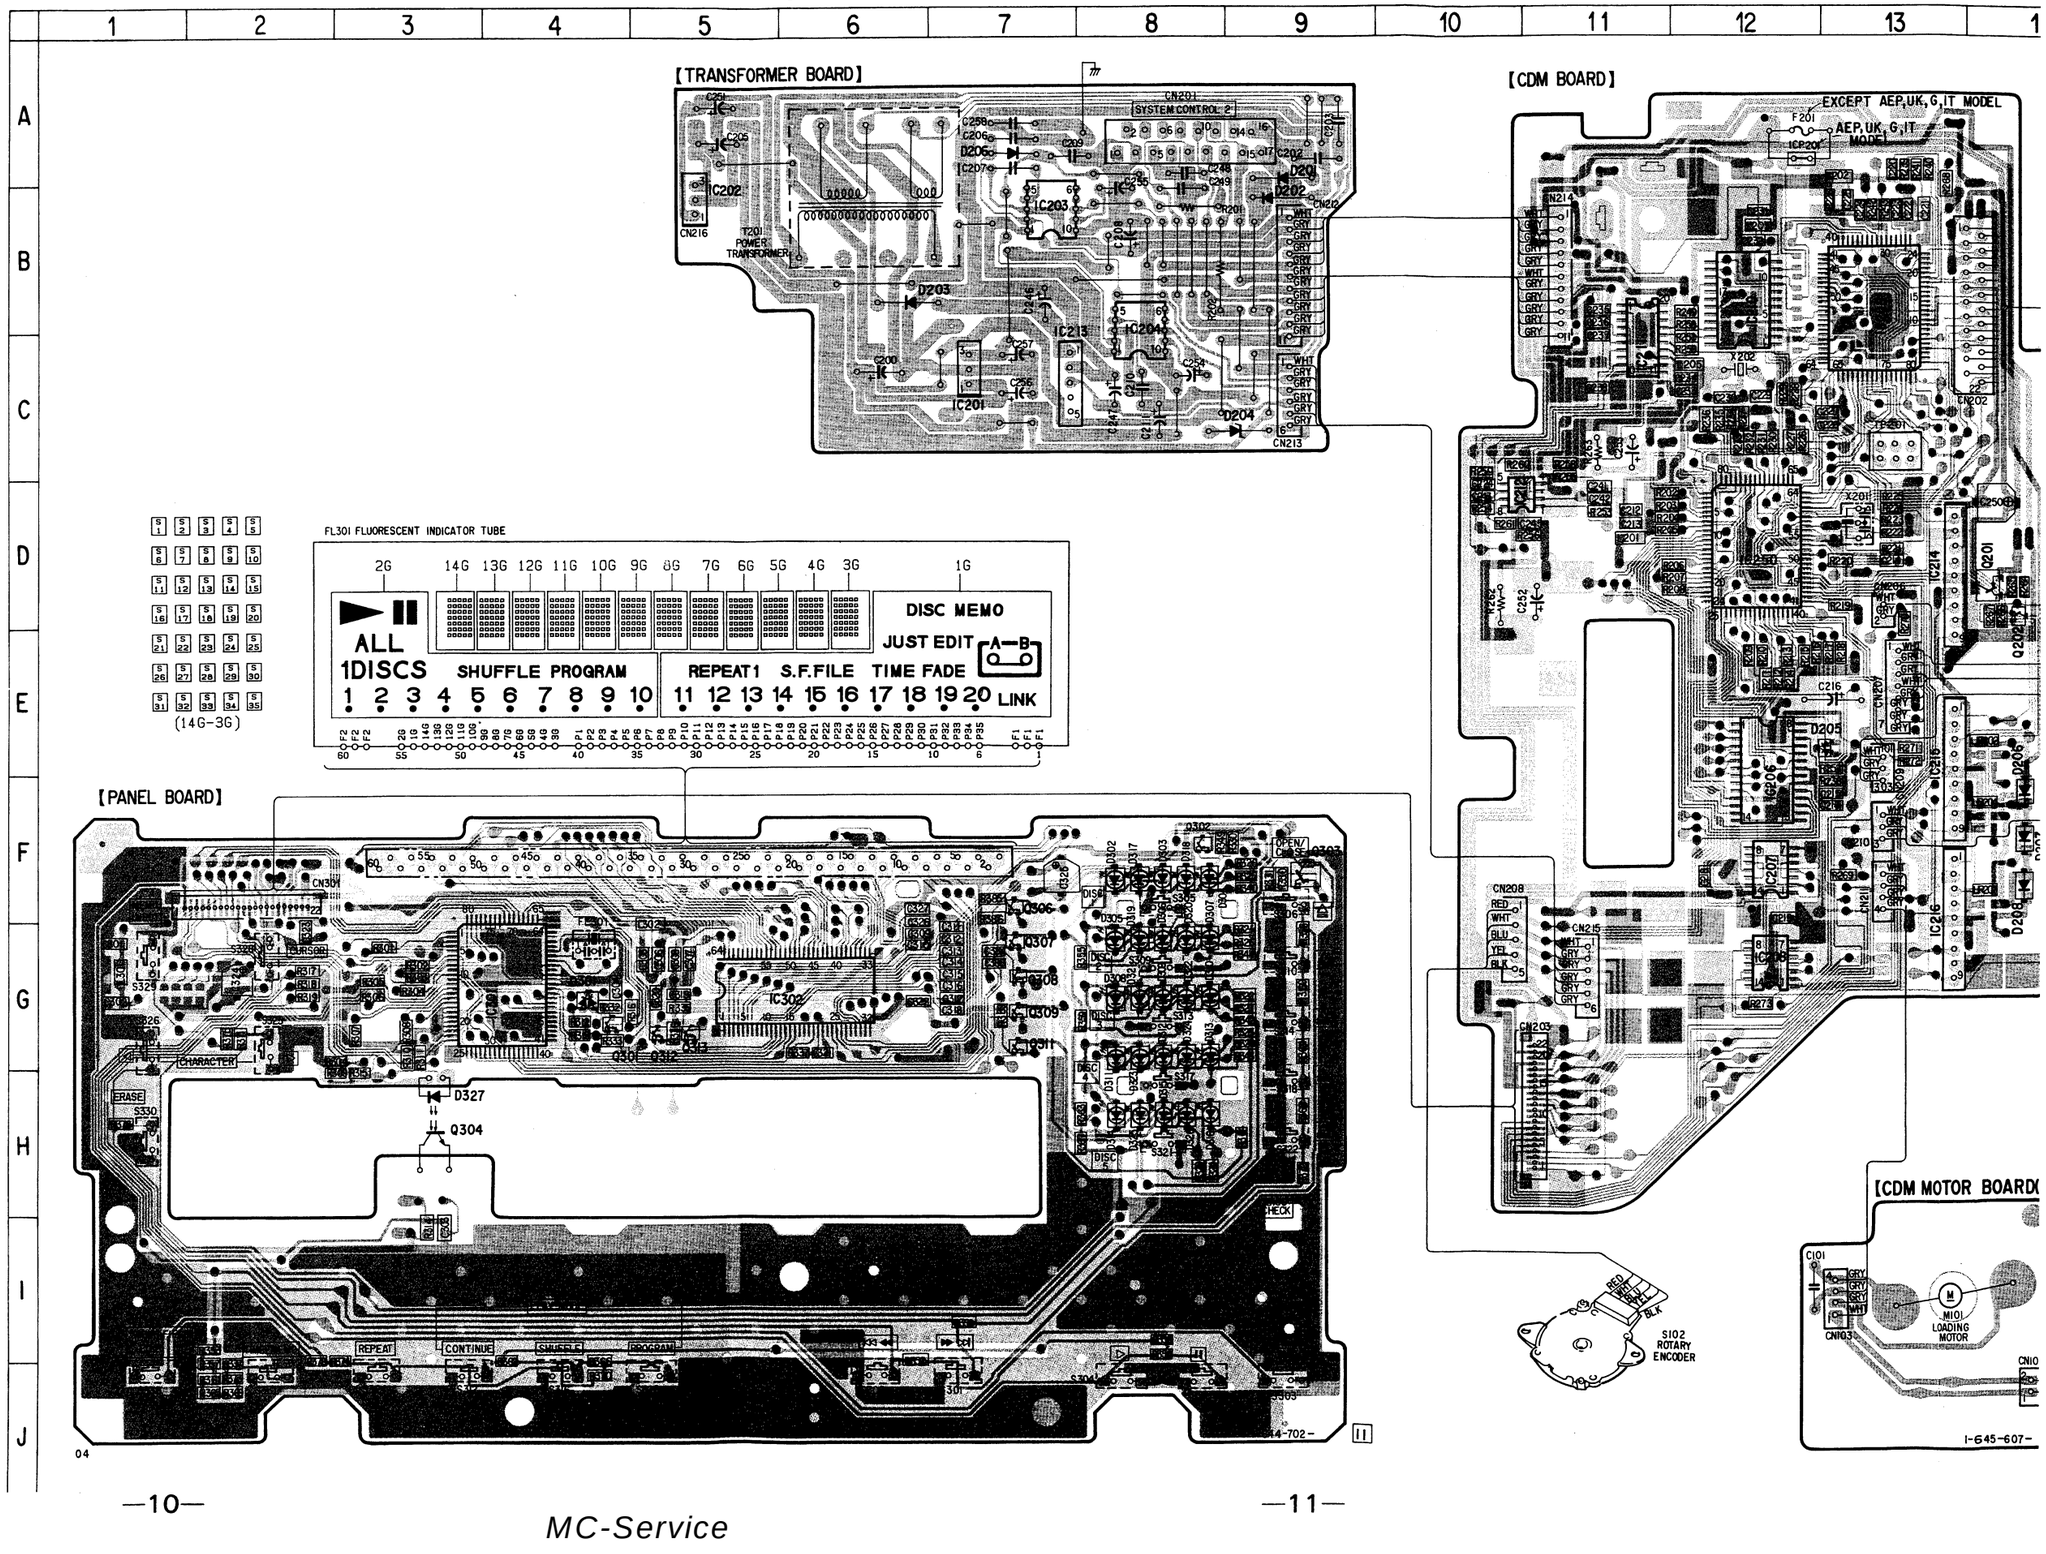

ad Layouts.

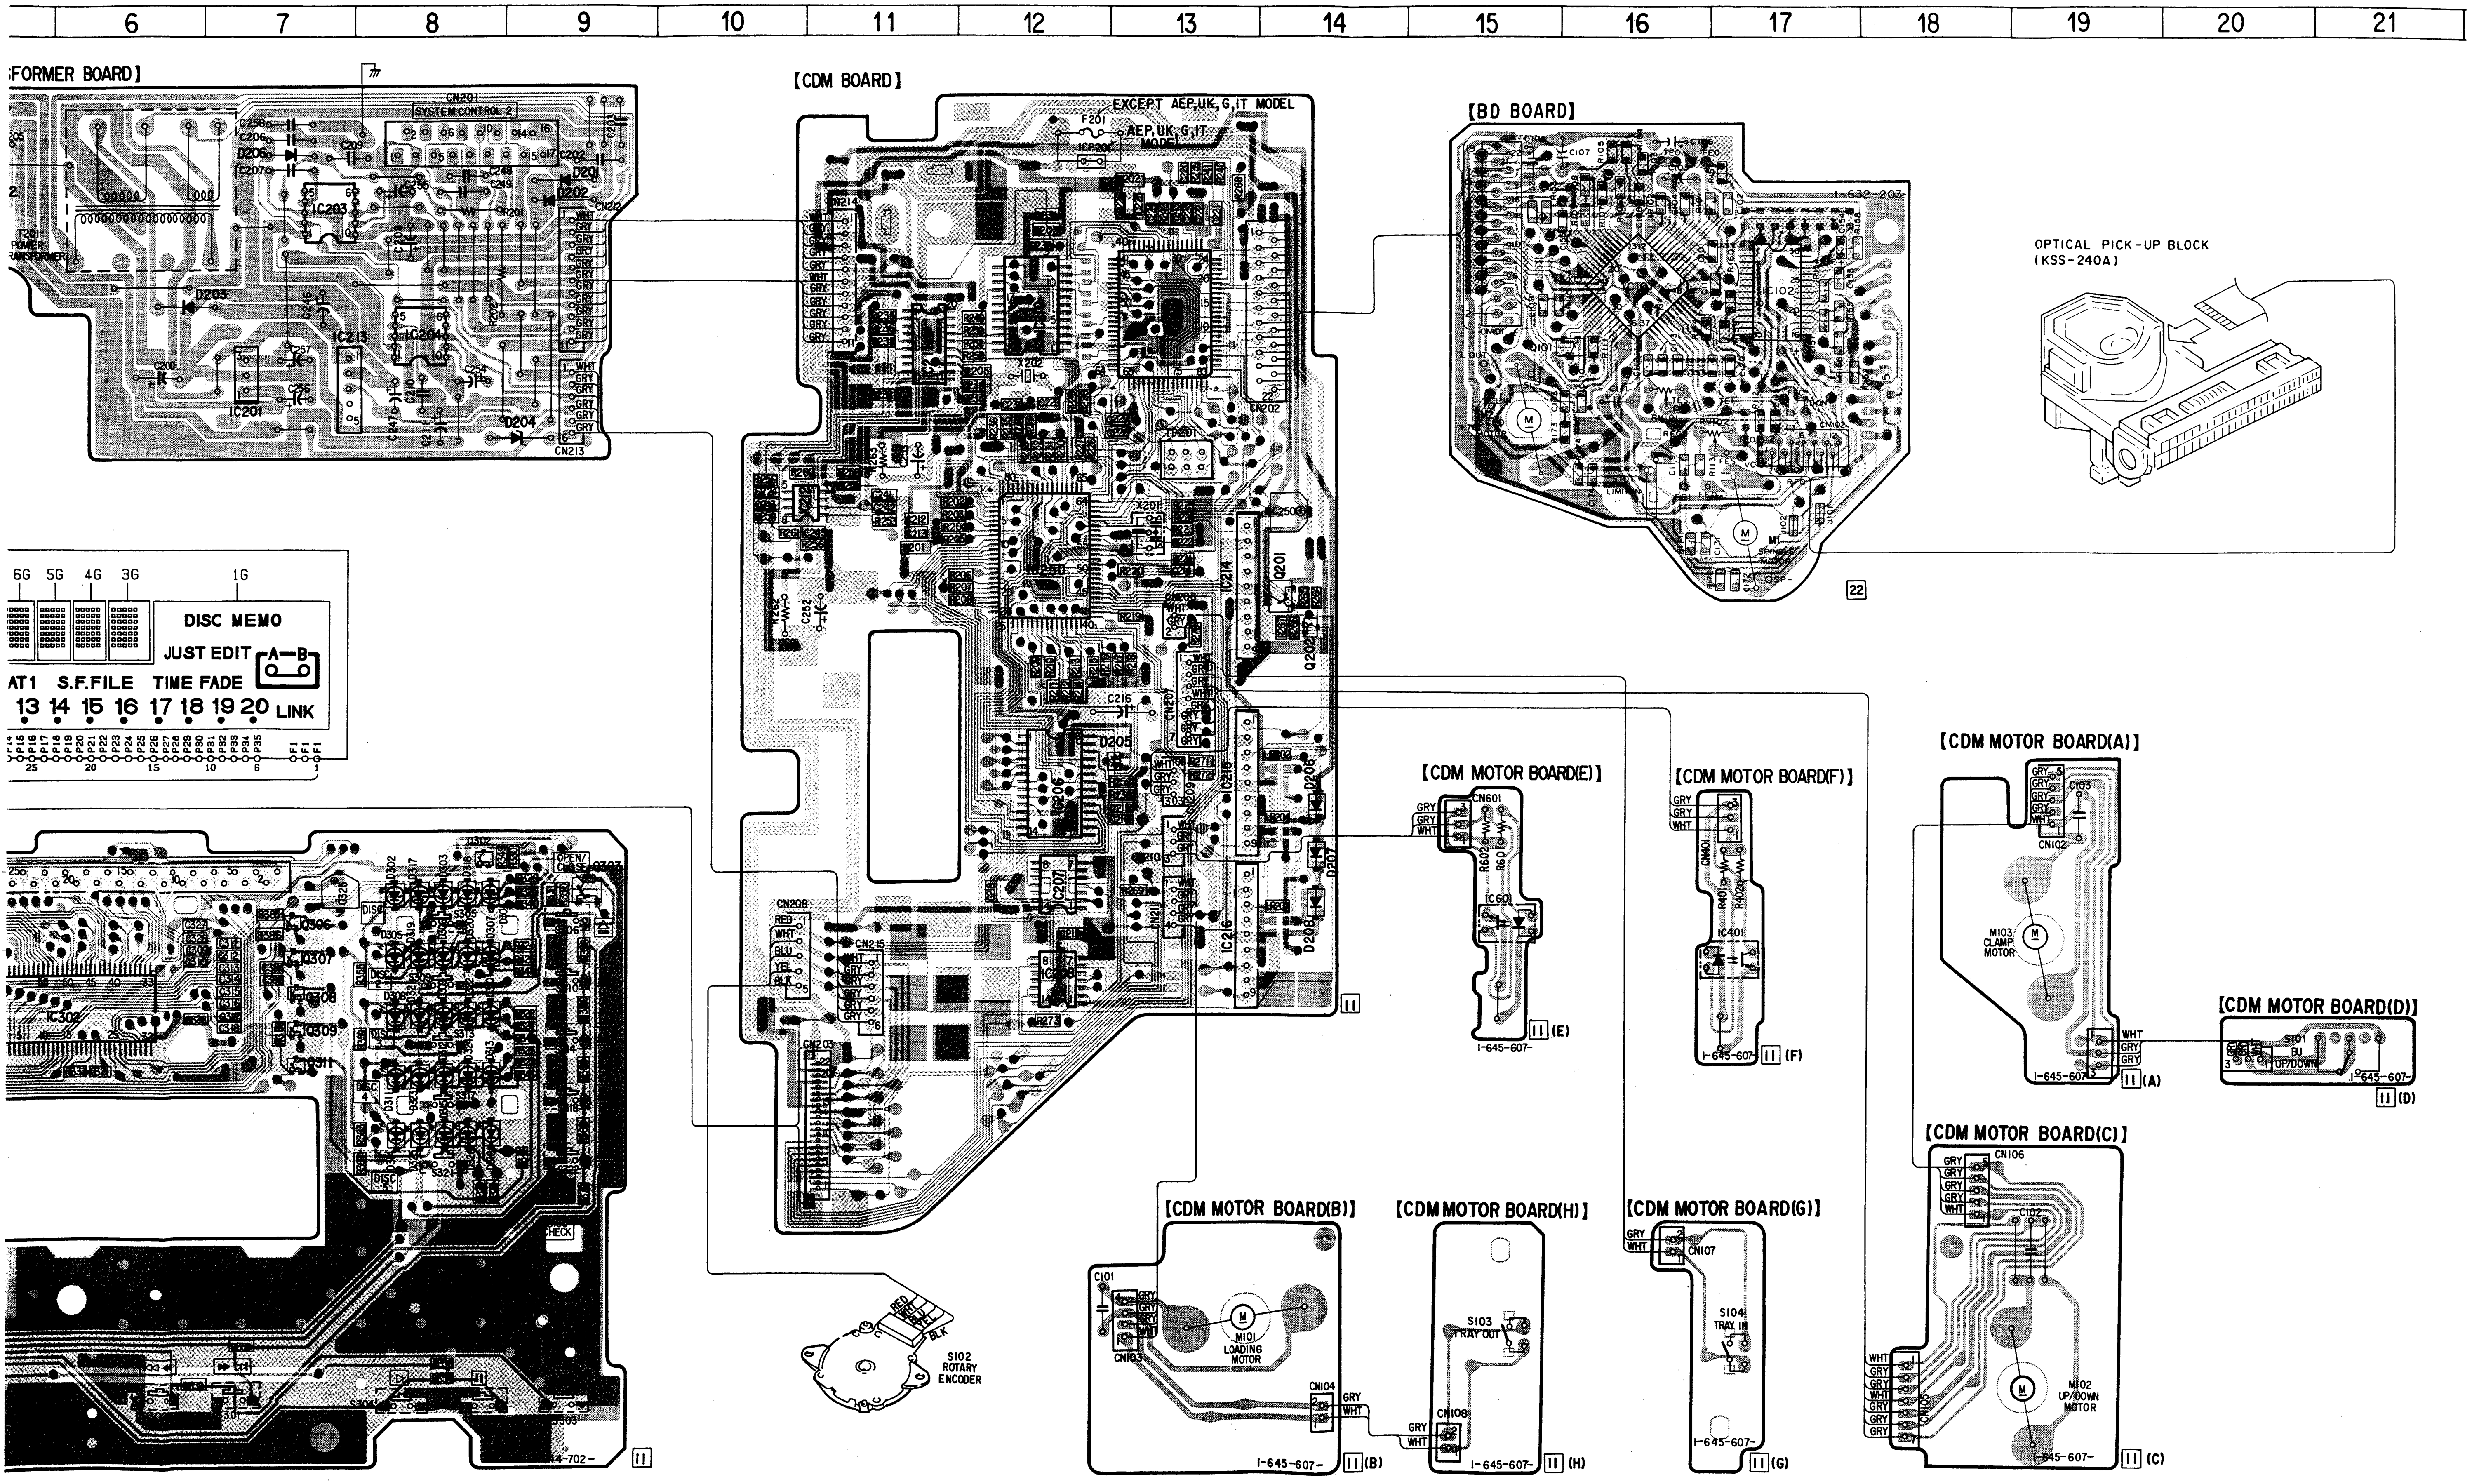
6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
FORMER BOARD]
CN201 SYSTEM CONTROL 2
T201 POWER TRANSFORMER
[CDM BOARD]
EXCEPT AEP,UK,G,IT MODEL
F201
AEP,UK,G,IT MODEL
ICP201
[BD BOARD]
1-632-203-
OPTICAL PICK-UP BLOCK
(KSS-240A)
22
DISC MEMO
JUST EDIT
A—B
AT1 S.F.FILE TIME FADE
13 14 15 16 17 18 19 20 LINK
OPEN/CLOSE
CHECK
[CDM MOTOR BOARD(E)]
1-645-607-
[CDM MOTOR BOARD(F)]
[CDM MOTOR BOARD(A)]
M103 CLAMP MOTOR
[CDM MOTOR BOARD(D)]
S101 BU UP/DOWN
[CDM MOTOR BOARD(B)]
M101 LOADING MOTOR
[CDM MOTOR BOARD(H)]
S103 TRAY OUT
[CDM MOTOR BOARD(G)]
S104 TRAY IN
[CDM MOTOR BOARD(C)]
M102 UP/DOWN MOTOR
S102 ROTARY ENCODER

MC-Service

4-4. SCHEMATIC DIAGRAM • Refer to page 17 for IC Block Diagrams.

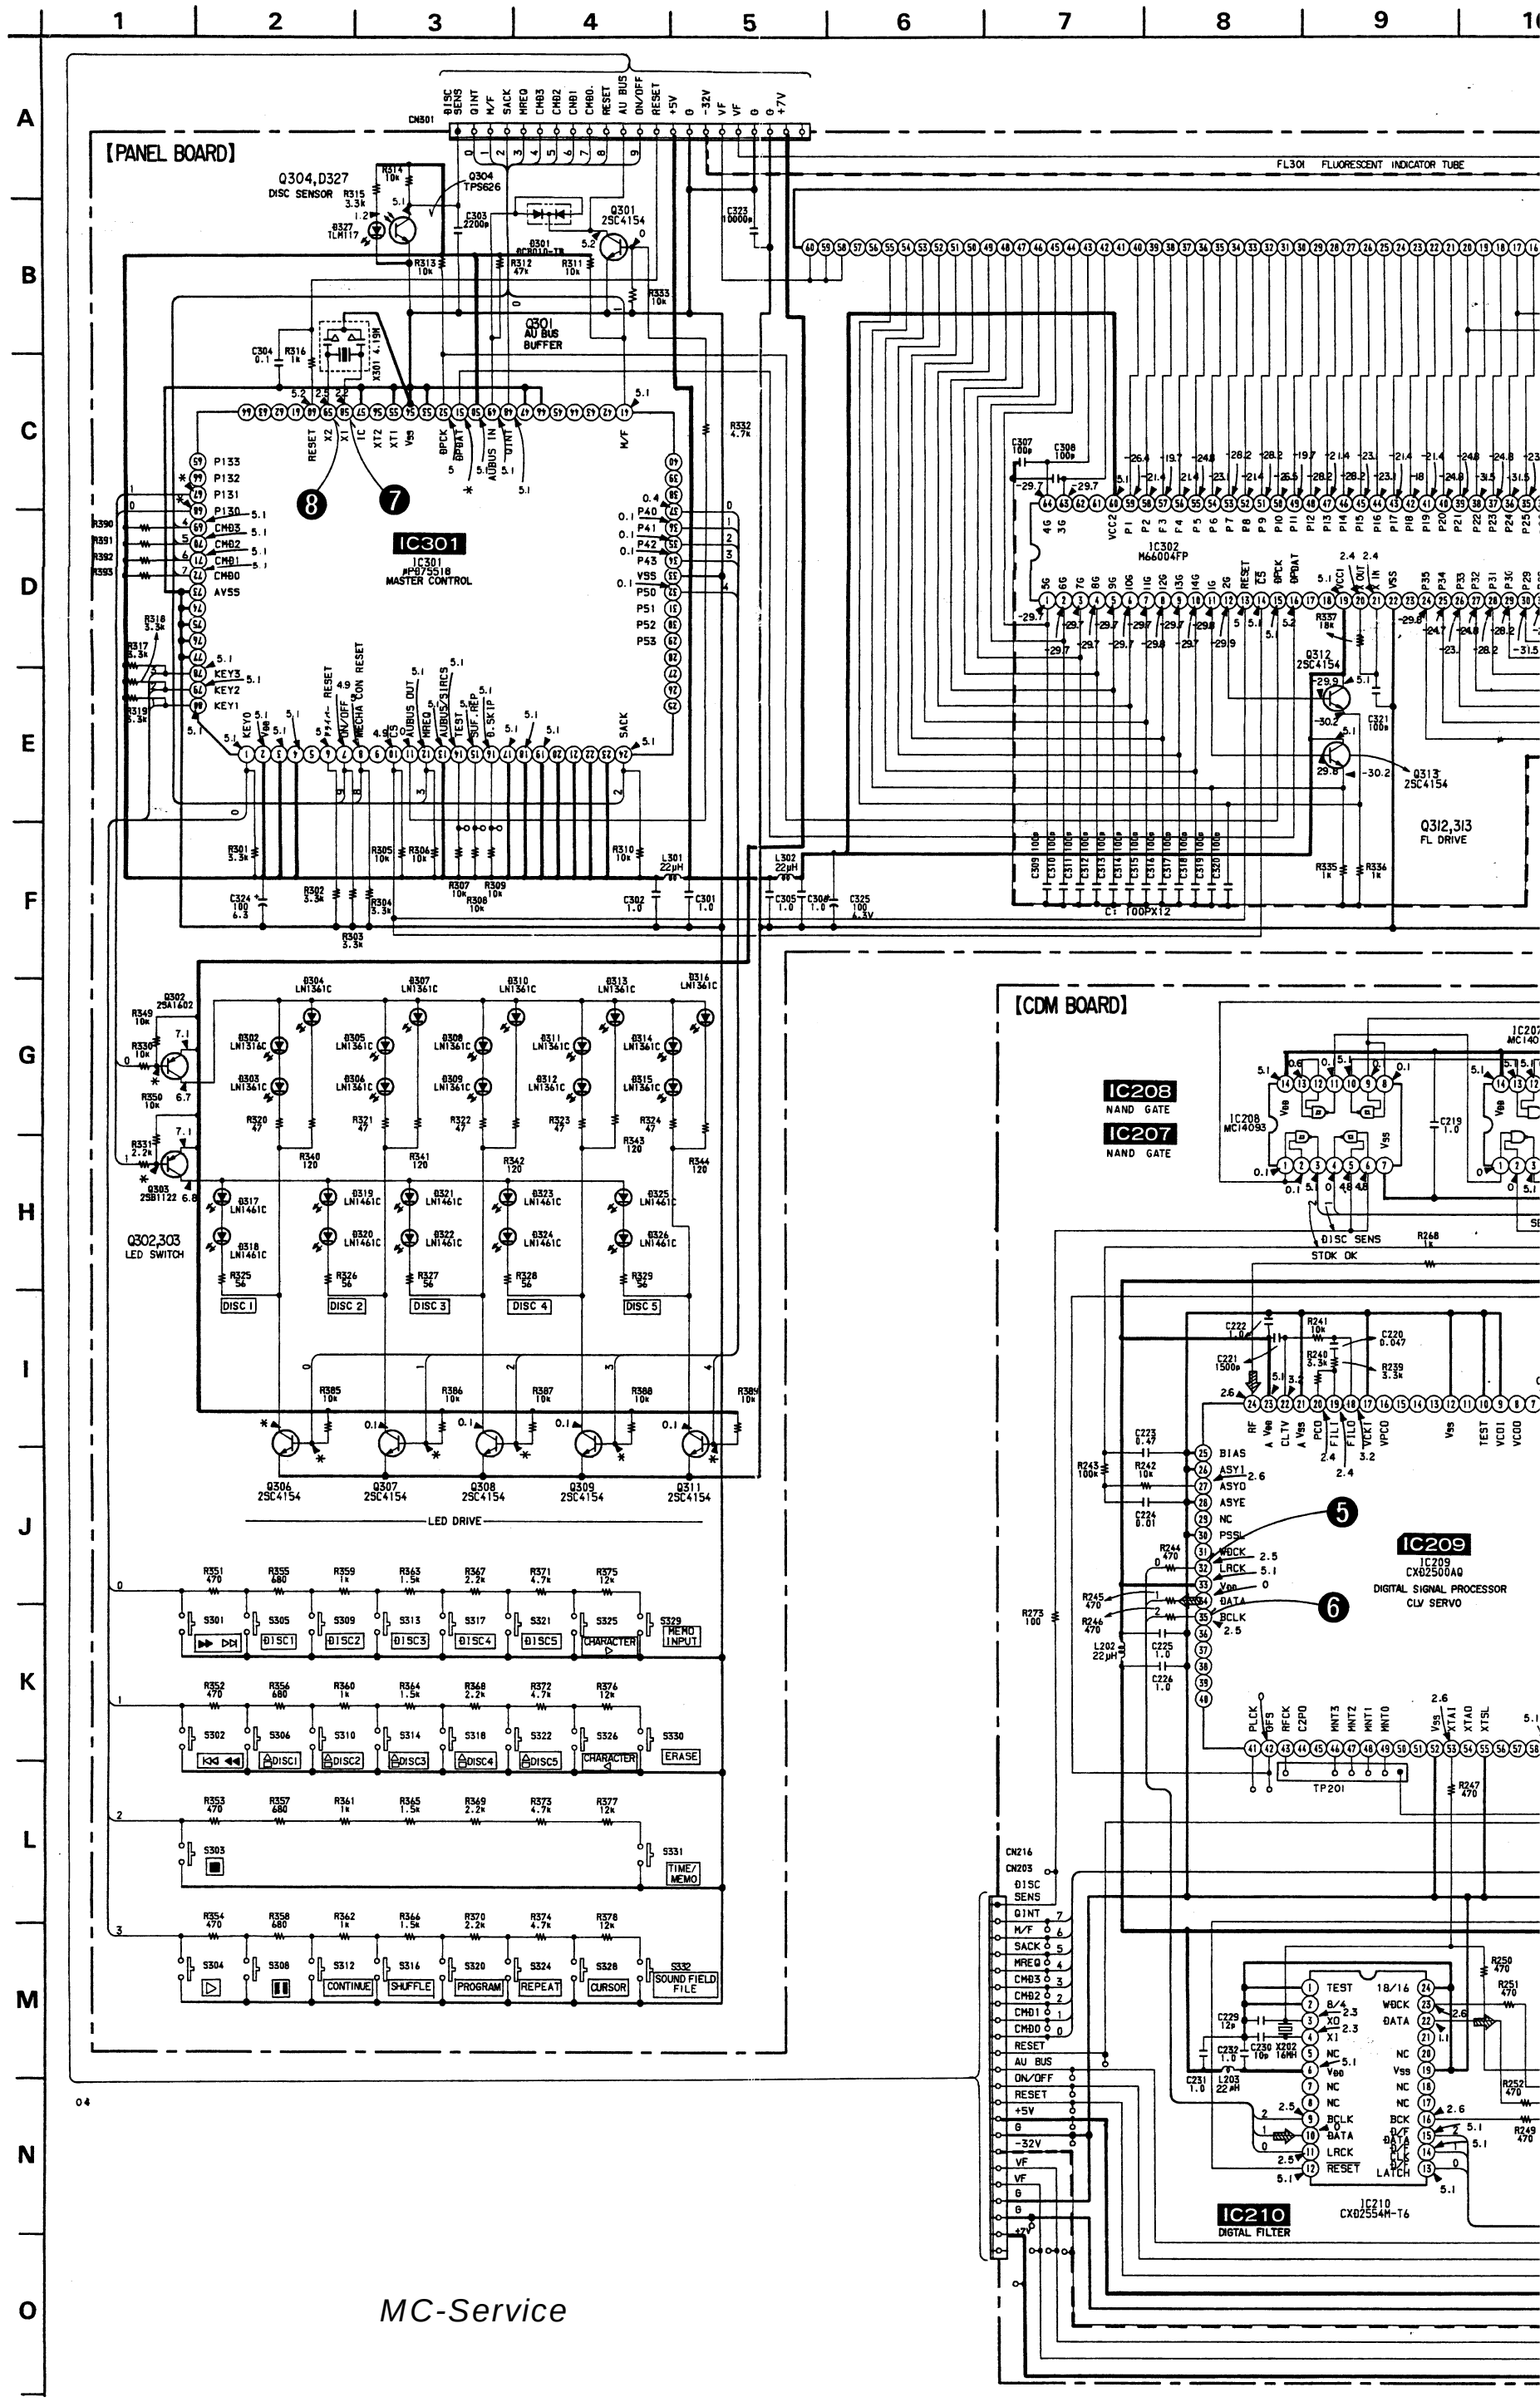

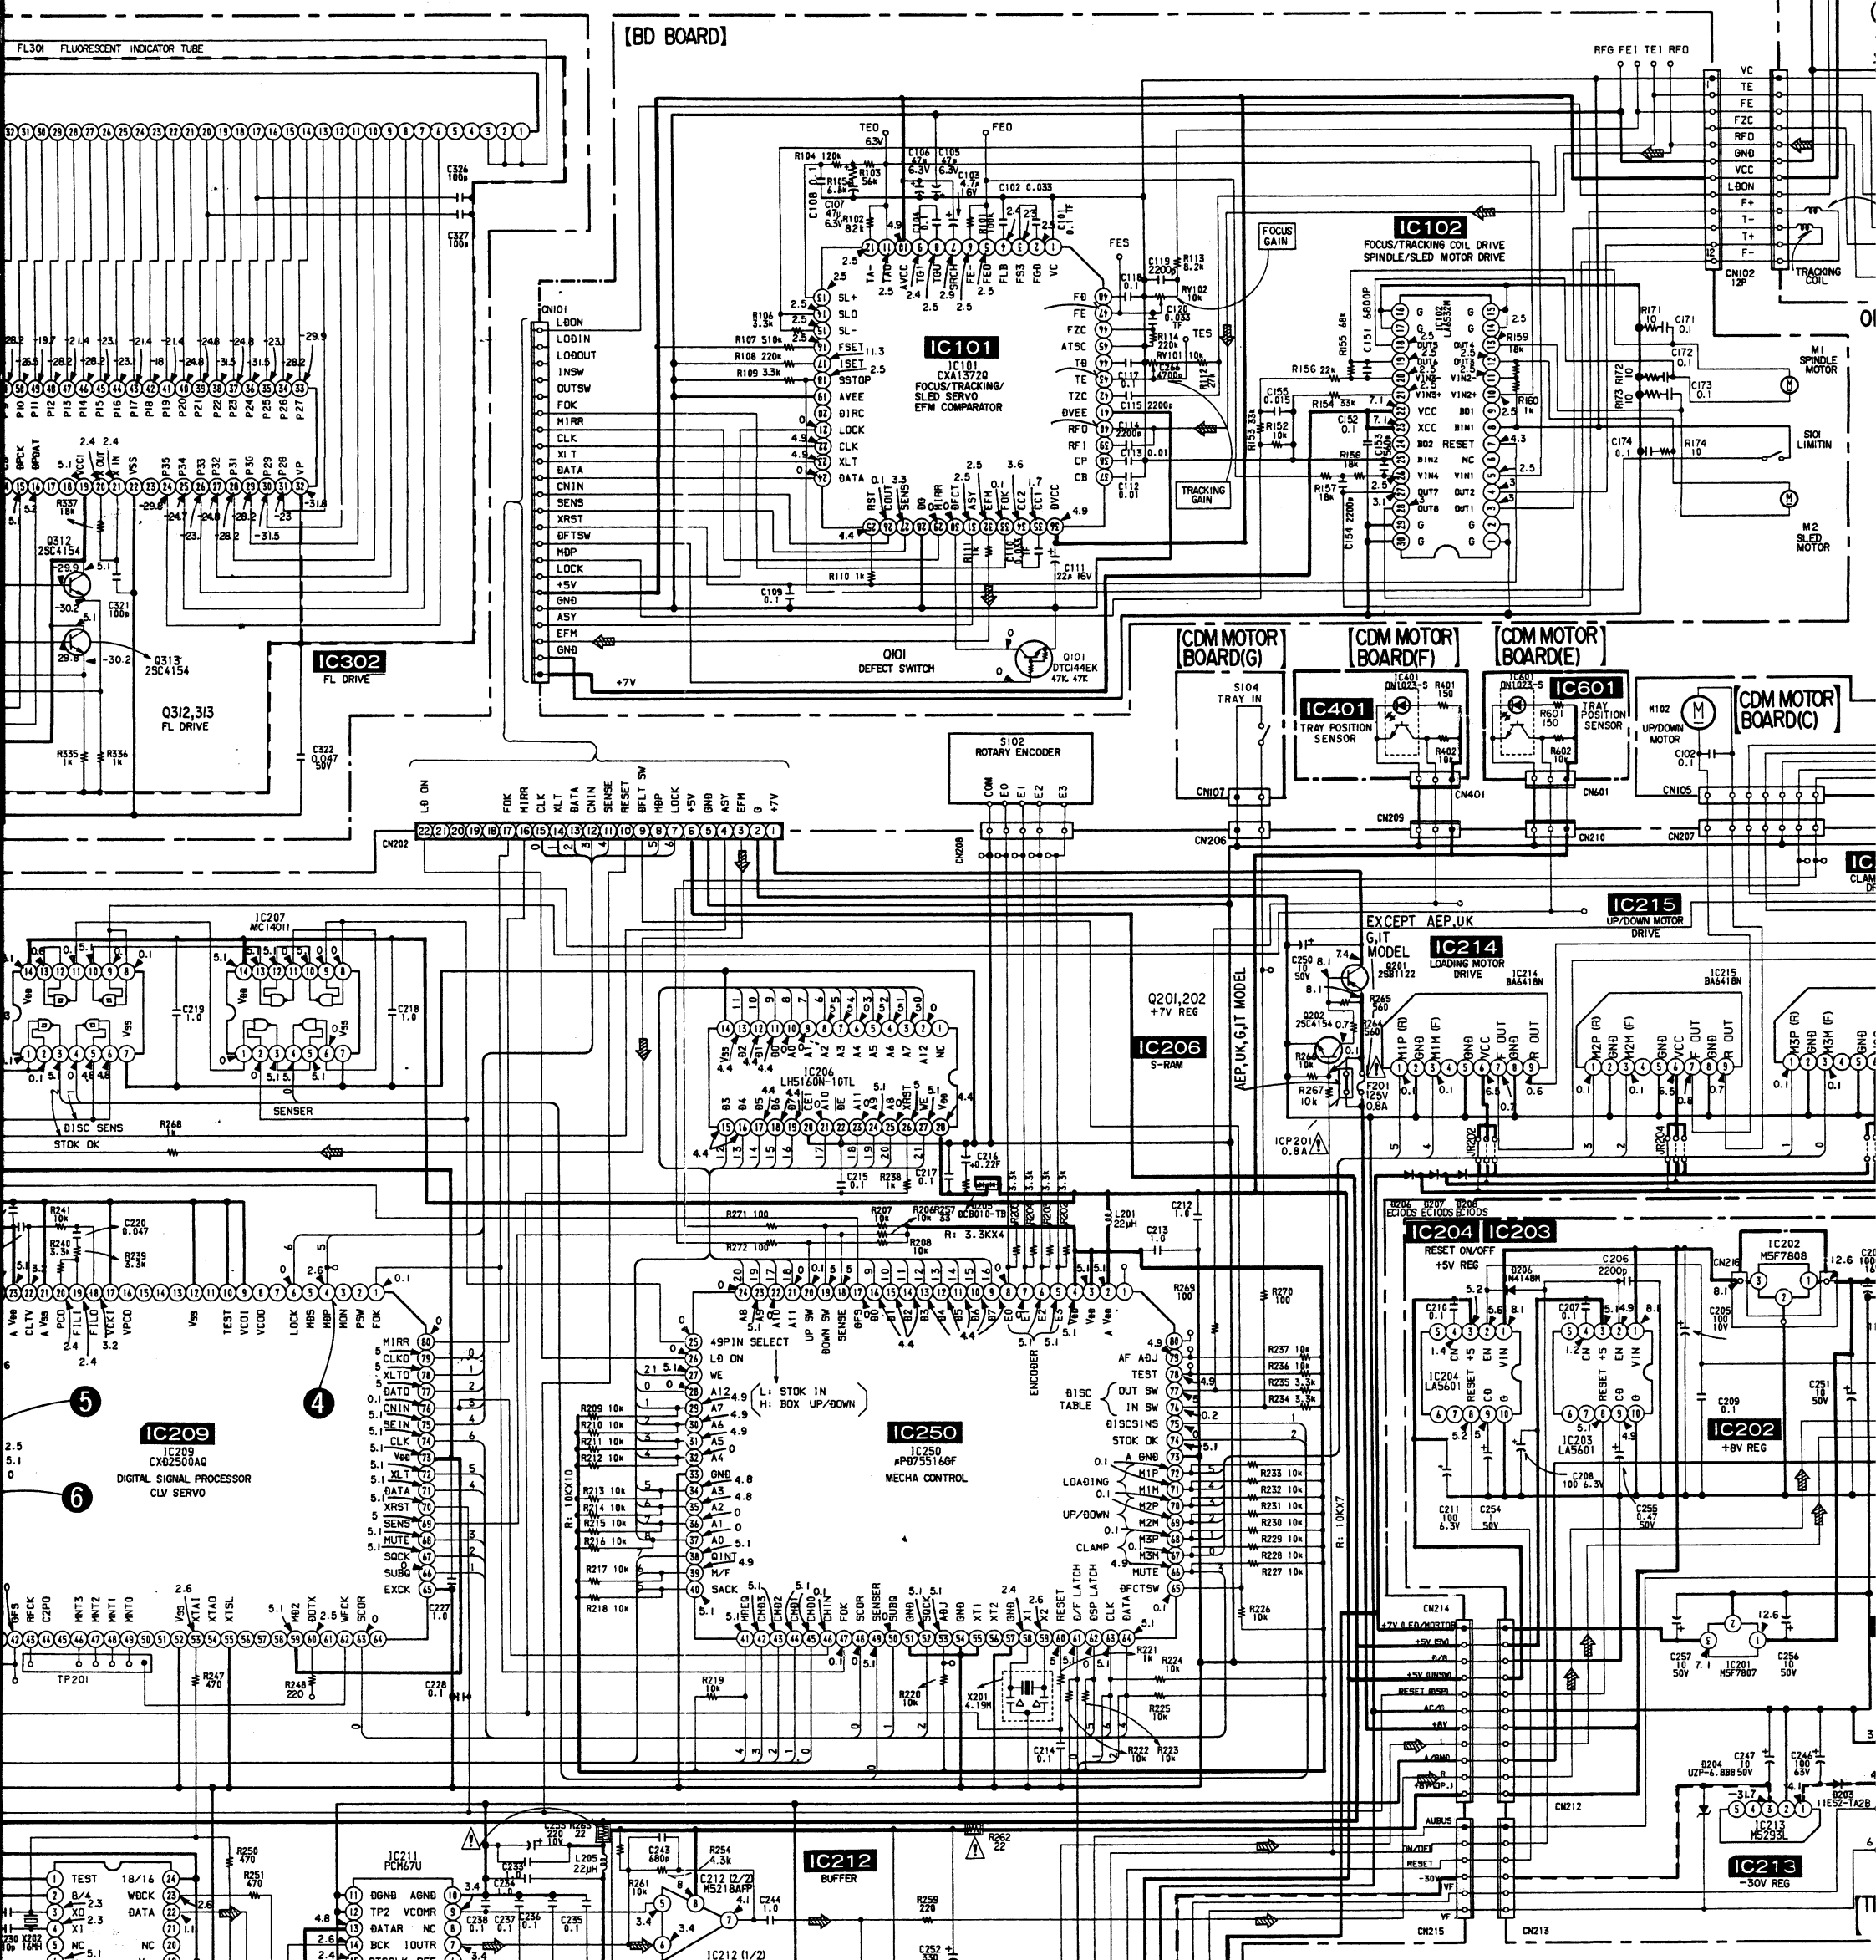
[BD BOARD]
FL301 FLUORESCENT INDICATOR TUBE
IC101
CXA1372Q
FOCUS/TRACKING/
SLED SERVO
EFM COMPARATOR
IC102
FOCUS/TRACKING COIL DRIVE
SPINDLE/SLED MOTOR DRIVE
IC302
FL DRIVE
Q312,313
FL DRIVE
Q101
DEFECT SWITCH
S102
ROTARY ENCODER
S104
TRAY IN
IC401
TRAY POSITION
SENSOR
IC601
TRAY
POSITION
SENSOR
[CDM MOTOR]
BOARD(G)
[CDM MOTOR]
BOARD(F)
[CDM MOTOR]
BOARD(E)
[CDM MOTOR]
BOARD(C)
M1
SPINDLE
MOTOR
M2
SLED
MOTOR
SIOI
LIMITIN
TRACKING
COIL
FOCUS
GAIN
TRACKING
GAIN
IC207
MC14011
IC206
LH5160N-10TL
S-RAM
Q201,202
+7V REG
AEP,UK,G,IT MODEL
EXCEPT AEP,UK
G,IT
MODEL
IC214
LOADING MOTOR
DRIVE
IC215
UP/DOWN MOTOR
DRIVE
IC204 IC203
RESET ON/OFF
+5V REG
IC202
+8V REG
IC213
-30V REG
IC209
CX02500AQ
DIGITAL SIGNAL PROCESSOR
CLV SERVO
IC250
MECHA CONTROL
IC211
PCM67U
IC212
BUFFER
IC301
D/A CONVERTER
IC210
CXD2554M-T6
FILTER
SENSER
DISC SENS
STOK OK
49PIN SELECT
L: STOK IN
H: BOX UP/DOWN
CN101
CN202
CN206
CN107
CN401
CN601
CN209
CN210
CN105
CN207
CN214
CN212
CN213
CN215
CN216
CNI02 12P
TP201

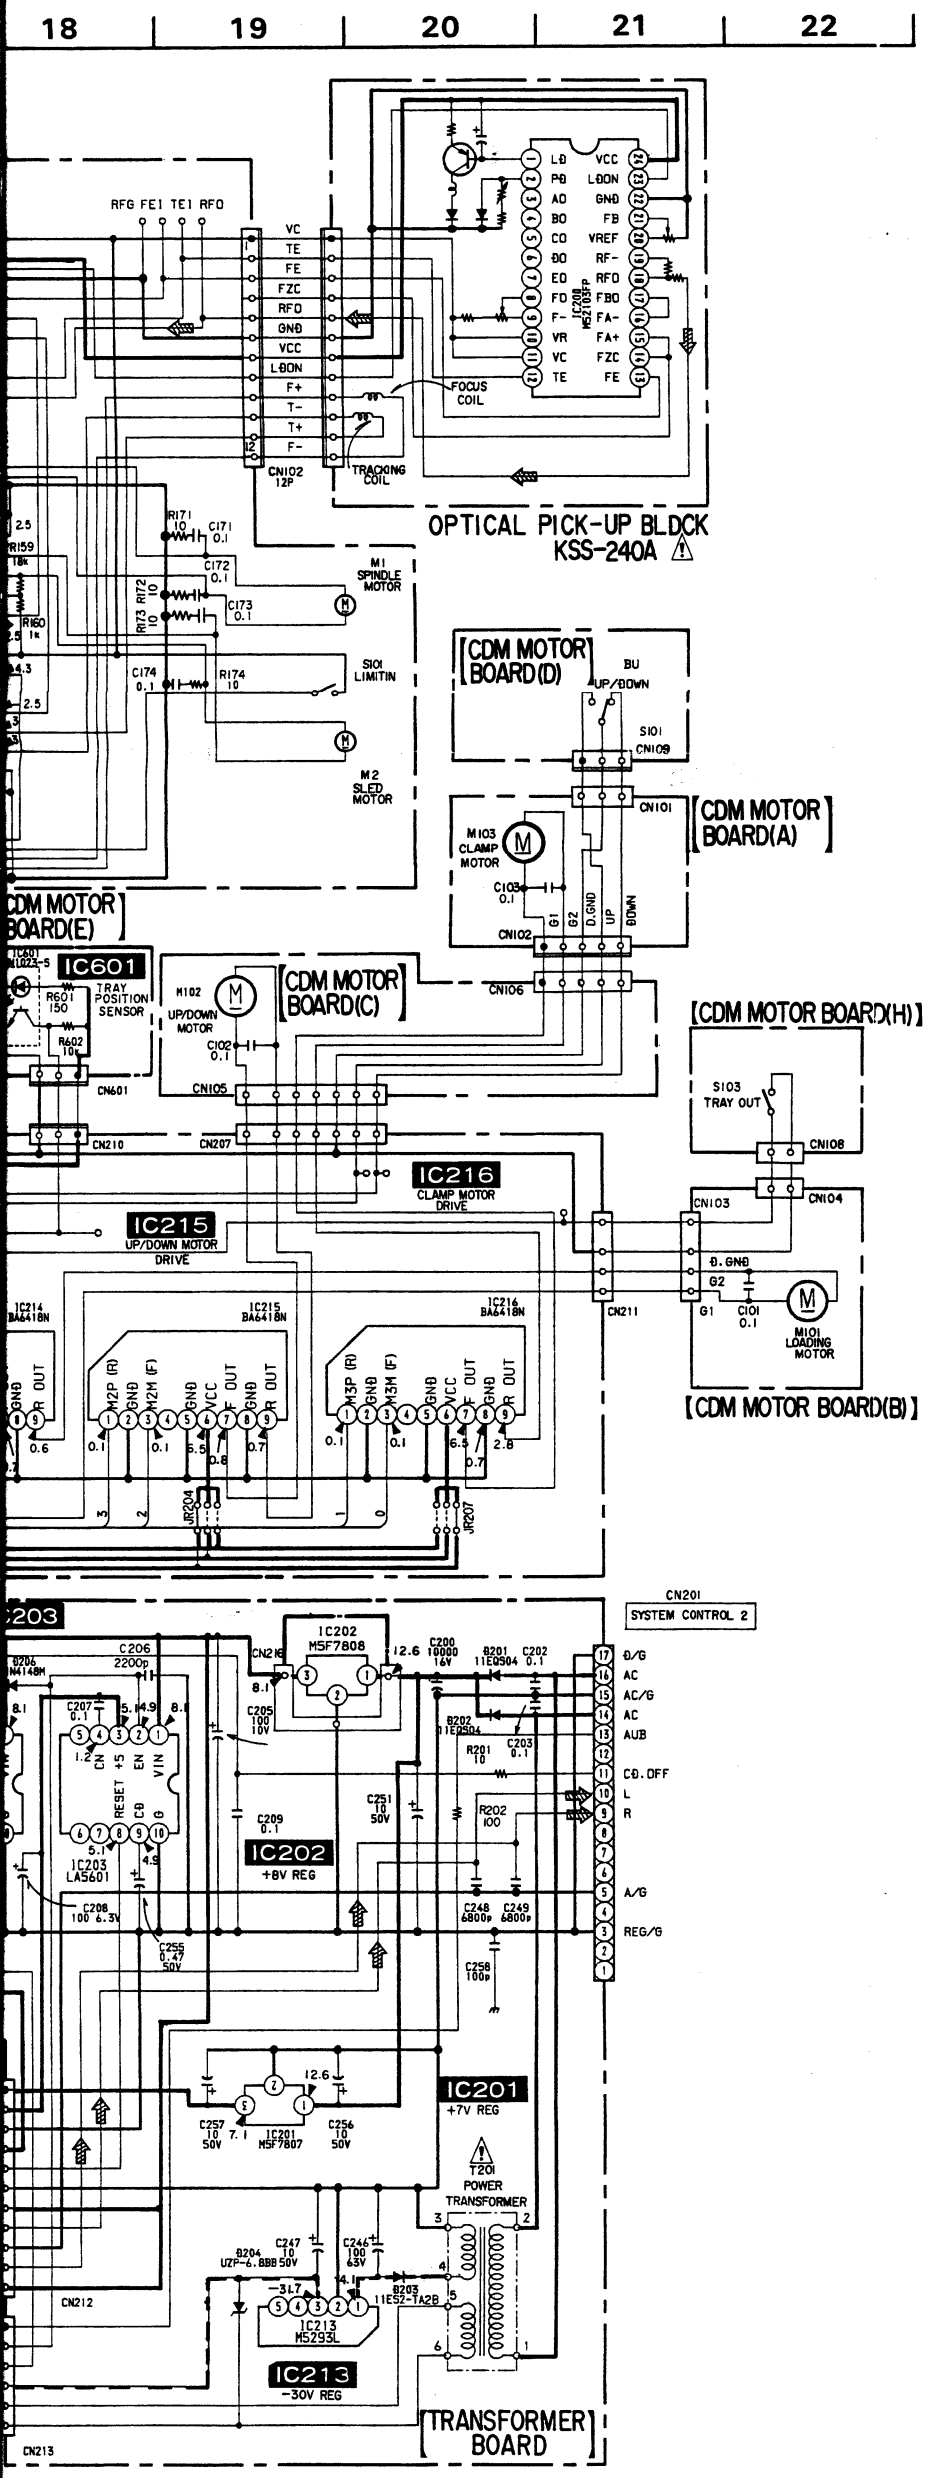

• Waveforms

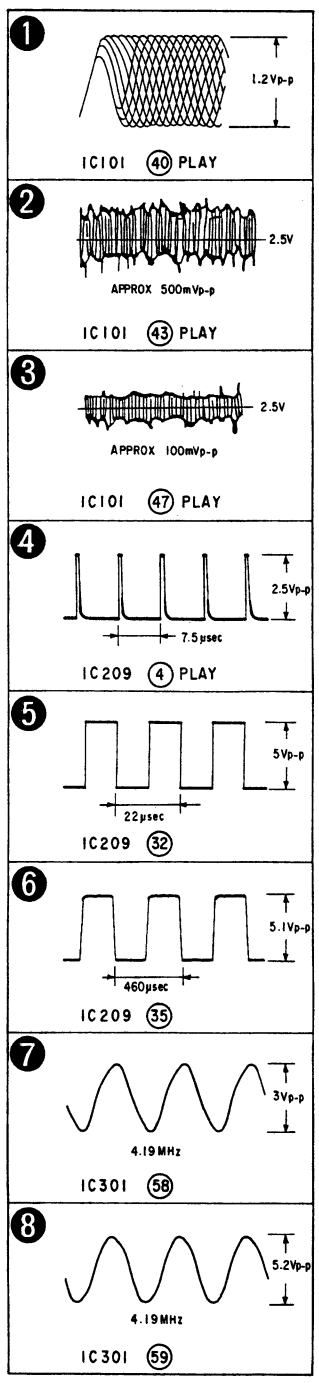

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- ⊣▭⊢ : nonflammable resistor.

Note:	**Note:**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- ▬▬ : B+ Line
- ▬ ▬ : B− Line
- ▭ : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
  no mark: STOP
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
  Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : CD
- G: Germany model
- IT: Italian model

• IC Block Diagrams

IC101 CXA1372Q

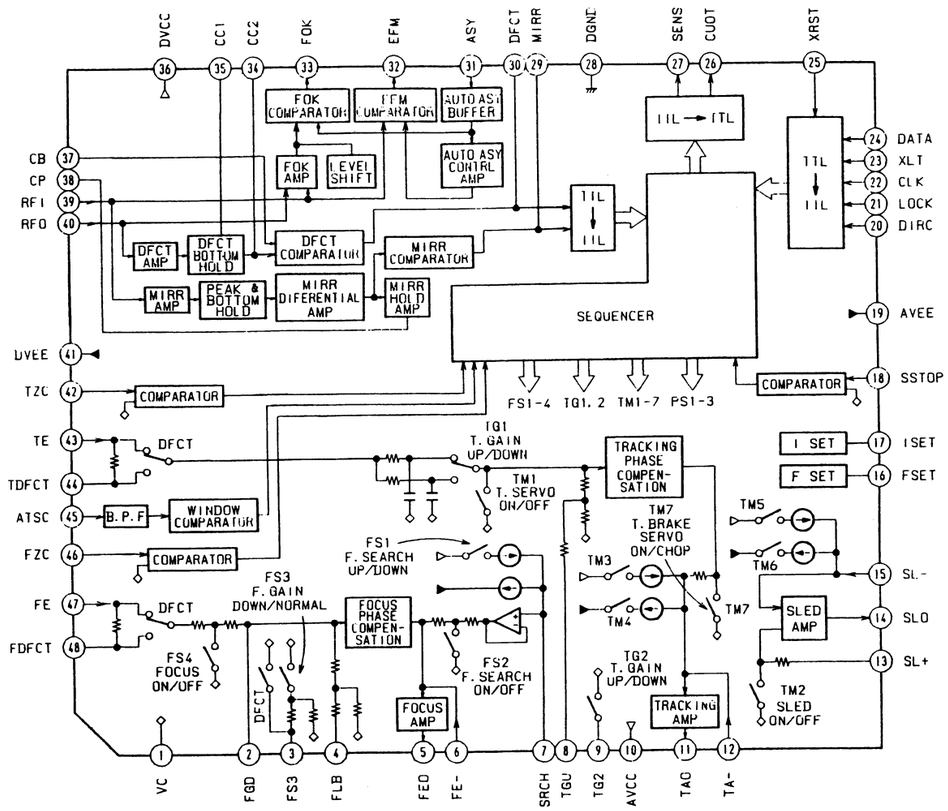

IC210 CXD2554M

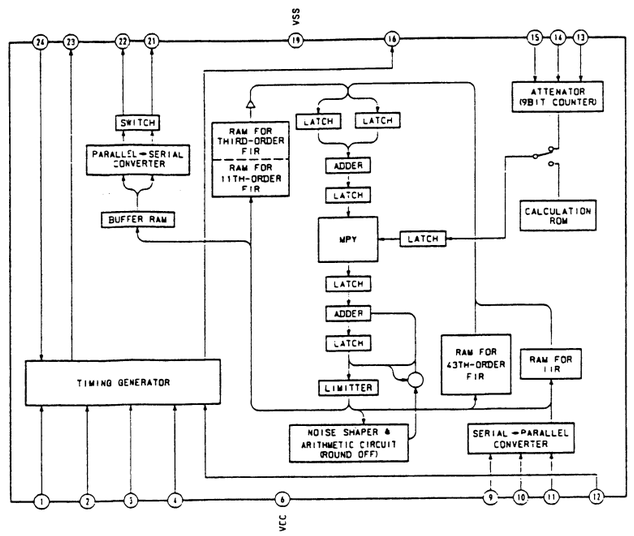

IC203, 204 LA5601

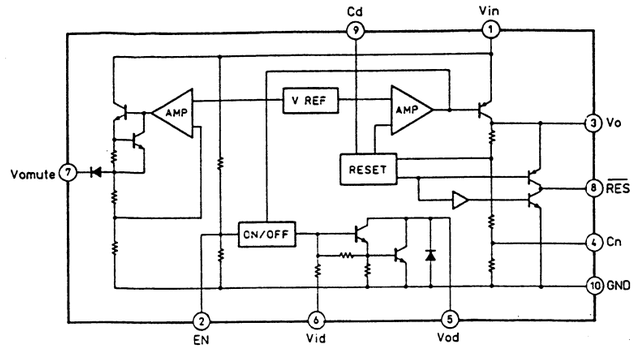

IC214-216 BA6418N

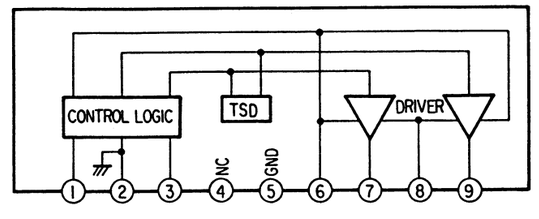

IC209 CXD2500AQ

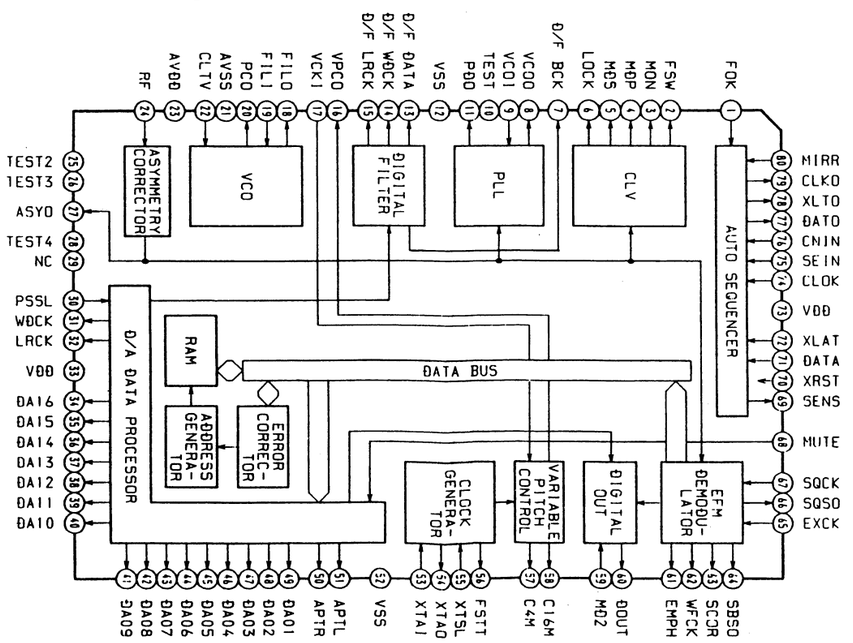

IC213 M5293L

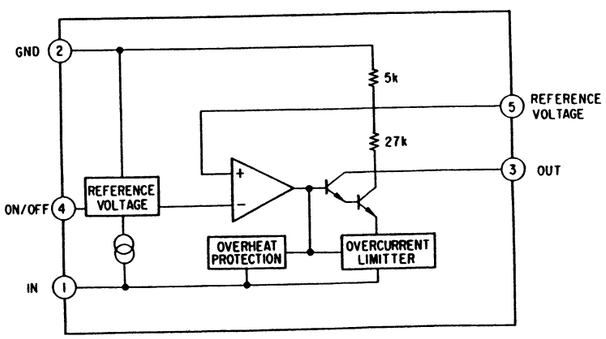

IC102 LA6532M

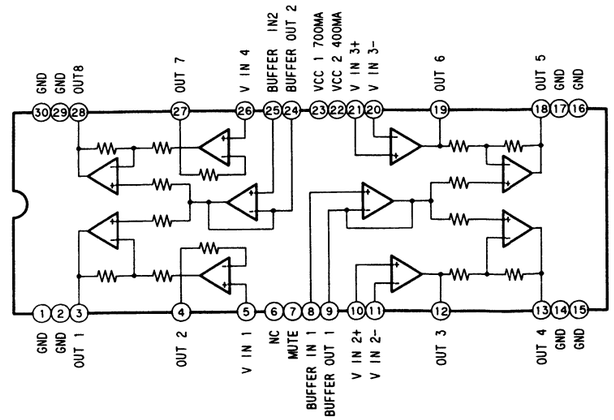

SECTION 5
EXPLODED VIEWS

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE)... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- CND : Canadian model
- G : Germany model
- IT : Italian model

5-1. CABINET SECTION

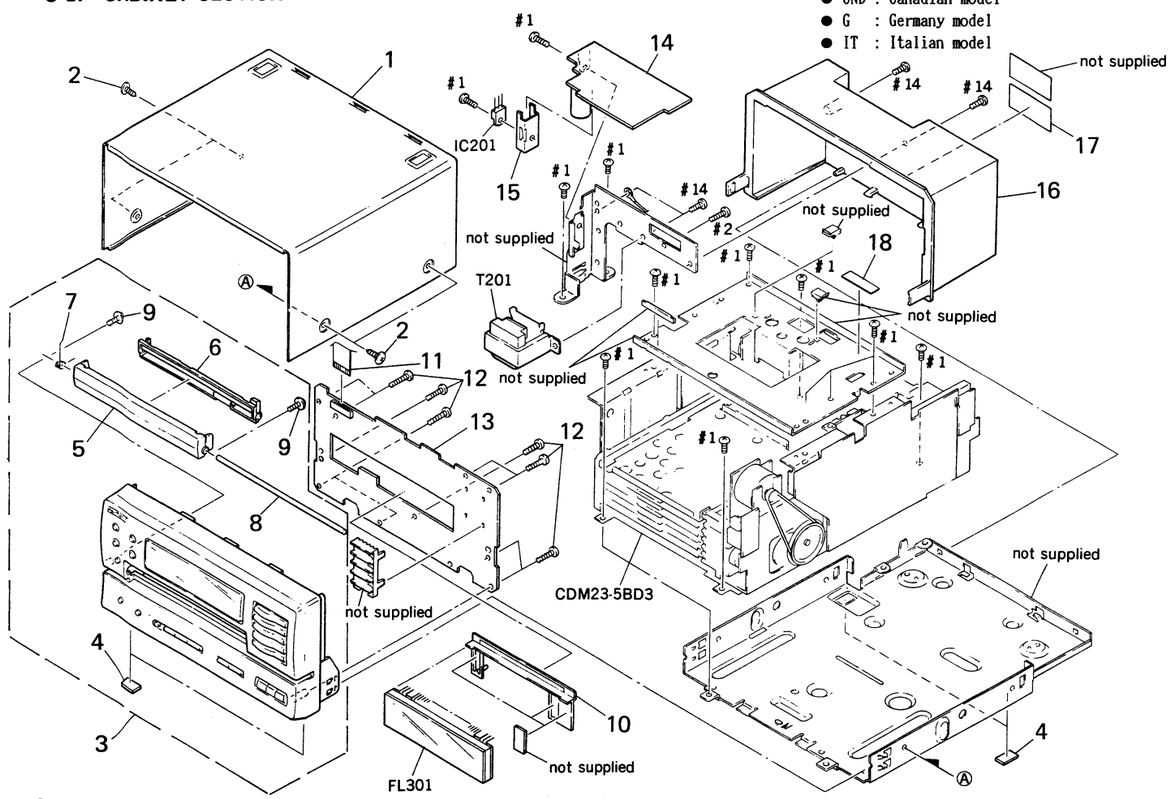

Ref. No.	Part No.	Description	Remark
* 1	4-944-522-42	CASE (K211522)	
2	3-363-099-01	SCREW (CASE 3 TP2)	
3	X-4942-946-1	PANEL ASSY, FRONT	
4	4-930-336-21	FOOT (FELT)	
5	4-954-694-01	DOOR (A)	
6	4-954-698-01	DOOR (B)	
7	4-954-693-01	SPRING (DOOR)	
8	4-954-695-01	SHAFT (DOOR)	
9	4-933-134-01	SCREW (+PTPWH M2.6X6)	
* 10	4-954-701-01	HOLDER (FL TUBE)	
11	1-696-633-11	WIRE (FLAT TYPE)	
12	4-951-620-01	SCREW (2.6X8), +BVTP	
* 13	A-4649-455-A	PANEL BOARD, COMPLETE (EXCEPT AEP, UK, G, IT)	
* 13	A-4649-462-A	PANEL BOARD, COMPLETE (G)	
* 13	A-4649-465-A	PANEL BOARD, COMPLETE (AEP, UK, IT)	
* 14	A-4649-456-A	TRANSFORMER BOARD, COMPLETE (EXCEPT AEP, UK, G, IT)	
* 14	A-4649-461-A	TRANSFORMER BOARD, COMPLETE (G)	
* 14	A-4649-464-A	TRANSFORMER BOARD, COMPLETE (AEP, UK, IT)	
* 15	3-309-144-21	HEAT SINK	
* 16	4-954-699-01	PANEL, BACK	
* 17	4-941-548-01	LABEL, CLASS 1 (EXCEPT US, CND)	
* 18	3-703-044-26	LABEL, CAUTION (CND)	
FL301	1-519-738-11	INDICATOR TUBE, FLUORESCENT	
IC201	8-759-071-48	IC M5F7807L	
⚠T201	1-450-984-11	TRANSFORMER, POWER	

5-2. CD MECHANISM NECTION (1) (CDM23-5BD3)

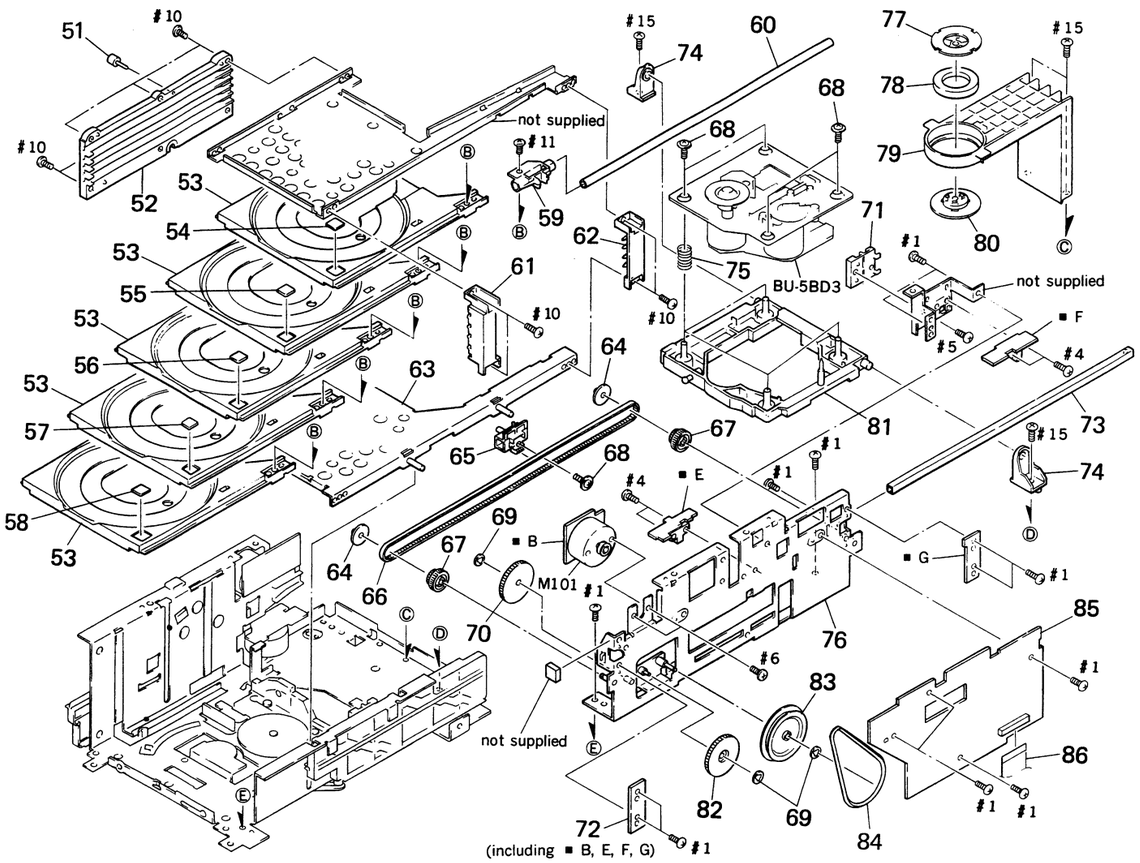

Ref. No.	Part No.	Description	Remark
51	4-954-649-01	SHAFT (ST-L)	
52	4-954-644-01	BRACKET (STOCKER L)	
53	4-954-638-01	TABLE, DISK	
54	4-954-651-01	EMBLEM (TABLE)	
55	4-954-651-11	EMBLEM (TABLE)	
56	4-954-651-21	EMBLEM (TABLE)	
57	4-954-651-31	EMBLEM (TABLE)	
58	4-954-651-41	EMBLEM (TABLE)	
59	4-954-639-01	GUIDE (TB)	
60	4-954-648-01	SHAFT (TABLE GUIDE)	
61	4-954-645-01	GUIDE (ST-RF)	
62	4-954-646-01	GUIDE (ST-RR)	
* 63	X-4942-943-1	BRACKET (ST-B) ASSY	
64	4-954-628-01	FLANGE (PULLEY)	
65	4-954-630-01	SLIDER (TB)	
66	4-954-634-01	BELT (SL)	
67	4-954-629-01	PULLEY (SL)	
68	4-933-134-01	SCREW (+PTPWH M2.6X6)	
69	3-669-595-00	WASHER (2), STOPPER	
70	4-954-627-01	GEAR (SL)	
* 71	4-954-621-01	STOPPER (TB)	
* 72	1-645-607-11	CDM MOTOR BOARD	
* 73	4-954-631-01	SHAFT (SL GUIDE)	
* 74	4-954-623-01	FULCRUM (BU)	
75	4-948-503-01	SPRING (BU), COMPRESSION	
* 76	X-4942-941-1	BRACKET (SL-A) ASSY	
77	4-929-762-01	YOKE, CHUCKING	
78	1-452-676-11	MAGNET	
79	4-954-650-01	HOLDER (MG)	
80	4-955-230-01	PULLEY (CHECKING)	
* 81	X-4942-942-1	HOLDER (BU) ASSY	
82	4-954-625-01	GEAR (CDM)	
83	3-372-516-01	PULLEY (LOADING)	
84	4-954-624-01	BELT (CDM)	
* 85	A-4649-352-A	CDM BOARD, COMPLETE (EXCEPT AEP, UK, G, IT)	
* 85	A-4649-463-A	CDM BOARD, COMPLETE (G)	
* 85	A-4649-466-A	CDM BOARD, COMPLETE (AEP, UK, IT)	
86	1-696-634-11	WIRE (FLAT TYPE)	
M101	A-4660-232-A	MOTOR (CDM) ASSY	

5-3. CD MECHANISM SECTION (2) (CDM23-5BD3)

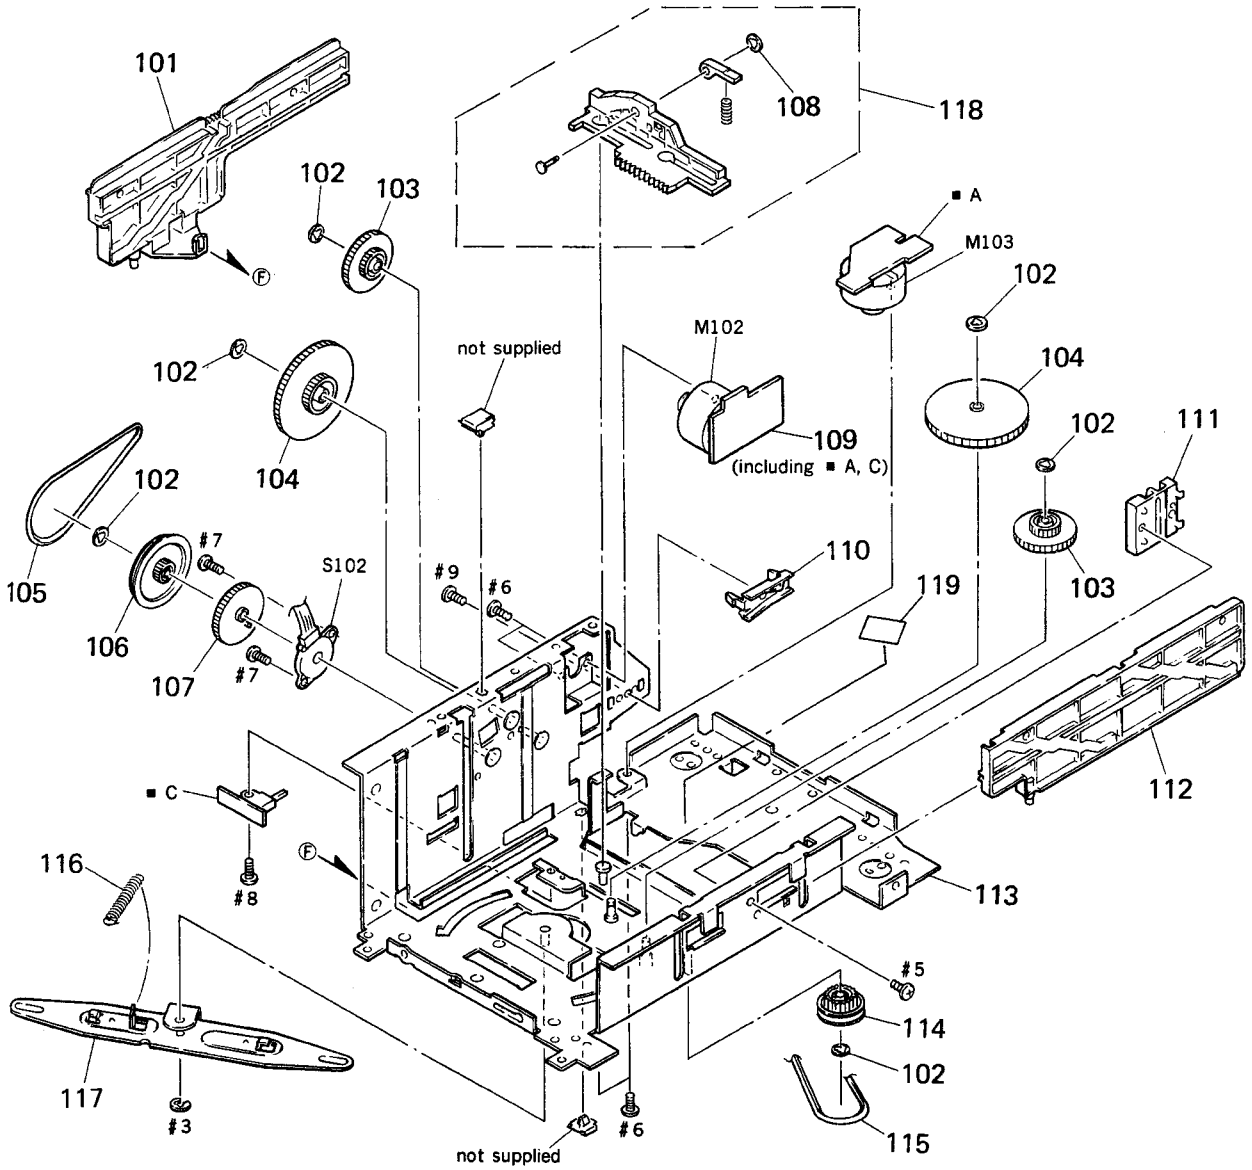

Ref. No.	Part No.	Description	Remark
101	X-4942-939-1	SLIDER (ST-L) ASSY	
102	3-669-595-00	WASHER (2), STOPPER	
103	4-954-625-01	GEAR (CDM)	
104	3-372-517-01	GEAR (LOADING)	
105	4-954-624-01	BELT (CDM)	
106	3-372-516-01	PULLEY (LOADING)	
107	4-954-636-01	GEAR (E)	
108	3-681-678-00	WASHER, SLIT	
* 109	1-645-607-11	CDM MOTOR BOARD	
* 110	4-954-633-01	GUIDE (TB-LR)	
* 111	4-954-621-01	STOPPER (TB)	

Ref. No.	Part No.	Description	Remark
112	X-4942-940-1	SLIDER (ST-R) ASSY	
* 113	X-4942-937-1	CHASSIS (CDM) ASSY	
114	4-954-637-01	PULLEY (BU)	
115	4-954-635-01	BELT (BU)	
116	4-955-168-01	SPRING, TENSION	
* 117	4-954-632-01	LEVER (JOINT)	
118	A-4660-167-A	SLIDER (BU CAM) ASSY	
* 119	4-928-473-01	INSULATOR	
M102	A-4460-232-A	MOTOR (CDM) ASSY	
M103	A-4460-232-A	MOTOR (CDM) ASSY	
S102	1-466-819-11	ENCORDER, ROTARY	

5-4. OPTICAL PICK-UP SECTION (BU-5BD3)

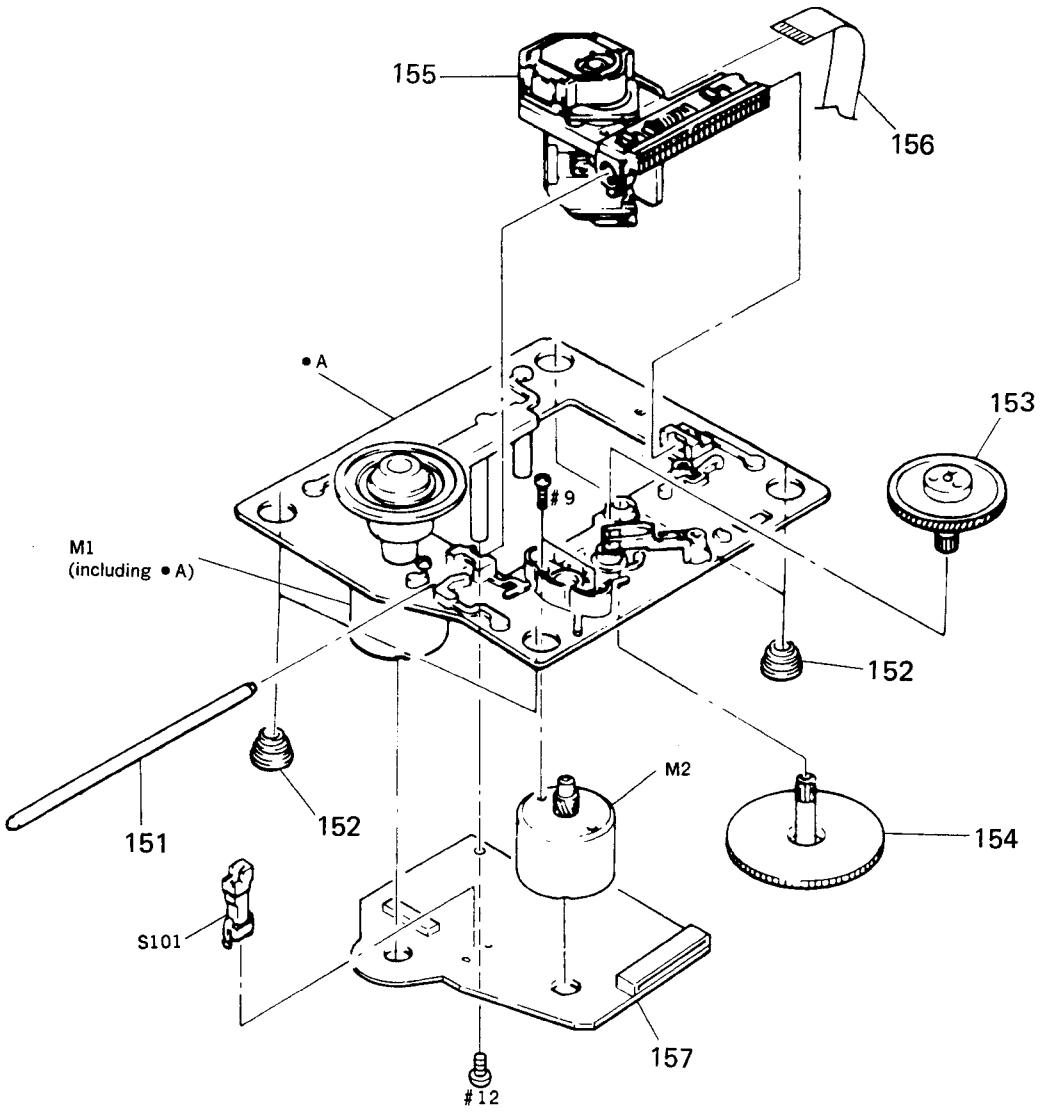

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
151	4-917-565-01	SHAFT, SLED	
152	4-951-940-01	INSULATOR (BU)	
153	4-917-567-01	GEAR (M)	
154	4-917-564-01	GEAR (P), FLATNESS	
⚠155	8-848-144-11	DEVICE, OPTICAL KSS-240A	
156	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
* 157	A-4617-371-A	BD BOARD, COMPLETE	
M1	X-4917-523-3	MOTOR ASSY, SPINDLE	
M2	X-4917-504-1	MOTOR ASSY, SLED	
S101	1-572-085-11	SWITCH, LEAF (LIMIT IN)	

SECTION 6
ELECTRICAL PARTS LIST

BD

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA ..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- CND : Canadian model
- G : Germany model
- IT : Italian model

Ref.No.	Part No.	Description		Remark
*	A-4617-371-A	BD BOARD, COMPLETE		
		**********		
		< CAPACITOR >		
C101	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C102	1-163-989-11	CERAMIC CHIP 0.033uF	10%	25V
C103	1-126-163-11	ELECT 4.7uF	20%	50V
C104	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C105	1-126-154-11	ELECT 47uF	20%	6.3V
C106	1-126-154-11	ELECT 47uF	20%	6.3V
C107	1-126-154-11	ELECT 47uF	20%	6.3V
C108	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C109	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C110	1-163-989-11	CERAMIC CHIP 0.033uF	10%	25V
C111	1-131-367-00	TANTALUM 22uF	10%	20V
C112	1-164-232-11	CERAMIC CHIP 0.01uF		50V
C113	1-164-232-11	CERAMIC CHIP 0.01uF		50V
C114	1-164-161-11	CERAMIC CHIP 0.0022uF	10%	100V
C115	1-164-161-11	CERAMIC CHIP 0.0022uF	10%	100V
C117	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C118	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C119	1-164-161-11	CERAMIC CHIP 0.0022uF	10%	100V
C120	1-163-989-11	CERAMIC CHIP 0.033uF	10%	25V
C151	1-163-019-00	CERAMIC CHIP 0.0068uF	10%	50V
C152	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C153	1-163-006-11	CERAMIC CHIP 560PF	10%	50V
C154	1-164-161-11	CERAMIC CHIP 0.0022uF	10%	100V
C155	1-163-023-00	CERAMIC CHIP 0.015uF	5%	50V
C171	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C172	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C173	1-163-038-00	CERAMIC CHIP 0.1uF		25V
C174	1-163-038-00	CERAMIC CHIP 0.1uF		25V
		< CONNECTOR >		
CN101	1-568-796-11	SOCKET, CONNECTOR 22P		
CN102	1-568-795-11	SOCKET, CONNECTOR 12P		
		< IC >		
IC101	8-752-053-73	IC CXA1372AQ		
IC102	8-759-822-36	IC LA6532M		
		< JUMPER RESISTOR >		
J101	1-216-295-00	METAL CHIP 0	5%	1/10W
J102	1-216-295-00	METAL CHIP 0	5%	1/10W
		< TRANSISTOR >		
Q101	8-729-901-01	TRANSISTOR DTC144EK		
		< RESISTOR >		
R101	1-216-097-00	METAL CHIP 100K	5%	1/10W
R102	1-216-095-00	METAL CHIP 82K	5%	1/10W
R103	1-216-091-00	METAL CHIP 56K	5%	1/10W
R104	1-216-099-00	METAL CHIP 120K	5%	1/10W
R105	1-216-069-00	METAL CHIP 6.8K	5%	1/10W
R106	1-216-061-00	METAL CHIP 3.3K	5%	1/10W
R107	1-216-114-00	METAL GLAZE 510K	5%	1/10W
R108	1-216-105-00	METAL CHIP 220K	5%	1/10W
R109	1-216-061-00	METAL CHIP 3.3K	5%	1/10W
R110	1-216-049-00	METAL CHIP 1K	5%	1/10W
R111	1-216-049-00	METAL CHIP 1K	5%	1/10W
R112	1-216-083-00	METAL CHIP 27K	5%	1/10W
R113	1-216-071-00	METAL CHIP 8.2K	5%	1/10W
R114	1-216-105-00	METAL CHIP 220K	5%	1/10W
R152	1-216-073-00	METAL CHIP 10K	5%	1/10W
R153	1-216-085-00	METAL CHIP 33K	5%	1/10W
R154	1-216-085-00	METAL CHIP 33K	5%	1/10W
R155	1-216-093-00	METAL CHIP 68K	5%	1/10W
R156	1-216-081-00	METAL CHIP 22K	5%	1/10W
R157	1-216-079-00	METAL CHIP 18K	5%	1/10W
R158	1-216-079-00	METAL CHIP 18K	5%	1/10W
R159	1-216-079-00	METAL CHIP 18K	5%	1/10W
R160	1-216-049-00	METAL CHIP 1K	5%	1/10W
R171	1-216-001-00	METAL CHIP 10	5%	1/10W
R172	1-216-001-00	METAL CHIP 10	5%	1/10W
R173	1-216-001-00	METAL CHIP 10	5%	1/10W
R174	1-216-001-00	METAL CHIP 10	5%	1/10W

BD **CDM**

Ref. No.	Part No.	Description			Remark
		< VARIABLE RESISTOR >			
RV101	1-238-600-11	RES, ADJ, CARBON 10K			
RV101	1-241-630-11	RES, ADJ, CARBON 10K			
RV102	1-238-600-11	RES, ADJ, CARBON 10K			
RV102	1-241-630-11	RES, ADJ, CARBON 10K			
		< SWITCH >			
S101	1-572-085-11	SWITCH, LEAF (LIMIT IN)			
**********					
*	A-4649-352-A	CDM BOARD, COMPLETE (EXCEPT AEP, UK, G, IT)			
*	A-4649-463-A	CDM BOARD, COMPLETE (G)			
*	A-4649-466-A	CDM BOARD, COMPLETE (AEP, UK, IT)			
		**********			
*	4-942-204-01	PLATE, GROUND			
		< CAPACITOR >			
C212	1-164-346-11	CERAMIC CHIP	1uF		16V
C213	1-164-346-11	CERAMIC CHIP	1uF		16V
C214	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C215	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C216	1-125-486-11	DOUBLE LAYERS	0.22F		5.5V
C217	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C218	1-164-346-11	CERAMIC CHIP	1uF		16V
C219	1-164-346-11	CERAMIC CHIP	1uF		16V
C220	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C221	1-163-145-00	CERAMIC CHIP	0.0015uF	5%	50V
C222	1-164-346-11	CERAMIC CHIP	1uF		16V
C223	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C224	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C225	1-164-346-11	CERAMIC CHIP	1uF		16V
C226	1-164-346-11	CERAMIC CHIP	1uF		16V
C227	1-164-346-11	CERAMIC CHIP	1uF		16V
C228	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C229	1-163-229-11	CERAMIC CHIP	12PF	5%	50V
C230	1-163-227-11	CERAMIC CHIP	10PF	5%	50V
C231	1-164-346-11	CERAMIC CHIP	1uF		16V
C232	1-164-346-11	CERAMIC CHIP	1uF		16V
C233	1-164-346-11	CERAMIC CHIP	1uF		16V
C234	1-164-346-11	CERAMIC CHIP	1uF		16V
C235	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C236	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C237	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C238	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C241	1-164-346-11	CERAMIC CHIP	1uF		16V
C242	1-163-137-00	CERAMIC CHIP	680PF	5%	50V
C243	1-163-137-00	CERAMIC CHIP	680PF	5%	50V
C244	1-164-346-11	CERAMIC CHIP	1uF		16V
C245	1-164-346-11	CERAMIC CHIP	1uF		16V
C250	1-126-405-11	ELECT CHIP	10uF	20%	50V
C252	1-126-924-11	ELECT	330uF	20%	10V
C253	1-126-923-11	ELECT	220uF	20%	10V
		< CONNECTOR >			
* CN202	1-695-629-11	CONNECTOR, FFC/FPC (ZIF) 22P			
CN203	1-580-891-11	SOCKET, CONNECTOR (SMT) 22P			
* CN206	1-568-951-11	PIN, CONNECTOR 2P			
* CN208	1-573-275-11	PIN, CONNECTOR 5P			
CN209	1-506-468-11	PIN, CONNECTOR 3P			
CN210	1-506-468-11	PIN, CONNECTOR 3P			
CN211	1-506-469-11	PIN, CONNECTOR 4P			
		< DIODE >			
D205	8-719-990-39	DIODE	DCB010		
D206	8-719-210-33	DIODE	EC10DS2		
D207	8-719-210-33	DIODE	EC10DS2		
D208	8-719-210-33	DIODE	EC10DS2		
		< FUSE >			
⚠F201	1-532-775-11	FUSE, MICRO (SECONDARY) 125V, 0.8A (EXCEPT AEP, UK, G, IT)			
		< IC >			
IC206	8-759-512-81	IC	LH5160N-10L		
IC207	8-759-008-79	IC	MC14011BF		
IC208	8-759-009-21	IC	MC14093BF		
IC209	8-752-337-26	IC	CXD2500AQ		
IC210	8-752-337-10	IC	CXD2554M		
IC211	8-759-506-63	IC	PCM67U		
IC212	8-759-636-55	IC	M5218AFP		
IC214	8-759-501-73	IC	BA6418N		
IC215	8-759-501-73	IC	BA6418N		
IC216	8-759-501-73	IC	BA6418N		
IC250	8-759-076-35	IC	uPD75516GF-399-3B9		
		< IC LINK >			
⚠ICP201	1-532-838-21	LINK, IC 0.3A (AEP, UK, G, IT)			
		< JUMPER RESISTOR >			
JR202	1-216-295-00	METAL CHIP	0	5%	1/10W
JR204	1-216-295-00	METAL CHIP	0	5%	1/10W
JR207	1-216-295-00	METAL CHIP	0	5%	1/10W
		< COIL >			
L201	1-410-385-11	INDUCTOR CHIP	22uH		
L202	1-410-385-11	INDUCTOR CHIP	22uH		

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MC-Service

Ref. No.	Part No.	Description			Remark
L203	1-410-385-11	INDUCTOR CHIP	22uH		
L205	1-410-385-11	INDUCTOR CHIP	22uH		
		< TRANSISTOR >			
Q201	8-729-804-41	TRANSISTOR	2SB1122-S		
Q202	8-729-602-21	TRANSISTOR	2SC4154-F		
		< RESISTOR >			
R202	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R203	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R204	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R205	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R206	1-216-073-00	METAL CHIP	10K	5%	1/10W
R207	1-216-073-00	METAL CHIP	10K	5%	1/10W
R208	1-216-073-00	METAL CHIP	10K	5%	1/10W
R209	1-216-073-00	METAL CHIP	10K	5%	1/10W
R210	1-216-073-00	METAL CHIP	10K	5%	1/10W
R211	1-216-073-00	METAL CHIP	10K	5%	1/10W
R212	1-216-073-00	METAL CHIP	10K	5%	1/10W
R213	1-216-073-00	METAL CHIP	10K	5%	1/10W
R214	1-216-073-00	METAL CHIP	10K	5%	1/10W
R215	1-216-073-00	METAL CHIP	10K	5%	1/10W
R216	1-216-073-00	METAL CHIP	10K	5%	1/10W
R217	1-216-073-00	METAL CHIP	10K	5%	1/10W
R218	1-216-073-00	METAL CHIP	10K	5%	1/10W
R219	1-216-073-00	METAL CHIP	10K	5%	1/10W
R220	1-216-073-00	METAL CHIP	10K	5%	1/10W
R221	1-216-049-00	METAL CHIP	1K	5%	1/10W
R222	1-216-073-00	METAL CHIP	10K	5%	1/10W
R223	1-216-073-00	METAL CHIP	10K	5%	1/10W
R224	1-216-073-00	METAL CHIP	10K	5%	1/10W
R225	1-216-073-00	METAL CHIP	10K	5%	1/10W
R226	1-216-073-00	METAL CHIP	10K	5%	1/10W
R227	1-216-073-00	METAL CHIP	10K	5%	1/10W
R228	1-216-073-00	METAL CHIP	10K	5%	1/10W
R229	1-216-073-00	METAL CHIP	10K	5%	1/10W
R230	1-216-073-00	METAL CHIP	10K	5%	1/10W
R231	1-216-073-00	METAL CHIP	10K	5%	1/10W
R232	1-216-073-00	METAL CHIP	10K	5%	1/10W
R233	1-216-073-00	METAL CHIP	10K	5%	1/10W
R234	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R235	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R236	1-216-073-00	METAL CHIP	10K	5%	1/10W
R237	1-216-073-00	METAL CHIP	10K	5%	1/10W
R238	1-216-049-00	METAL CHIP	1K	5%	1/10W
R239	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R240	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R241	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R242	1-216-073-00	METAL CHIP	10K	5%	1/10W
R243	1-216-097-00	METAL CHIP	100K	5%	1/10W
R244	1-216-041-00	METAL CHIP	470	5%	1/10W
R245	1-216-041-00	METAL CHIP	470	5%	1/10W
R246	1-216-041-00	METAL CHIP	470	5%	1/10W
R247	1-216-041-00	METAL CHIP	470	5%	1/10W
R248	1-216-033-00	METAL CHIP	220	5%	1/10W
R249	1-216-041-00	METAL CHIP	470	5%	1/10W
R250	1-216-041-00	METAL CHIP	470	5%	1/10W
R251	1-216-041-00	METAL CHIP	470	5%	1/10W
R252	1-216-041-00	METAL CHIP	470	5%	1/10W
R253	1-216-064-00	METAL CHIP	4.3K	5%	1/10W
R254	1-216-064-00	METAL CHIP	4.3K	5%	1/10W
R255	1-216-105-00	METAL CHIP	220K	5%	1/10W
R256	1-216-105-00	METAL CHIP	220K	5%	1/10W
R257	1-216-013-00	METAL CHIP	33	5%	1/10W
R258	1-216-033-00	METAL CHIP	220	5%	1/10W
R259	1-216-033-00	METAL CHIP	220	5%	1/10W
R260	1-216-073-00	METAL CHIP	10K	5%	1/10W
R261	1-216-073-00	METAL CHIP	10K	5%	1/10W
⚠R262	1-249-397-11	CARBON	22	5%	1/4W F
⚠R263	1-249-397-11	CARBON	22	5%	1/4W F
R264	1-216-043-00	METAL CHIP	560	5%	1/10W
R265	1-216-043-00	METAL CHIP	560	5%	1/10W
R266	1-216-073-00	METAL CHIP	10K	5%	1/10W
R267	1-216-073-00	METAL CHIP	10K	5%	1/10W
R268	1-216-049-00	METAL CHIP	1K	5%	1/10W
R269	1-216-025-00	METAL CHIP	100	5%	1/10W
R270	1-216-025-00	METAL CHIP	100	5%	1/10W
R271	1-216-025-00	METAL CHIP	100	5%	1/10W
R272	1-216-025-00	METAL CHIP	100	5%	1/10W
R273	1-216-025-00	METAL CHIP	100	5%	1/10W
		< TEST PIN >			
* TP201	1-695-630-11	PIN, CONNECTOR 6P			
		< VIBRATOR >			
X201	1-577-359-21	VIBRATOR, CERAMIC (4.19MHz)			
X202	1-567-908-11	VIBRATOR, CRYSTAL (16MHz)			

****

*	1-645-607-11	CDM MOTOR BOARD			
		**********			
		< CAPACITOR >			
C101	1-164-159-11	CERAMIC	0.1uF		50V
C102	1-164-159-11	CERAMIC	0.1uF		50V
C103	1-164-159-11	CERAMIC	0.1uF		50V

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

CDM MOTOR | PANEL

Ref.No.	Part No.	Description				Remark
		< CONNECTOR >				
* CN105	1-568-934-11	PIN, CONNECTOR 7P				
* CN106	1-568-954-11	PIN, CONNECTOR 5P				
		< IC >				
IC401	8-759-071-52	IC ON1023-S				
IC601	8-759-071-52	IC ON1023-S				
		< RESISTOR >				
⚠R401	1-249-407-11	CARBON	150	5%	1/4W	F
R402	1-249-429-11	CARBON	10K	5%	1/4W	
⚠R601	1-249-407-11	CARBON	150	5%	1/4W	F
R602	1-249-429-11	CARBON	10K	5%	1/4W	
		< SWITCH >				
S101	1-571-300-21	SWITCH, ROTARY (BU UP/DOWN)				
S103	1-692-080-11	SWITCH, PUSH (1 KEY) (TRAY OUT)				
S104	1-692-080-11	SWITCH, PUSH (1 KEY) (TRAY IN)				
**********						
*	A-4649-455-A	PANEL BOARD, COMPLETE (EXCEPT AEP, UK, G, IT)				
*	A-4649-462-A	PANEL BOARD, COMPLETE (G)				
*	A-4649-465-A	PANEL BOARD, COMPLETE (AEP, UK, IT)				
		**********				
*	4-954-701-01	HOLDER (FL TUBE)				
		< CAPACITOR >				
C301	1-164-346-11	CERAMIC CHIP	1uF		16V	
C302	1-164-346-11	CERAMIC CHIP	1uF		16V	
C303	1-164-161-11	CERAMIC CHIP	0.0022uF	10%	100V	
C304	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C305	1-164-346-11	CERAMIC CHIP	1uF		16V	
C306	1-164-346-11	CERAMIC CHIP	1uF		16V	
C307	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C308	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C309	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C310	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C311	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C312	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C313	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C314	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C315	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C316	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C317	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C318	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C319	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C320	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C321	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	
C322	1-163-035-00	CERAMIC CHIP	0.047uF	10%	25V	
C323	1-164-232-11	CERAMIC CHIP	0.01uF		50V	
C324	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	
C325	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	
C326	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
C327	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	
		< CONNECTOR >				
CN301	1-580-874-11	SOCKET, CONNECTOR (SMT) 22P				
		< DIODE >				
D301	8-719-990-39	DIODE DCB010				
D302	8-719-027-34	DIODE LN1361C (DISC 1)				
D303	8-719-027-34	DIODE LN1361C (DISC 1)				
D304	8-719-027-34	DIODE LN1361C (DISC 1)				
D305	8-719-027-34	DIODE LN1361C (DISC 2)				
D306	8-719-027-34	DIODE LN1361C (DISC 2)				
D307	8-719-027-34	DIODE LN1361C (DISC 2)				
D308	8-719-027-34	DIODE LN1361C (DISC 3)				
D309	8-719-027-34	DIODE LN1361C (DISC 3)				
D310	8-719-027-34	DIODE LN1361C (DISC 3)				
D311	8-719-027-34	DIODE LN1361C (DISC 4)				
D312	8-719-027-34	DIODE LN1361C (DISC 4)				
D313	8-719-027-34	DIODE LN1361C (DISC 4)				
D314	8-719-027-34	DIODE LN1361C (DISC 5)				
D315	8-719-027-34	DIODE LN1361C (DISC 5)				
D316	8-719-027-34	DIODE LN1361C (DISC 5)				
D317	8-719-023-03	DIODE LN1461C (DISC 1)				
D318	8-719-023-03	DIODE LN1461C (DISC 1)				
D319	8-719-023-03	DIODE LN1461C (DISC 2)				
D320	8-719-023-03	DIODE LN1461C (DISC 2)				
D321	8-719-023-03	DIODE LN1461C (DISC 3)				
D322	8-719-023-03	DIODE LN1461C (DISC 3)				
D323	8-719-023-03	DIODE LN1461C (DISC 4)				
D324	8-719-023-03	DIODE LN1461C (DISC 4)				
D325	8-719-023-03	DIODE LN1461C (DISC 5)				
D326	8-719-023-03	DIODE LN1461C (DISC 5)				
D327	8-719-029-95	DIODE TLN117				
		< FLUORESCENT INDICATOR >				
FL301	1-519-738-11	INDICATOR TUBE, FLUORESCENT				
		< IC >				
IC301	8-759-077-15	IC uPD75518GF-059-3B9				
IC302	8-759-077-16	IC M66004M4FP				

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MC-Service

Ref. No.	Part No.	Description			Remark
		< COIL >			
L301	1-410-385-11	INDUCTOR CHIP	22uH		
L302	1-410-385-11	INDUCTOR CHIP	22uH		
		< TRANSISTOR >			
Q301	8-729-602-21	TRANSISTOR	2SC4154-F		
Q302	8-729-602-36	TRANSISTOR	2SA1602		
Q303	8-729-804-41	TRANSISTOR	2SB1122-S		
Q304	8-729-018-23	TRANSISTOR	TPS626-F		
Q306	8-729-602-21	TRANSISTOR	2SC4154-F		
Q307	8-729-602-21	TRANSISTOR	2SC4154-F		
Q308	8-729-602-21	TRANSISTOR	2SC4154-F		
Q309	8-729-602-21	TRANSISTOR	2SC4154-F		
Q311	8-729-602-21	TRANSISTOR	2SC4154-F		
Q312	8-729-602-21	TRANSISTOR	2SC4154-F		
Q313	8-729-602-21	TRANSISTOR	2SC4154-F		
		< RESISTOR >			
R301	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R302	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R303	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R304	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R305	1-216-073-00	METAL CHIP	10K	5%	1/10W
R306	1-216-073-00	METAL CHIP	10K	5%	1/10W
R307	1-216-073-00	METAL CHIP	10K	5%	1/10W
R308	1-216-073-00	METAL CHIP	10K	5%	1/10W
R309	1-216-073-00	METAL CHIP	10K	5%	1/10W
R310	1-216-073-00	METAL CHIP	10K	5%	1/10W
R311	1-216-073-00	METAL CHIP	10K	5%	1/10W
R312	1-216-089-00	METAL CHIP	47K	5%	1/10W
R313	1-216-073-00	METAL CHIP	10K	5%	1/10W
R314	1-216-073-00	METAL CHIP	10K	5%	1/10W
R315	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R316	1-216-049-00	METAL CHIP	1K	5%	1/10W
R317	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R318	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R319	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R320	1-216-017-00	METAL CHIP	47	5%	1/10W
R321	1-216-017-00	METAL CHIP	47	5%	1/10W
R322	1-216-017-00	METAL CHIP	47	5%	1/10W
R323	1-216-017-00	METAL CHIP	47	5%	1/10W
R324	1-216-017-00	METAL CHIP	47	5%	1/10W
R325	1-216-019-00	METAL CHIP	56	5%	1/10W
R326	1-216-019-00	METAL CHIP	56	5%	1/10W
R327	1-216-019-00	METAL CHIP	56	5%	1/10W
R328	1-216-019-00	METAL CHIP	56	5%	1/10W
R329	1-216-019-00	METAL CHIP	56	5%	1/10W
R330	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description			Remark
R331	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R332	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R333	1-216-073-00	METAL CHIP	10K	5%	1/10W
R335	1-216-049-00	METAL CHIP	1K	5%	1/10W
R336	1-216-049-00	METAL CHIP	1K	5%	1/10W
R337	1-216-079-00	METAL CHIP	18K	5%	1/10W
R340	1-216-027-00	METAL CHIP	120	5%	1/10W
R341	1-216-027-00	METAL CHIP	120	5%	1/10W
R342	1-216-027-00	METAL CHIP	120	5%	1/10W
R343	1-216-027-00	METAL CHIP	120	5%	1/10W
R344	1-216-027-00	METAL CHIP	120	5%	1/10W
R349	1-216-073-00	METAL CHIP	10K	5%	1/10W
R350	1-216-073-00	METAL CHIP	10K	5%	1/10W
R351	1-216-041-00	METAL CHIP	470	5%	1/10W
R352	1-216-041-00	METAL CHIP	470	5%	1/10W
R353	1-216-041-00	METAL CHIP	470	5%	1/10W
R354	1-216-041-00	METAL CHIP	470	5%	1/10W
R355	1-216-045-00	METAL CHIP	680	5%	1/10W
R356	1-216-045-00	METAL CHIP	680	5%	1/10W
R357	1-216-045-00	METAL CHIP	680	5%	1/10W
R358	1-216-045-00	METAL CHIP	680	5%	1/10W
R359	1-216-049-00	METAL CHIP	1K	5%	1/10W
R360	1-216-049-00	METAL CHIP	1K	5%	1/10W
R361	1-216-049-00	METAL CHIP	1K	5%	1/10W
R362	1-216-049-00	METAL CHIP	1K	5%	1/10W
R363	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R364	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R365	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R366	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R367	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R368	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R369	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R370	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R371	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R372	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R373	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R374	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R375	1-216-075-00	METAL CHIP	12K	5%	1/10W
R376	1-216-075-00	METAL CHIP	12K	5%	1/10W
R377	1-216-075-00	METAL CHIP	12K	5%	1/10W
R378	1-216-075-00	METAL CHIP	12K	5%	1/10W
R385	1-216-073-00	METAL CHIP	10K	5%	1/10W
R386	1-216-073-00	METAL CHIP	10K	5%	1/10W
R387	1-216-073-00	METAL CHIP	10K	5%	1/10W
R388	1-216-073-00	METAL CHIP	10K	5%	1/10W
R389	1-216-073-00	METAL CHIP	10K	5%	1/10W

PANEL TRANSFORMER

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
S301	1-692-296-11	SWITCH, KEY BOARD (▶▶ ▶▶|)	
S302	1-692-296-11	SWITCH, KEY BOARD (|◀◀ ◀◀)	
S303	1-692-296-11	SWITCH, KEY BOARD (■)	
S304	1-692-296-11	SWITCH, KEY BOARD (▷)	
S305	1-692-296-11	SWITCH, KEY BOARD (DISC 1)	
S306	1-692-296-11	SWITCH, KEY BOARD (⏏ DISC 1)	
S308	1-692-296-11	SWITCH, KEY BOARD (❚❚)	
S309	1-692-296-11	SWITCH, KEY BOARD (DISC 2)	
S310	1-692-296-11	SWITCH, KEY BOARD (⏏ DISC 2)	
S312	1-692-296-11	SWITCH, KEY BOARD (CONTINUE)	
S313	1-692-296-11	SWITCH, KEY BOARD (DISC 3)	
S314	1-692-296-11	SWITCH, KEY BOARD (⏏ DISC 3)	
S316	1-692-296-11	SWITCH, KEY BOARD (SHUFFLE)	
S317	1-692-296-11	SWITCH, KEY BOARD (DISC 4)	
S318	1-692-296-11	SWITCH, KEY BOARD (⏏ DISC 4)	
S320	1-692-296-11	SWITCH, KEY BOARD (PROGRAM)	
S321	1-692-296-11	SWITCH, KEY BOARD (DISC 5)	
S322	1-692-296-11	SWITCH, KEY BOARD (⏏ DISC 5)	
S324	1-692-296-11	SWITCH, KEY BOARD (REPEAT)	
S325	1-692-296-11	SWITCH, KEY BOARD (CHARATER ▷)	
S326	1-692-296-11	SWITCH, KEY BOARD (CHARATER ◁)	
S328	1-692-296-11	SWITCH, KEY BOARD (CURSOR)	
S329	1-692-296-11	SWITCH, KEY BOARD (MEMO INPUT)	
S330	1-692-296-11	SWITCH, KEY BOARD (ERASE)	
S331	1-692-296-11	SWITCH, KEY BOARD (TIME/MEMO)	
S332	1-692-296-11	SWITCH, KEY BOARD (SOUND FIELD FILE)	
		< VIBRATOR >	
X301	1-577-359-21	VIBRATOR, CERAMIC (4.19MHz)	
**********			
*	A-4649-456-A	TRANSFORMER BOARD, COMPLETE (EXCEPT AEP, UK, G, IT)	
*	A-4649-461-A	TRANSFORMER BOARD, COMPLETE (G)	
*	A-4649-464-A	TRANSFORMER BOARD, COMPLETE (AEP, UK, IT)	
		**********	
*	3-309-144-21	HEAT SINK	
	7-682-547-04	SCREW +BVTT 3X6 (S)	
		< CAPACITOR >	
C200	1-126-939-11	ELECT 10000uF 20% 16V	
C202	1-164-159-11	CERAMIC 0.1uF 50V	
C203	1-164-159-11	CERAMIC 0.1uF 50V	
C205	1-124-443-00	ELECT 100uF 20% 10V	
C206	1-161-375-00	CERAMIC 0.0022uF 20% 50V	
C207	1-164-159-11	CERAMIC 0.1uF 50V	
C208	1-124-443-00	ELECT 100uF 20% 10V	
C209	1-164-159-11	CERAMIC 0.1uF 50V	
C210	1-164-159-11	CERAMIC 0.1uF 50V	
C211	1-124-443-00	ELECT 100uF 20% 10V	
C246	1-124-572-11	ELECT 100uF 20% 63V	
C247	1-124-907-11	ELECT 10uF 20% 50V	
C248	1-161-329-00	CERAMIC 0.0068uF 20% 16V	
C249	1-161-329-00	CERAMIC 0.0068uF 20% 16V	
C251	1-124-907-11	ELECT 10uF 20% 50V	
C254	1-124-902-00	ELECT 0.47uF 20% 50V	
C255	1-124-902-00	ELECT 0.47uF 20% 50V	
C256	1-124-907-11	ELECT 10uF 20% 50V	
C257	1-124-907-11	ELECT 10uF 20% 50V	
C258	1-162-282-31	CERAMIC 100PF 10% 50V	
		< CONNECTOR >	
* CN201	1-569-624-11	SOCKET, CONNECTOR 17P (SYSTEM CONTROL 2)	
* CN213	1-564-499-11	PIN, CONNECTOR 6P	
* CN216	1-562-327-00	SOCKET, CONNECTOR 3P	
		< DIODE >	
D201	8-719-210-21	DIODE 11EQS04	
D202	8-719-210-21	DIODE 11EQS04	
D203	8-719-200-82	DIODE 11ES2	
D204	8-719-014-86	DIODE UZP-6.8BB	
D206	8-719-987-63	DIODE 1N4148M	
		< IC >	
IC201	8-759-604-86	IC M5F7807L	
IC202	8-759-604-30	IC M5F7808L	
IC203	8-759-821-93	IC LA5601	
IC204	8-759-821-93	IC LA5601	
IC213	8-759-633-42	IC M5293L	
		< RESISTOR >	
⚠R201	1-249-393-11	CARBON 10 5% 1/4W F	
⚠R202	1-249-405-11	CARBON 100 5% 1/4W F	
		< TRANSFORMER >	
⚠T201	1-450-984-11	TRANSFORMER, POWER	
**********			

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MC-Service

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	
		************	
11	1-696-633-11	WIRE (FLAT TYPE)	
78	1-452-676-11	MAGNET	
86	1-696-634-11	WIRE (FLAT TYPE)	
⚠155	8-848-144-11	DEVICE, OPTICAL KSS-240A	
156	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
M1	X-4917-523-3	MOTOR ASSY, SPINDLE	
M2	X-4917-504-1	MOTOR ASSY, SLED	
M101	A-4660-232-A	MOTOR (CDM) ASSY	
M102	A-4460-232-A	MOTOR (CDM) ASSY	
M103	A-4460-232-A	MOTOR (CDM) ASSY	
S102	1-466-819-11	ENCORDER, ROTARY	

****

HARDWARE LIST

****

#1	7-682-546-04	SCREW +BVTT 3X5 (S)	
#2	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
#3	7-624-106-04	STOP RING 3.0, TYPE -E	
#4	7-682-546-09	SCREW +PTT 3X5 (S)	
#5	7-685-645-79	SCREW +BTP 3X6 TYPE2 N-S	
#6	7-621-775-00	SCREW +B 2.6X3	
#7	7-621-255-35	SCREW +BVTT 2X5 (S)	
#8	7-621-773-95	SCREW +BVTT 2.6X6 (S)	
#9	7-685-531-14	SCREW +BTP 2.6X4 TYPE2 N-S	
#10	7-621-770-XX	SCREW +PTT 2.6X8 (S)	
#11	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S	
#12	7-685-134-19	SCREW +BTP 2.6X8 TYPE2 N-S	
#13	7-621-255-15	SCREW +P 2X3	
#14	7-682-547-09	SCREW +BVTT 3X6 (S)	
#15	7-682-547-04	SCREW +BVTT 3X6 (S)	

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

CDP-H3750

SONY
SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Tourist Model

CORRECTION-1

Correct your service manual as shown below.

☛ : **indicates corrected portion.**

Page	INCORRECT			CORRECT	
	No.	Part No.	Description	Part No.	Description
21	M102	A-4460-232-A	MOTOR (CDM) ASSY	☛ A-4660-232-A	MOTOR (CDM) ASSY
	M103	A-4460-232-A	MOTOR (CDM) ASSY	☛ A-4660-232-A	MOTOR (CDM) ASSY

9-957-394-91

Sony Corporation
Audio Group

English
93C04100-1

©1993.3

Published by Audio Corporate Planning Group

CDP-H3750

SONY®
SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Tourist Model

SUPPLEMENT-1

File this supplement-1 with the Service Manual.

Subject :
1. TEST MODE
2. BLOCK DIAGRAM
3. IC PIN DESCRIPTION

TEST MODE

1. Press the three keys: DISC1, DISC5 △ and ■ simultaneously to enter the Test Mode.

(1) FL Tube All Lighting

This mode is entered just after power is turned on.

(2) FL Tube Segment Check

This mode is entered when DISC1 △ key is pressed in mode (1).

Make sure that the mode changes from * 1 to * 2 to * 3 and then to * 1 and so on in turn each time DISC1 △ key is pressed.

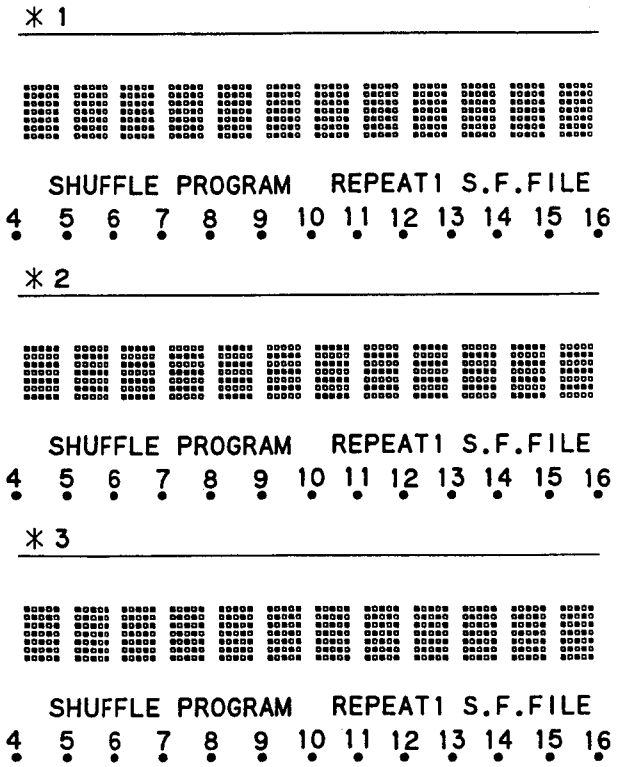
* 1
SHUFFLE PROGRAM REPEAT1 S.F.FILE
4 5 6 7 8 9 10 11 12 13 14 15 16
* 2
SHUFFLE PROGRAM REPEAT1 S.F.FILE
4 5 6 7 8 9 10 11 12 13 14 15 16
* 3
SHUFFLE PROGRAM REPEAT1 S.F.FILE
4 5 6 7 8 9 10 11 12 13 14 15 16

(3) Key Check

This mode is entered and "1" is displayed when and key other than DISC1 △ is pressed in mode (1). The number displayed is incremented each time any new key is pressed. Make sure that "7" is displayed when all the different keys have been pressed.

Note that once a key has been pressed, even if that key is pressed again, it is not be counted.

* To exit mode (2) and mode (3), press the three keys: DISC1, DISC5 △ and ■ simultaneously.

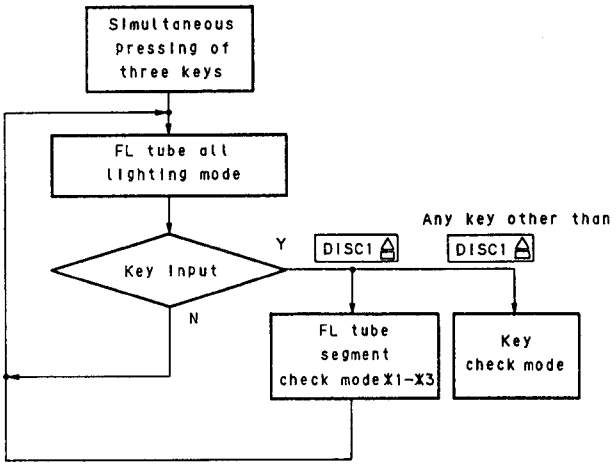

2. Test Mode for CD System Controller (IC250)

(1) ADJUST Mode

In this mode, the system looks like performing normal operation except that:

- When IC250 pin ㊸ (ADJ) is set "L" after power is turned on:
  - ① The system will not monitor GFS during PLAY, PAUSE and SEARCH. It will not STOP even if GFS remains "L" (NG).
  - ② No high speed feed is performed during SEARCH.
  - ③ Focus gain will be returned to normal during PLAY. (Usually, when focus is locked, the gain is decreased to redure noise.)
- When IC250 pin ㊾ (AFADJ) is set "L" after power is turned on:
  - ① CLV mode during PLAY will be CLV-S (rough servo) independent of the state of pin ⑲ (ADJ) as the CLV-S lock function.

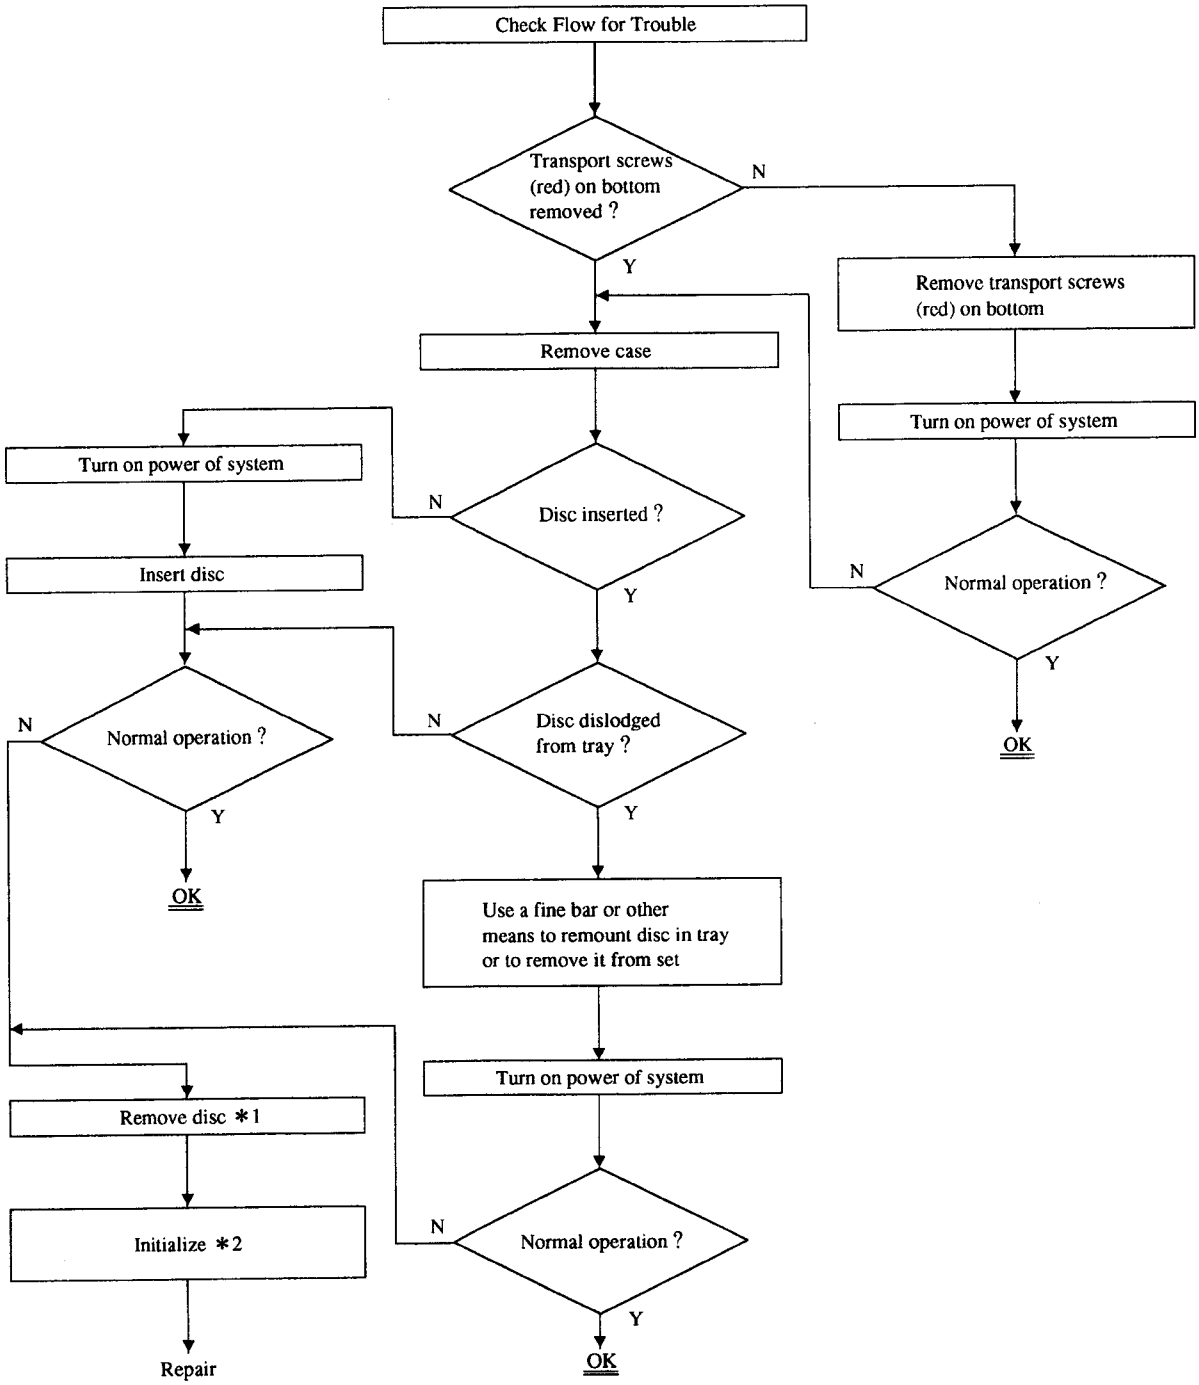
Check Flow for Trouble
Transport screws (red) on bottom removed ?
N
Y
Remove transport screws (red) on bottom
Turn on power of system
Normal operation ?
N
Y
OK
Remove case
Turn on power of system
Disc inserted ?
N
Y
Insert disc
Normal operation ?
N
Y
OK
Disc dislodged from tray ?
N
Y
Use a fine bar or other means to remount disc in tray or to remove it from set
Turn on power of system
Normal operation ?
N
Y
OK
Remove disc *1
Initialize *2
Repair

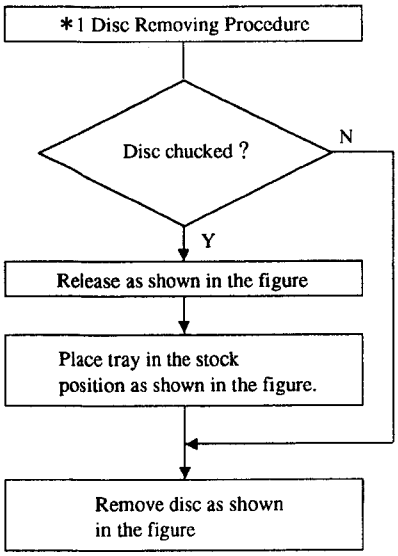
*1 Disc Removing Procedure
Disc chucked ?
N
Y
Release as shown in the figure
Place tray in the stock position as shown in the figure.
Remove disc as shown in the figure

Disc Removing Procedure

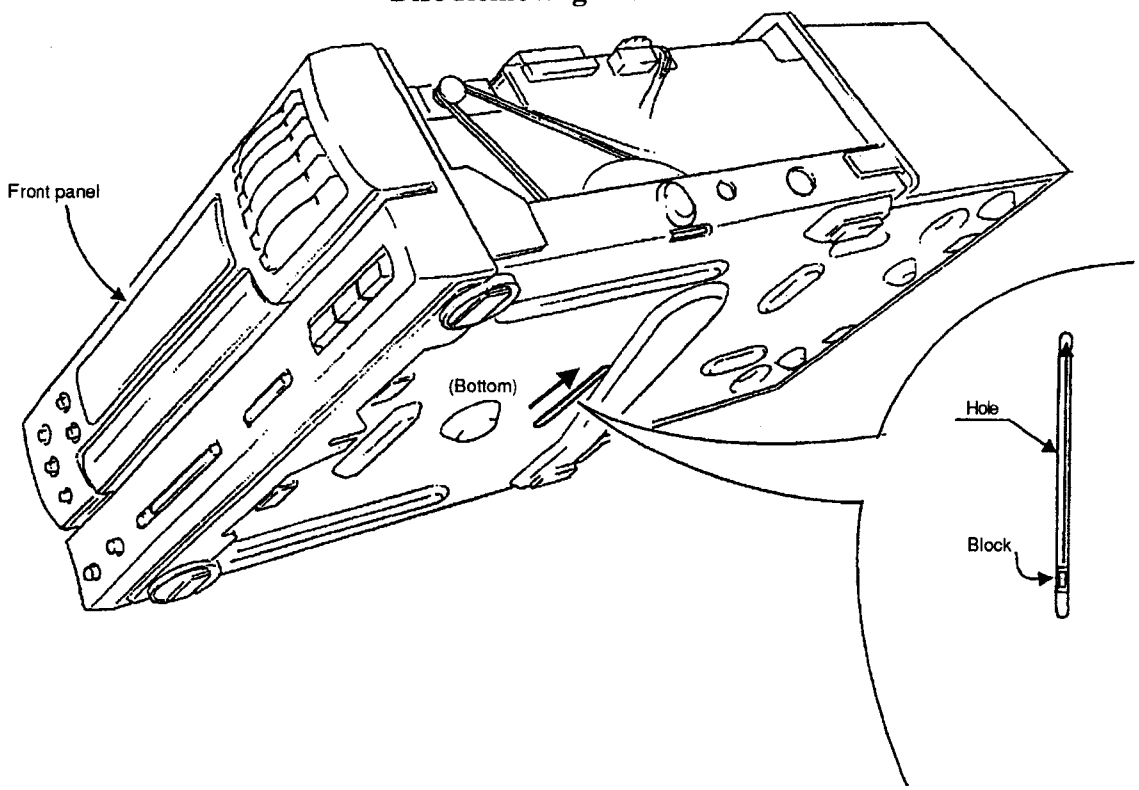

1) Insert a fine bar into the hole and move the block in the arrow direction.
(If disc is chucked, to prevent fall of disc, place the set as illustrated below.)

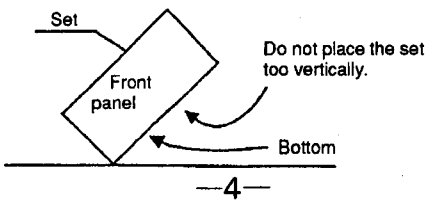

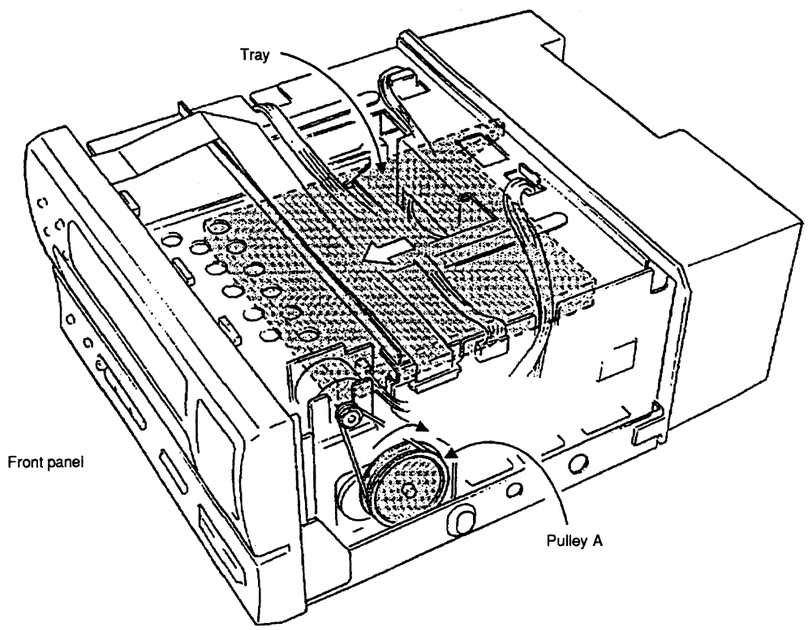

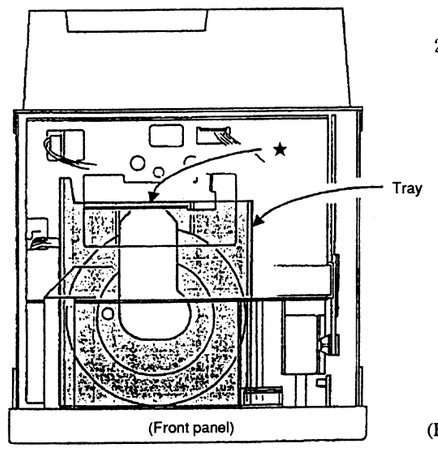

(Fig. A)

2) Rotate pulley A clockwise (↷). While observing the disc tray moves in the arrow (⇦) direction, move the tray until its rear is aligned with others (★ marked portion). (See Fig. A)

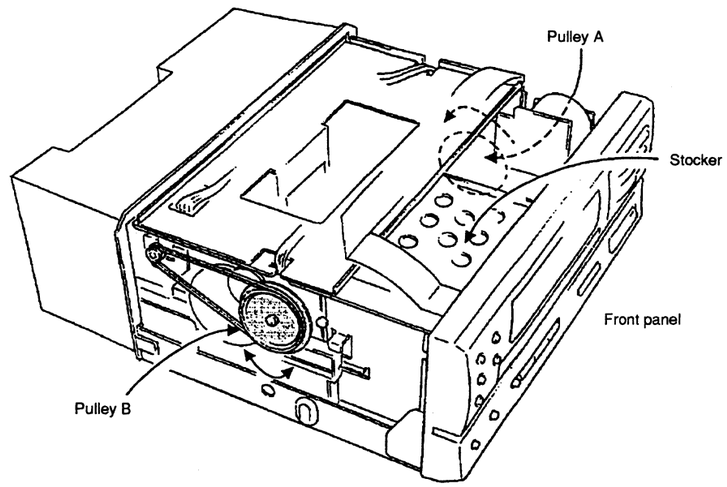

3) Rotating pulley B will move the stocker where disc trays are stocked up and down. Open the cover on the front panel (Fig. B) and adjust so that the tray containing the disc is at the cover position (Fig. C).

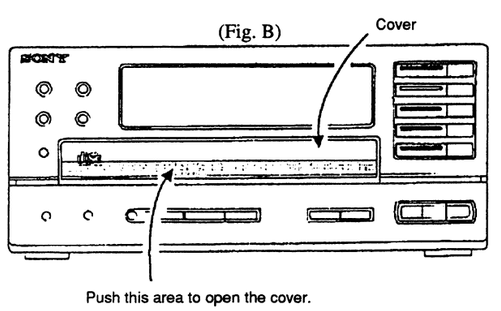

(Fig. B)

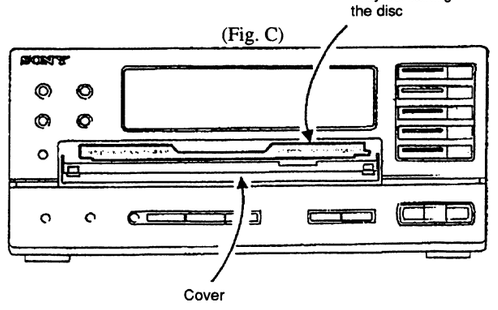

(Fig. C)

4) Rotating pulley A counterclockwise (↶) will eject the tray containing disc. Remove the disc, then rotate pulley A clockwise to return the tray to the position as shown in Fig. A.

- If some trays contain disc, repeat Items 3) and 4).

* 2 Initializing Procedure

1) If mechanism is operated when power of system is turned on :
Make sure that all disc are removed. Open DISC No. 1.
↓
Turn off power of system.
↓
"OFF" characters flash on the CD display.
↓
2) If mechanism is operated when power of system is turned on :
Move disc tray as shown in the figure.

Initializing Procedure

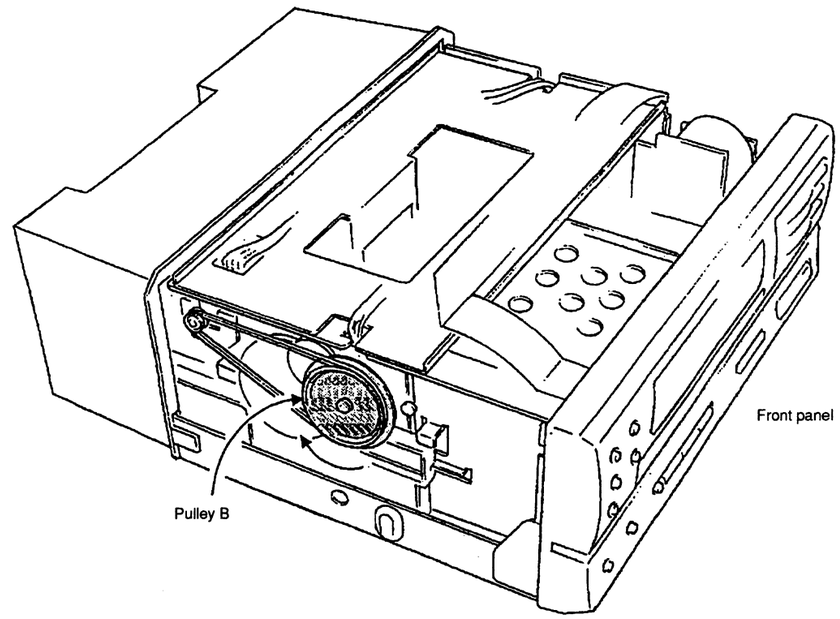

* Make sure that all the trays are arranged to the position shown in Fig. A, then rotate pulley B in the arrow direction until it stops.

BLOCK DIAGRAM

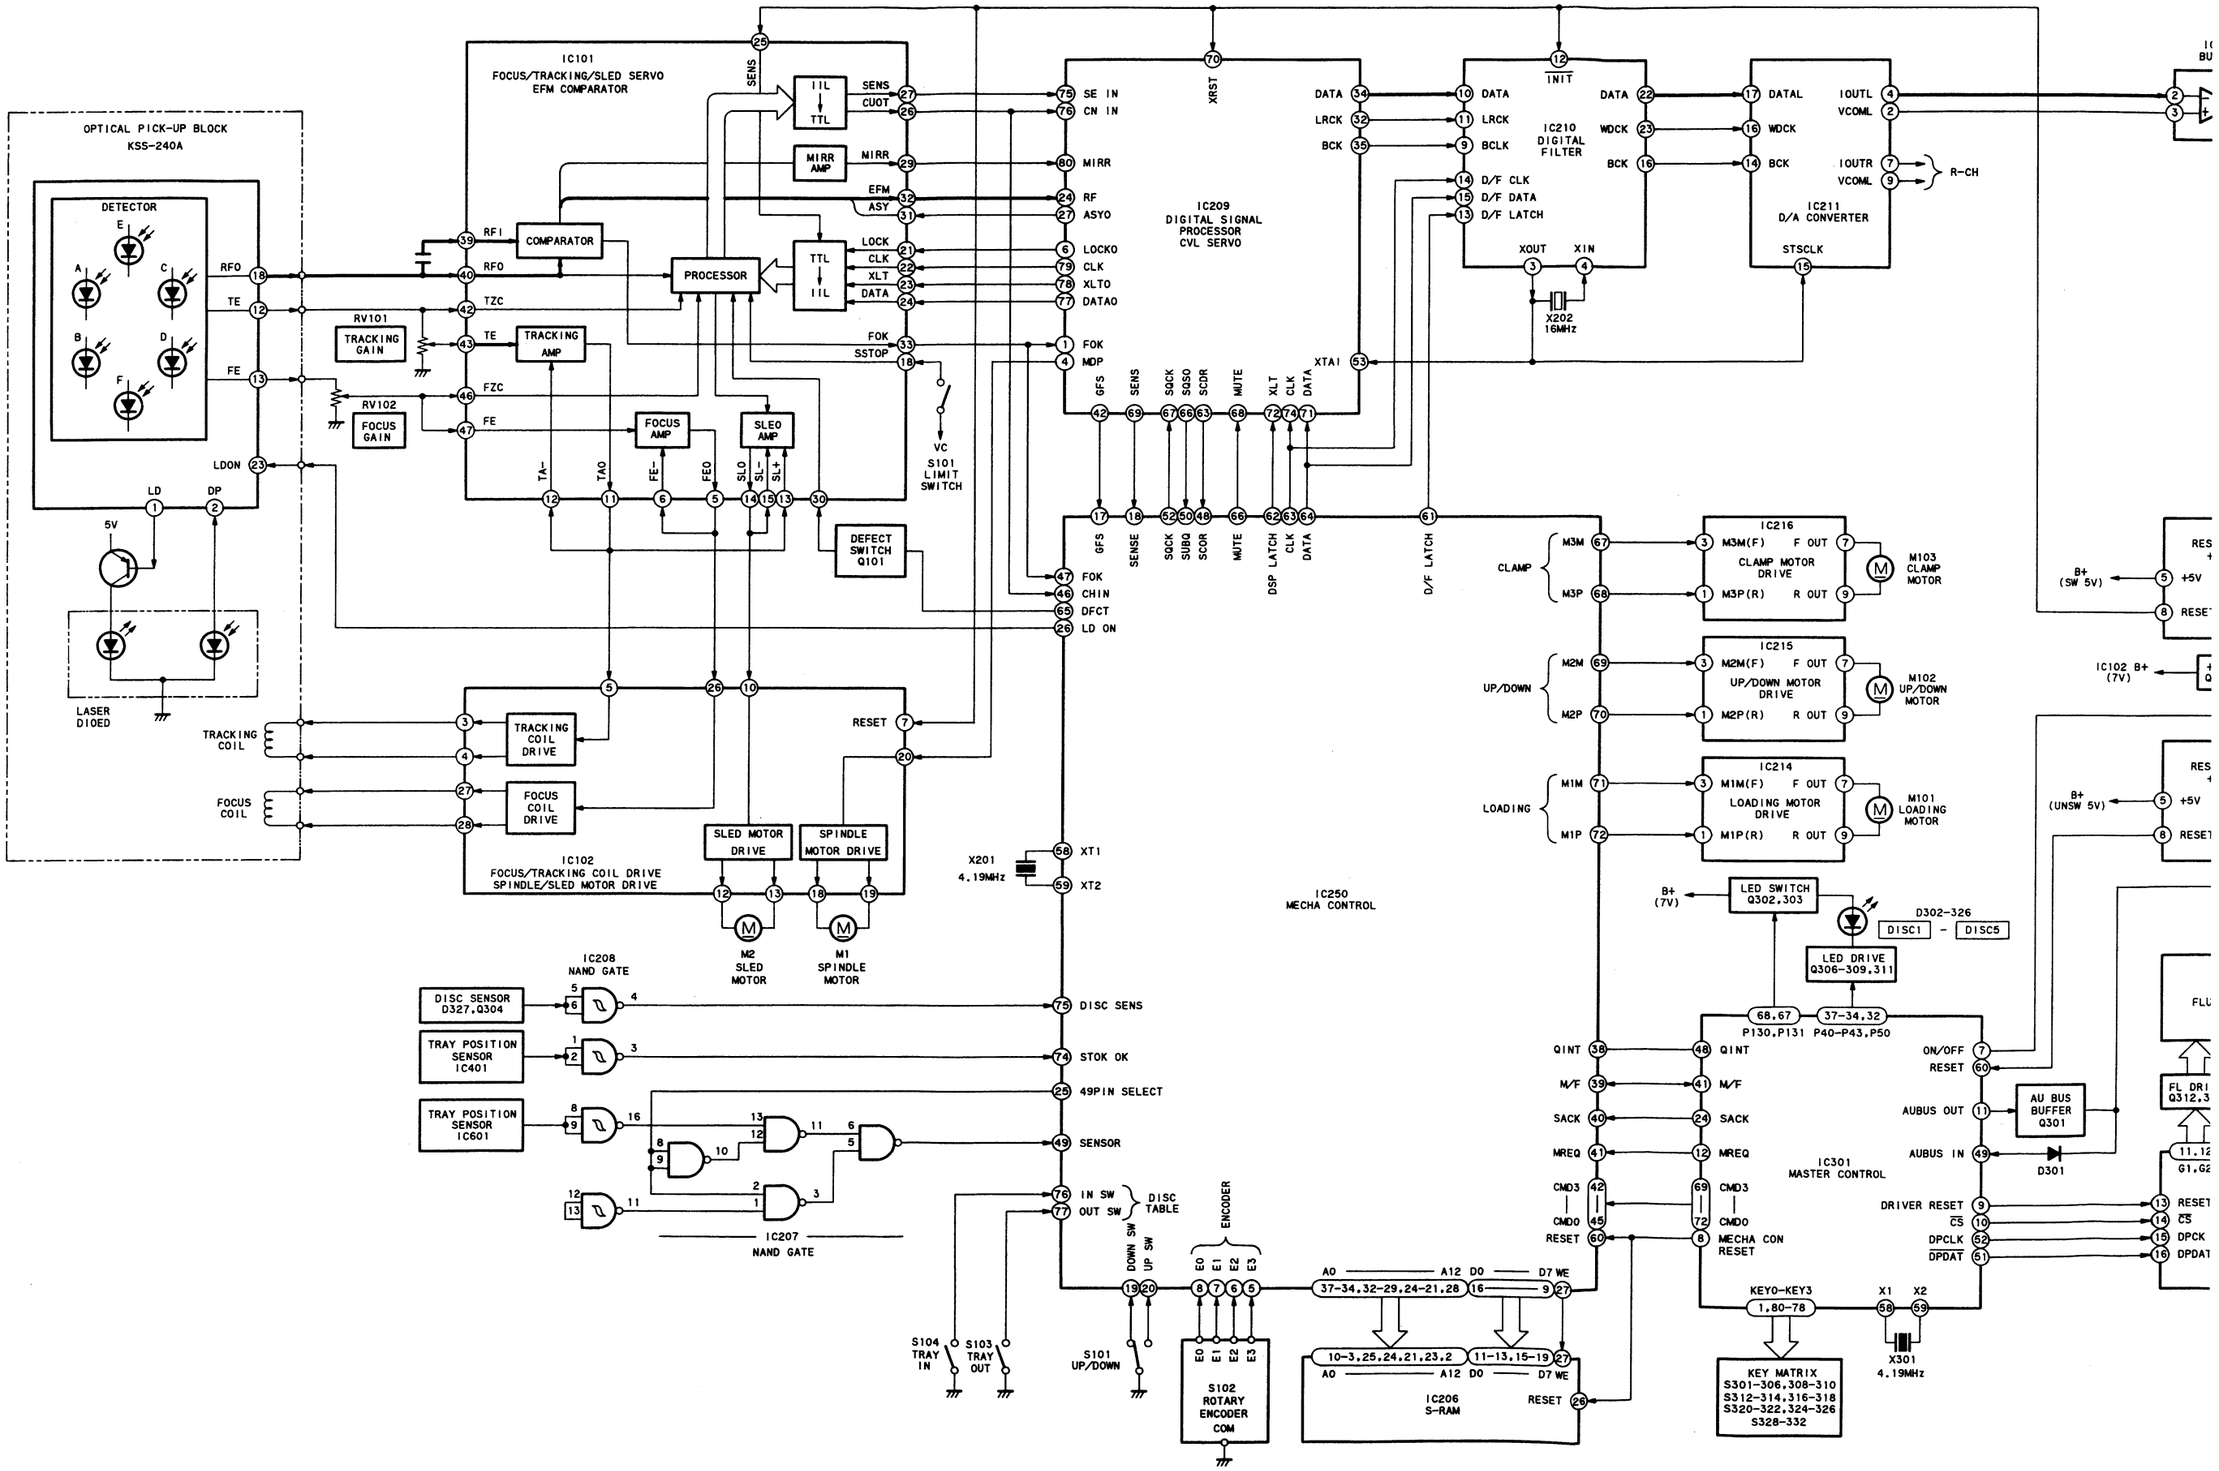

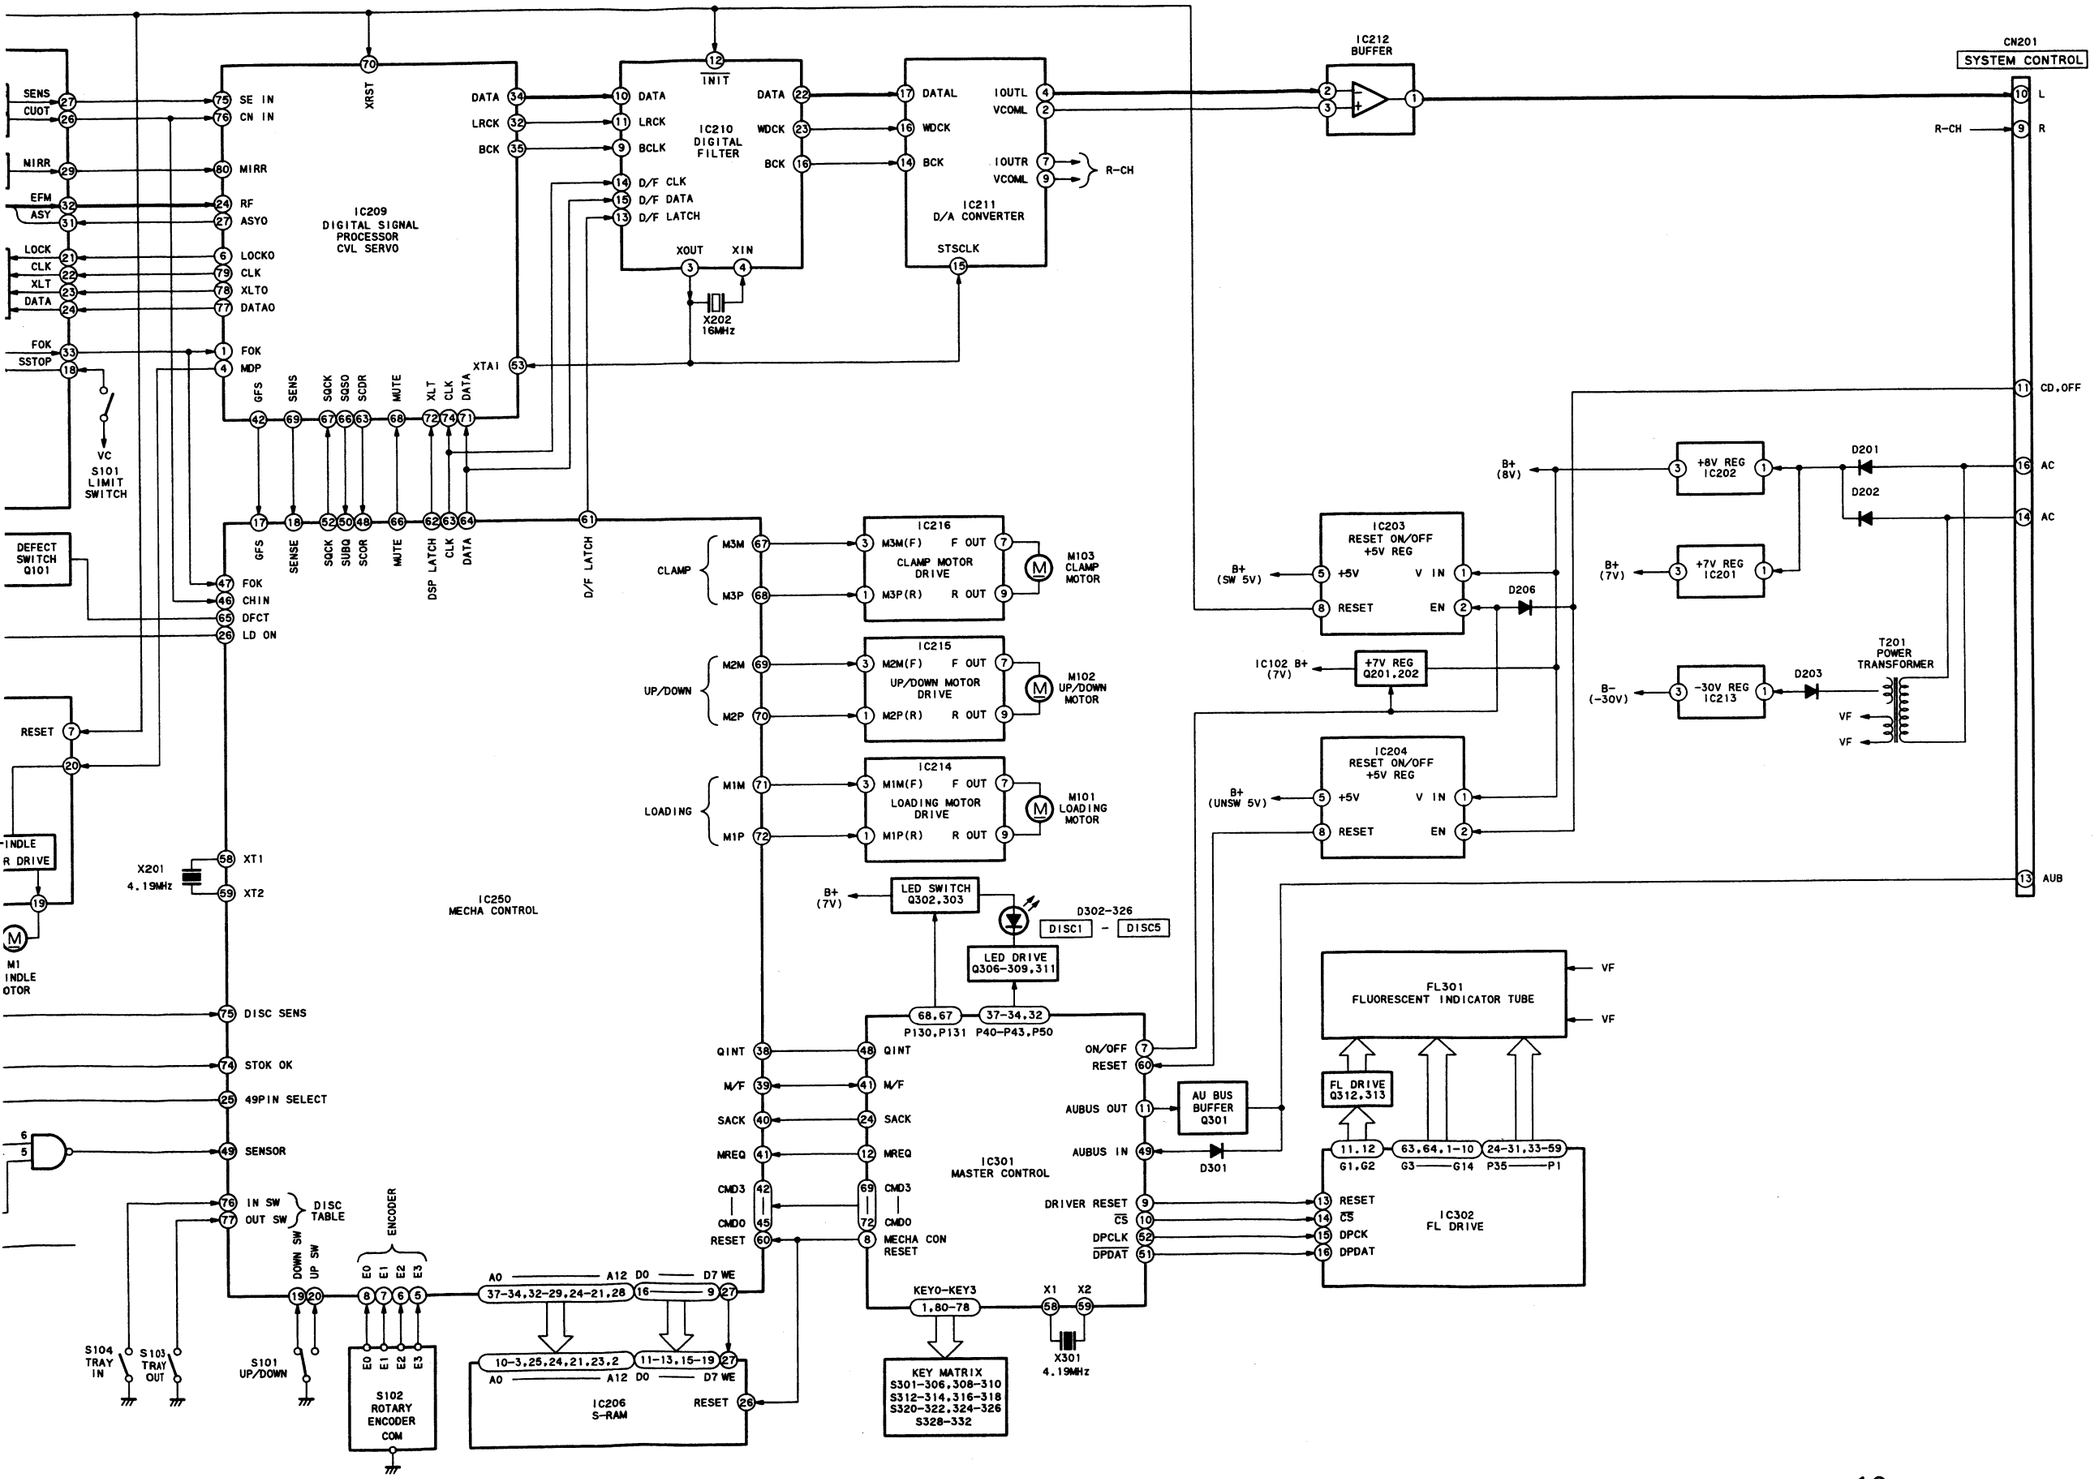
IC209
DIGITAL SIGNAL PROCESSOR
CVL SERVO
IC210
DIGITAL FILTER
IC211
D/A CONVERTER
IC212
BUFFER
CN201
SYSTEM CONTROL
IC203
RESET ON/OFF +5V REG
IC204
RESET ON/OFF +5V REG
+8V REG IC202
+7V REG IC201
+7V REG Q201,202
-30V REG IC213
T201
POWER TRANSFORMER
D201
D202
D203
D206
IC216
CLAMP MOTOR DRIVE
M103
CLAMP MOTOR
IC215
UP/DOWN MOTOR DRIVE
M102
UP/DOWN MOTOR
IC214
LOADING MOTOR DRIVE
M101
LOADING MOTOR
IC250
MECHA CONTROL
X201
4.19MHz
X202
16MHz
X301
4.19MHz
S101
LIMIT SWITCH
S102
ROTARY ENCODER
COM
S103
TRAY OUT
S104
TRAY IN
DEFECT SWITCH Q101
LED SWITCH Q302,303
LED DRIVE Q306-309,311
D302-326
DISC1 - DISC5
FL301
FLUORESCENT INDICATOR TUBE
FL DRIVE Q312,313
IC302
FL DRIVE
AU BUS BUFFER Q301
D301
IC301
MASTER CONTROL
KEY MATRIX
S301-306,308-310
S312-314,316-318
S320-322,324-326
S328-332
IC206
S-RAM
R-CH
B+ (8V)
B+ (SW 5V)
B+ (7V)
B+ (UNSW 5V)
IC102 B+ (7V)
B- (-30V)
VF
AUB
CD.OFF
DISC SENS
STOK OK
49PIN SELECT
SENSOR
IN SW
OUT SW
DISC TABLE
RESET
XRST
INIT
XOUT
XIN
XTAI
XT1
XT2
FOK
MDP
GFS
SENS
SQCK
SQSO
SCOR
MUTE
XLT
CLK
DATA
DSP LATCH
D/F LATCH
D/F CLK
D/F DATA
D/F LATCH
WDCK
BCK
LRCK
BCLK
MIRR
EFM
ASY
LOCK
CLK
XLT
DATA
SE IN
CN IN
RF
ASYO
LOCKO
DATAO
CHIN
DFCT
LD ON
SQSO
SUBQ
SCOR
DOWN SW
UP SW
ENCODER
E0
E1
E2
E3
A0
A12
D0
D7
WE
CLAMP
UP/DOWN
LOADING
M3M
M3P
M2M
M2P
M1M
M1P
QINT
M/F
SACK
MREQ
CMD3
CMD0
MECHA CON RESET
ON/OFF
AUBUS OUT
AUBUS IN
DRIVER RESET
DPCLK
DPDAT
KEY0-KEY3
X1
X2
P130,P131
P40-P43,P50
G1,G2
G3
G14
P35
P1

IC PIN DESCRIPTION

• IC250 μPD75516GF-399-3B9 Mechanism Controller Microprocessor

For operations with the CD unit's IC101 (RF signal processing and servo), IC209 (DSP and digital filter) loading control, IC206 (SRAM), and data exchange with IC301 (master controller).

Pin No.	Pin Name	I/O	Description
1	NC		No connect pin
2	AVDD	—	Power pin (+5V)
3, 4	VDD	—	Power pin (+5V)
5—8	E3—0	I	Stocker position detection encoder input (4-bit parallel decoder). * 1
9—16	D7—0	O	Data output port of IC206 (64K SRAM) (8-bit parallel data).
17	GFS	I	GFS signal input from IC209 (CXD2500BQ). "L" for NG, "H" for OK.
18	SENSE	I	SENS input from IC101 (CXD1372Q) and IC209 (CXD2500BQ).
19	$\overline{\text{DOWN SW}}$	I	Down input of S101 (BD Up and Down switch).
20	$\overline{\text{UP SW}}$	I	Up input of S101 (BD Up and Down switch).
21—24	A11—8	O	IC106 (64K SRAM) address output port.
25	49 PIN SELECT	O	Pin ㊾ function select. Always "L" for use of Stock IN in this set.
26	LD ON	O	BD laser diode control output. "H" to toggle ON, "L" to toggle OFF.
27	WE	O	IC206 (64K SRAM) write enable output. "H" to disable, "L" to enable.
28—32	A12, A7—4	O	IC206 (64K SRAM) address output port.
33	GND	—	Power pin (GND)
34—37	A3—0	O	IC206 (64K SRAM) address output port.
38	QINT	I/O	Interrupt signal output during communication with master controller. * 2
39	M/$\overline{\text{F}}$	I/O	To determine type of communication with master controller. "H" for mechanism command data, "L" for file command data.
40	SACK	I/O	Answer code input from master controller during communication with master.
41	MREQ	I/O	Master request signal input for communication with master controller.
42—45	CMD3—0	I/O	Command data line in communication with master controller.
46	CHIN	I	Track jump count input from IC101 (CXD1372Q).
47	FOK	I	Focus OK signal input from IC101 (CXD1372Q). "H" for OK.
48	SCOR	I	Sub code sink S0+S1 detection input from IC209 (CXD2500BQ).
49	SENSER	I	STOK IN signal input in this set.
50	SUBQ	I	Sub code Q data input from IC209 (CXD2500BQ).
51	GND	—	Power pin (GND)
52	SQCK	O	Sub code Q data read clock output to IC209 (CXD2500BQ).
53	$\overline{\text{ADJ}}$	I	Test Mode input. "L" to enter Test Mode.
54	GND	—	Power pin (GND)
55	XT1	—	Not used (GND)
56	XT2	—	Not used (Open)
57	GND	—	Power pin (GND)
58, 59	X1, 2	I	System clock input (4.19MHz)
60	$\overline{\text{RESET}}$	I	System clock input. "L" to reset.
61	D/F LATCH	O	IC210 (MSM6538) latch signal output.
62	DSP LATCH	O	IC209 (CXD2500BQ) latch signal output.
63	CLK	O	Clock data output to IC210 (MSM6538).

Pin No.	Pin Name	I/O	Description
64	DATA	O	Data output to IC210 (MSM6538).
65	DFCT SW	O	Used during focus search to turn OFF (set "H") flaw detection circuit of ON/OFF select output DISC in DEFECT circuit of IC101 (CXD1372Q).
66	MUTE	O	Muting control output. "H" to mute.
67	M3M	O	Clamp motor control output
68	M3P	O	
69	M2M	O	Stocker motor control output
70	M2P	O	
71	M1M	O	Loading motor control output
72	M1P	O	
73	AGND	—	Power pin (GND)
74	STOK OK	I	Tray position detection input. "L" for stocker UP/DOWN enabled position.
75	DISC SENS	I	Used to determine whether disc is present or not. "⊓": With, "—": Without
76	$\overline{\text{IN SW}}$	I	S103 (Loading In switch) input
77	$\overline{\text{OUT SW}}$	I	S104 (Loading Out switch) input
78	$\overline{\text{TEST}}$	I	Test Mode input. "L" for Test Mode.
79	$\overline{\text{AF ADJ}}$	I	
80	NC		No connect pin

	UP	DOWN	BREAK
P	H	L	H
M	L	H	H

	UP	DOWN	BREAK
P	H	L	H
M	L	H	H

	OUT	IN	BREAK
P	H	L	H
M	L	H	H

* 1 Encoder output waveform from DISC1 to DISC5

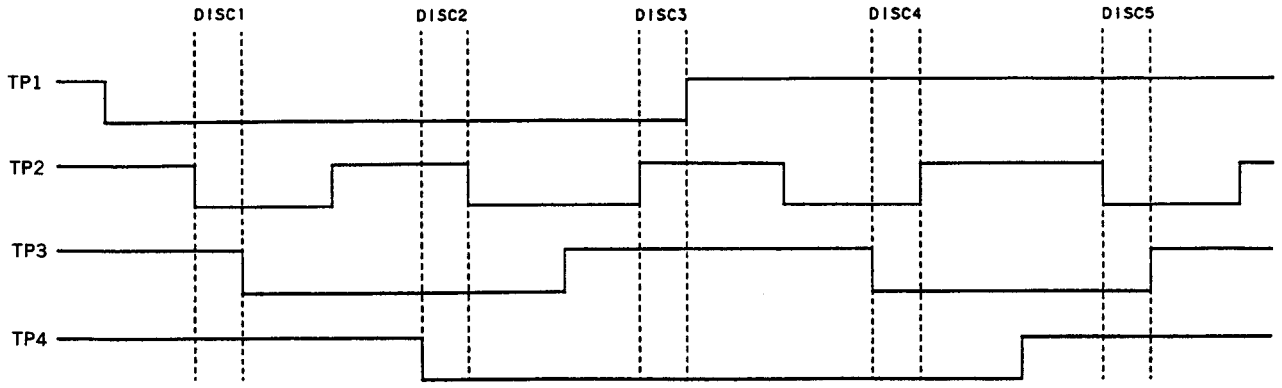

Waveform Output Points

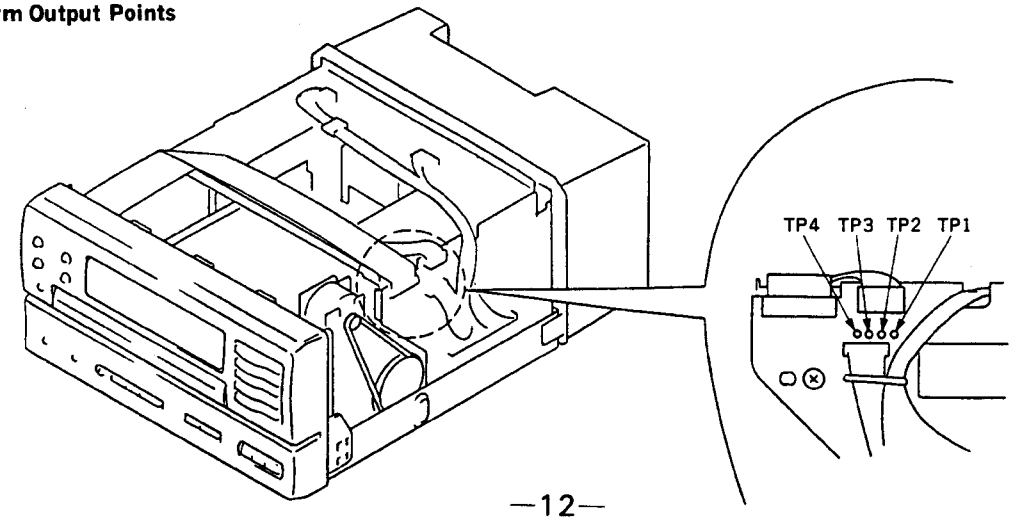

* 2 Communications between mechanism microprocessor IC250 and master microprocessor IC301
Format in general communications.....(1) and (2)

Initial Communication

Initial communication is made between mechanism microprocessor IC250 and master microprocessor IC301 in their respective initial routines. This has a different format from general communications. Handshake is performed in MTREQ and SACK. If any fault occurs in initial communication, the communication stops at that points, so the indicator remains extinguished.

(1) Command Receive and Transmission
Communications between mechanism controller and master controller are made using eight signal lines between their ports (CMD1, CMD2, CMD3, CMD4, MREQ, SACK, M/F and QINT).

Format of Receive and Transmission from Master

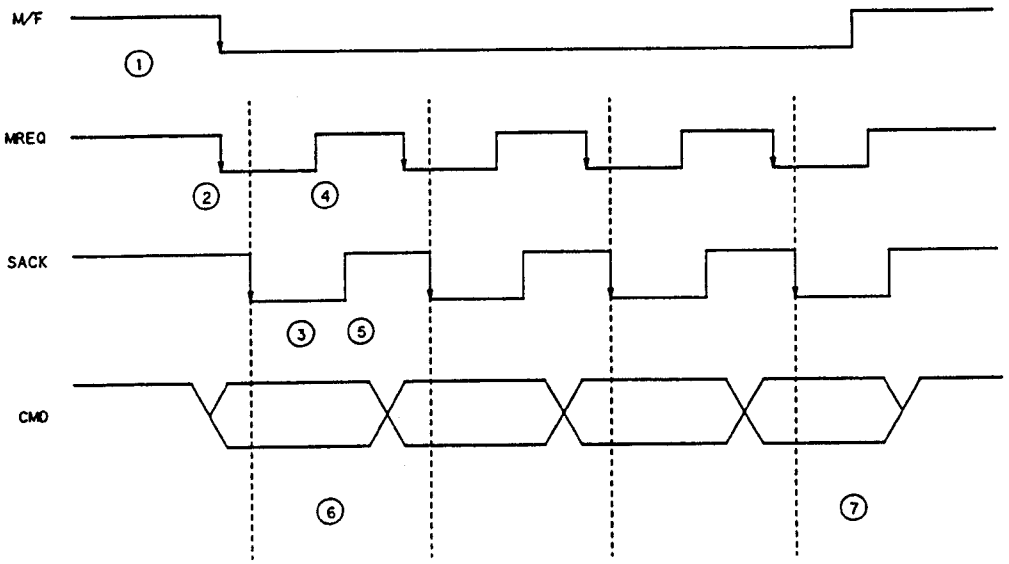

Timing of transmit from master controller to mechanism controller

① M/F pin is to be set "High" when master microprocessor sends mechanism command and "Low" when it sends a file command. Mechanism controller will not make Q data communication when M/F pin is "Low".

② When sending a command from master microprocessor to mechanism controller, the data is put on the CMD line and this pin (MREQ) is set "Low".

③ Mechanism controller monitors the MREQ pin in its main routine. It latches the CMD data when the pin is at "Low" level. Then, it sets this pin (SACK) "Low".

④ Master controller confirms that the SACK pin is set "Low" and it sets the MREQ pin "High".

⑤ Then, when the MREQ pin is "High" and the SACK pin is "Low", mechanism controller sets the SACK "High" and it is ready to accept the send command.

⑥ The signal from master begins with "A"—"E". If the mechanism controller receives any code other than this, it treats as an error.

⑦ This signal ends with "F". After this is confirmed, the flag is set and the command is then decoded in the main routine.

MC-Service

(2) Format of Transmission to Master

The QINT pin, M/F pin and MD port are used to send a command to master microprocessor. This transmission from mechanism controller to master microprocessor is used for responses to DISC status information, SW state and file information. Also, the same transmission format is used to send Q data from mechanism controller to master.

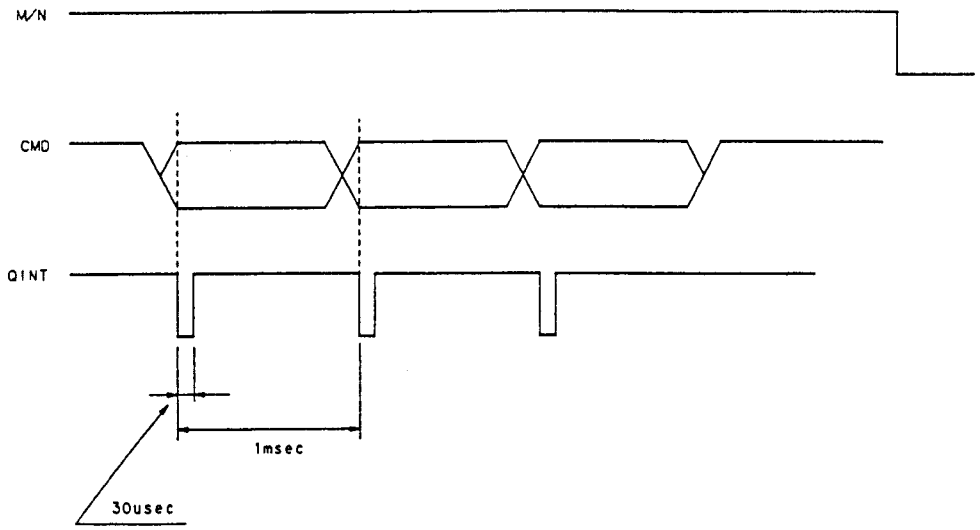

When data can be sent from mechanism controller, the data is then sent to the CMD line. Therefore the QINT pin of mechanism controller is dropped by about 30μsec.

The timing of data transmission is controlled by timer process within microprocessor so that data will be sent at intervals of 1 msec.

The QINT pin of master controller is an interrupt port, so data sent from mechanism controller is to be received.

Any request from master microprocessor (MREQ pin "Low") during data transmission to master will take first priority in processing.

Basic Condition of Mechanism Controller

Mechanism controller takes precedence over instruction from master microprocessor.

(3) Timing at Pins ㊾ and ㊹ of IC250

Waveform at SENSER (IC250 pin ㊾) and STOK OK (IC250 pin ㊹) when tray is OPEN/CLOSE

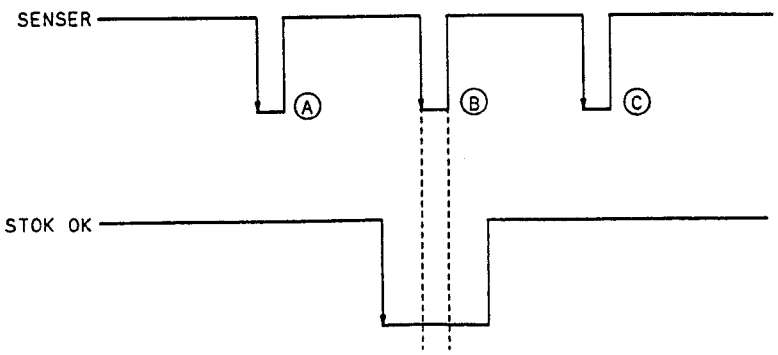

As shown above, the center pulse (Ⓑ) of SENSER mute fall within the pulse of STOK OK when tray is OPEN/CLOSE. If any of the pulses on both sides (Ⓐ and Ⓒ) of SENSER is input for BOX UP/DOWN, the mechanism microprocessor reduces the tray speed, stops in the position (Ⓑ) and allows UP/DOWN movement.

If there is any abnormality in the OPEN/CLOSE relationship, these two waveforms should be checked.

•IC301 μPD75518GF-059-3B9

Pin No.	Signal	Pin Name	Description
1	AN0	KEY0	KEY analog input
2	AVREF		+5V
3, 4	VDD		
5	P113		Open
6	P112	DRIVER	Driver reset
7	P111	ICON OFF	Servo system ON/OFF 
8	P110	MEC REST	Mechanism controller reset
9	P103		Open
10	P102	$\overline{CS}$	Driver chip select
11	P101	BUS OUT	Audio bus output port
12	P100	$\overline{MREQ}$	For communication with mechanism controller, and master request.
13	P93	AUB/$\overline{SIR}$	Switching between BUS and SIRCS (no function)
14	P92	$\overline{TEST}$	This pin is set "L" and POWER is ON to display the accident code
15	P91	$\overline{SUF, REP}$	This pin is set "L" to operate ALL DISCS SHUFFLE REPT
16	P90	SFIL/$\overline{EDT}$	This pin is set "L" to change S. F. FILE key to EDIT key
17—20	P83—80		+5V
21—23	P73—71		+5V
24	P70	SACK	For communication with mechanism controller, and Answer Code from master.
25—28	P63—60		Open
24—31	P53—51		
32	P50	LED4	LED data
33	VSS		GND
34—37	P43—40	LED3—0	LED data
38—40	P23—20		Open
46, 47	P13, 12		GND
48	INT1	QINT	Interrupt from mechanism controller
49	INT0	BUSIN	Interrupt of audio bus
50	P03		+5V
51	SO0	DPDAT	Output as serial port, used as serial clock to send displayed data to driver.
52	SCK0	DPCK	
53	P00		GND
54	VSS		GND
55	XT1		GND
56	XT2		Open
57	IC		GND
58	X1		4.19MHz oscillator
59	X2		
60	$\overline{RESET}$		Reset input for this microprocessor

Pin No.	Signal	Pin Name	Description
61—64	P143—140		Open
65, 66	P133, 132		
67, 68	P131, 130	LEDG1, 0	LED digital 1, 0.
69—72	P123—120	CMD3—0	Communication with mechanism controller (data 3—0)
73	AVSS		GND
74—77	P153—150		GND
78—80	AN3—1	KEY3—1	KEY analog input

9-957-394-81

Sony Corporation
Audio Group

English
93F04100-1

© 1993. 6

Published by Audio Sector Quality Assurance Dept.

DXA-H2750

SERVICE MANUAL

US Model
Canadian Model
AEP Model
UK Model
E Model
Australian Model
Tourist Model

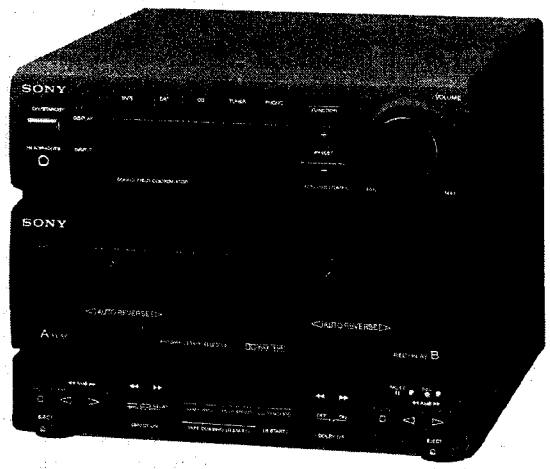

This set is the Amplifier, cassette deck section in FH-E705C, MHC-2750.

Model Name Using Similar Mechanism		TC-H2700/H3700
Tape Transport Mechanism Type	DECK A	TCM-190RA13A
	DECK B	TCM-190RB22A

SPECIFICATIONS

Amplifier Section

Continuous RMS power output
US, CND model:
45 + 45 watts (6 ohms at 1 kHz, 5% THD)
E, EA, AUS, TR model:
40 + 40 watts (6 ohms at 1 kHz, 5% THD)
AEP, UK, G, IT model:
35 +35 watts (6 ohms at 1 kHz, DIN)

Music power output
AEP, UK, G, IT model:
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

Peak music power output
E, EA, AUS, TR model:
400 watts

Inputs
DAT IN (phono jacks):
sensitivity 450 mV, impedance 47 kilohms
AEP, UK, G, IT model:
PHONO IN (phono jacks):
sensitivity 5 mV, impedance 47 kilohms
Except AEP, UK, G, IT model:
VIDEO IN (phono jacks):
sensitivity 450 mV, impedance 47 kilohms

Outputs
HEADPHONES (stereo minijack):
accepts headphones of 8 ohms or more
SPEAKERS:
accepts speakers of 6 to 16 ohms

Cassette Deck Section

Recording system 4-track 2-channel stereo

Frequency response (DOLBY NR OFF)
40 — 13,000 Hz (±3 dB), using TYPE I cassette (Sony HF-S)
40 — 14,000 Hz (±3 dB), using TYPE II cassette
40 — 15,000 Hz (±3 dB), using TYPE IV cassette

Wow and flutter 0.1% WRMS ±0.3% (DIN)

Design and specifications subject to change without notice.

STEREO CASSETTE DECK AMPLIFIER

SONY®

MICROFILM

MC-Service

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

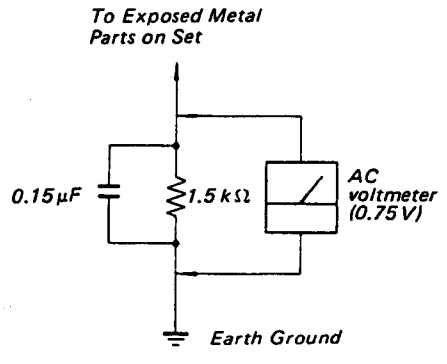

Fig. A. Using an AC voltmeter to check AC leakage.

MODEL IDENTIFICATION

— Model Number Label —

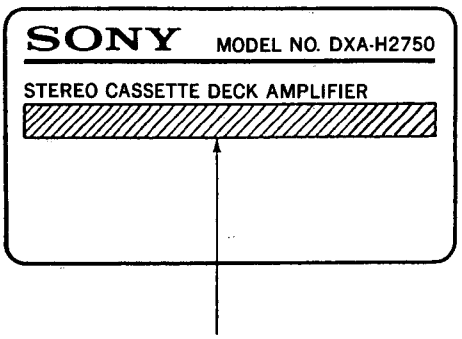

US model: AC: 120V 60Hz 105W
CND model: AC: 120V 60Hz 115W
AEP model: AC: 220–230V~50/60Hz
UK model: AC: 240V~50Hz
E, EA, TR model: AC: 120/220/230–240V~50/60Hz 110W
G, IT model: AC: 220–230V~50Hz
AUS model: AC: 240V~50Hz 110W

- CND: Canadian model
- AUS: Australian model
- G: Germany model
- IT: Italian model
- EA: Saudi Arabia model
- TR: Tourist model

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

Section	Title	Page
1. GENERAL		
1-1.	Part Identification	3
2. DISASSEMBLY		
2-1.	Front Panel	4
2-2.	Control Board, HP Board	4
2-3.	Cassette Lid Assy	5
2-4.	MD Block	5
2-5.	Back Panel	6
2-6.	Power Transformer	6
2-7.	TC Main Board	7
2-8.	Joint (Upper)	7
2-9.	Capstan/Reel Motor	8
2-10.	Head Base Assy	8
3. MECHAINICAL ADJUSTMENTS		9
4. ELECTRICAL ADJUSTMENTS		9
5. DIAGRAMS		
5-1.	Semiconductor Lead Layouts	13
5-2.	Ciaucuit Boards Location	14
5-3.	Printed Wiring Boards —Deck Section—	16
5-4.	Schematic Diagram —Deck Section—	19
5-5.	Schematic Diagram —Main Section—	24
5-6.	Printed Wiring Boards —Main Section—	29
5-7.	Printed Wiring Boards —Panel Section—	34
5-8.	Schematic Diagram —Panel Section—	37
6. EXPLODED VIEWS		
6-1.	Cabinet Section	42
6-2.	Chassis Section	43
6-3.	Cassette Holder Section	44
6-4.	Mechanism Deck Section 1	45
6-5.	Mechanism Deck Section 2	46
7. ELECTRICAL PARTS LIST		47

SECTION 1
GENERAL

This section is extracted from instruction manual.

1-1. PARTS IDENTIFICATIONS

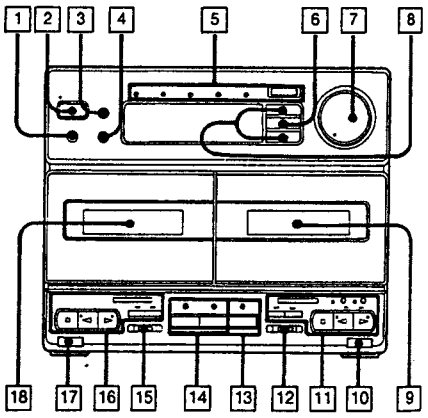

1 HEADPHONES jack (stereo minijack)
2 SYSTEM POWER switch and STANDBY indicator
The indicator remains lit as long as the AC power cord is connected to a wall outlet.
3 DISPLAY button 65
4 DIRECT button and indicator 65
5 FUNCTION button and function indicators 20 80
6 PRESET button 65
7 VOLUME control 26
8 TOTAL EFFECT CONTROL –/+ buttons 68
9 Cassette holder (Deck B)
10 EJECT ⏏ button (Deck B)
11 Tape operation buttons (for Deck B)
□: Stop button
▷: Forward play button and indicator
◁: Reverse play button and indicator
◀◀ ▶▶: Fast winding buttons
PAUSE ❚❚: button and indicator
REC ●: button and indicator
12 DOLBY NR (Dolby Noise Reduction) switch 60
13 CD SYNCHRO button 90 96
14 TAPE DUBBING buttons 84
NORMAL SPEED button
HIGH SPEED button
15 DIRECTION mode selector 60 64
16 Tape operation buttons (for Deck A)
□: Stop button
▷: Forward play button and indicator
◁: Reverse play button and indicator
◀◀ ▶▶: Fast winding buttons
17 EJECT ⏏ button (Deck A)
18 Cassette holder (Deck A)

MC-Service

SECTION 2
DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

2-1. FRONT PANEL

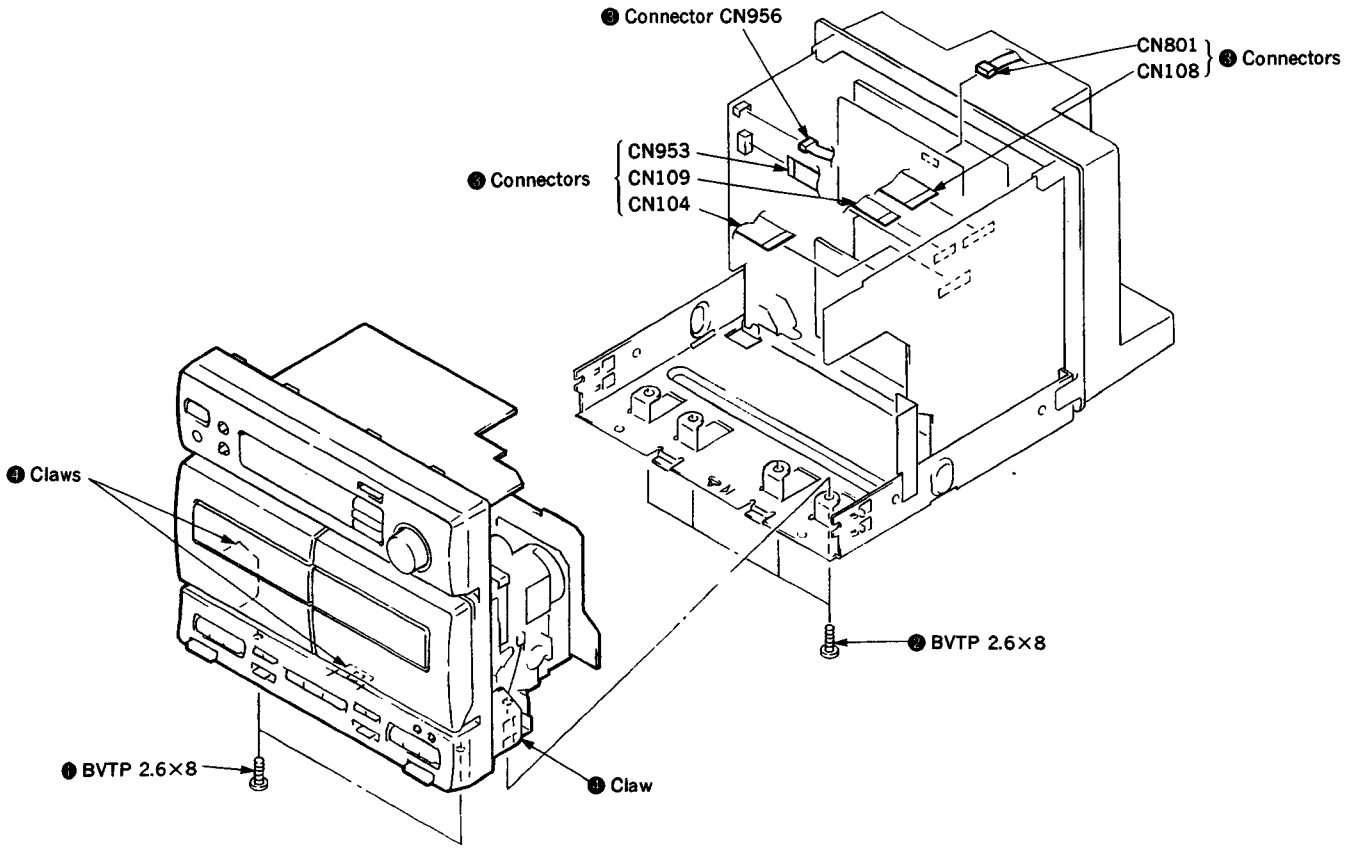

2-2. CONTROL BOARD, HP BOARD

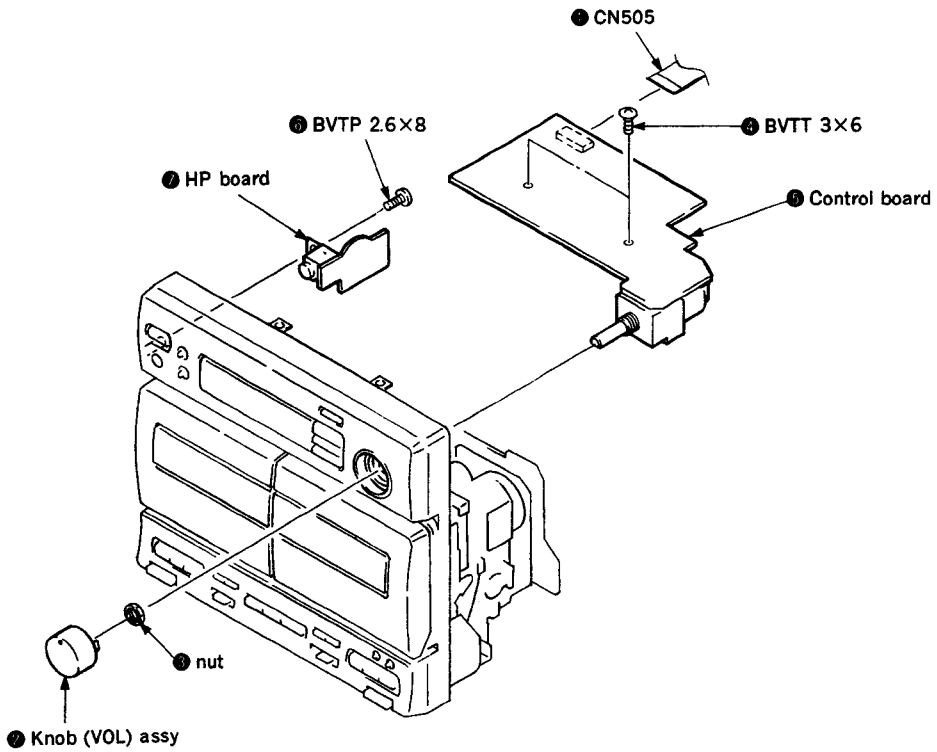

2-3. CASSETTE LID ASSY

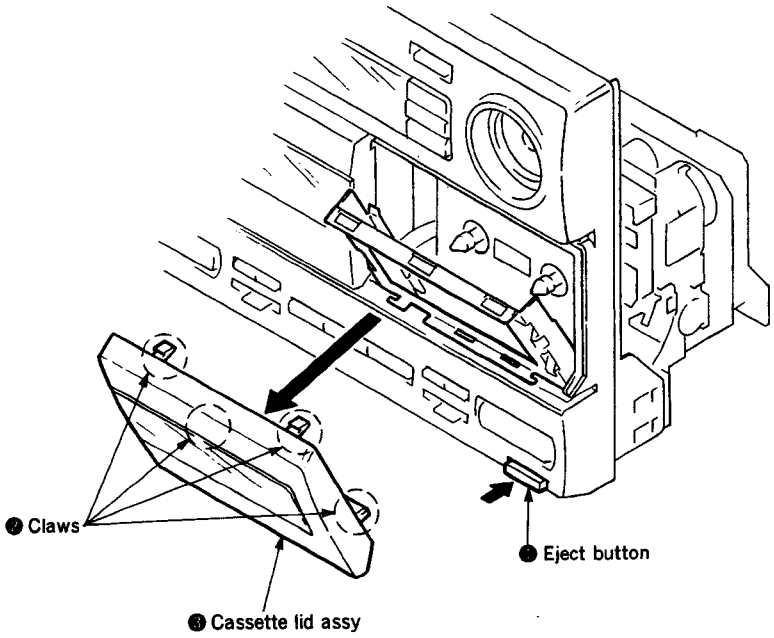

2-4. MD BLOCK

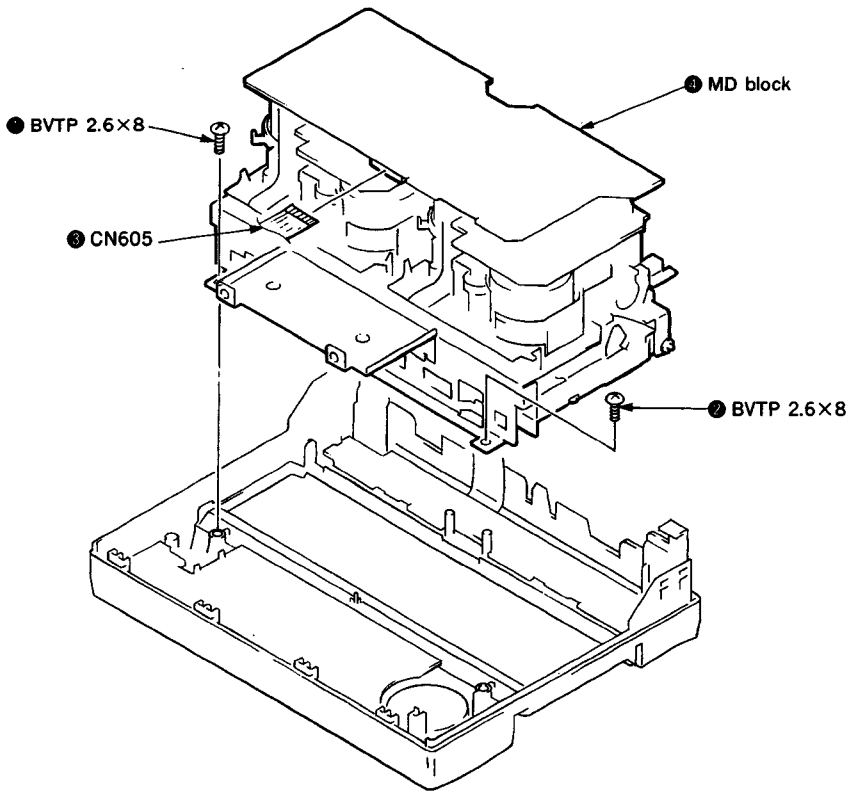

2-5. BACK PANEL

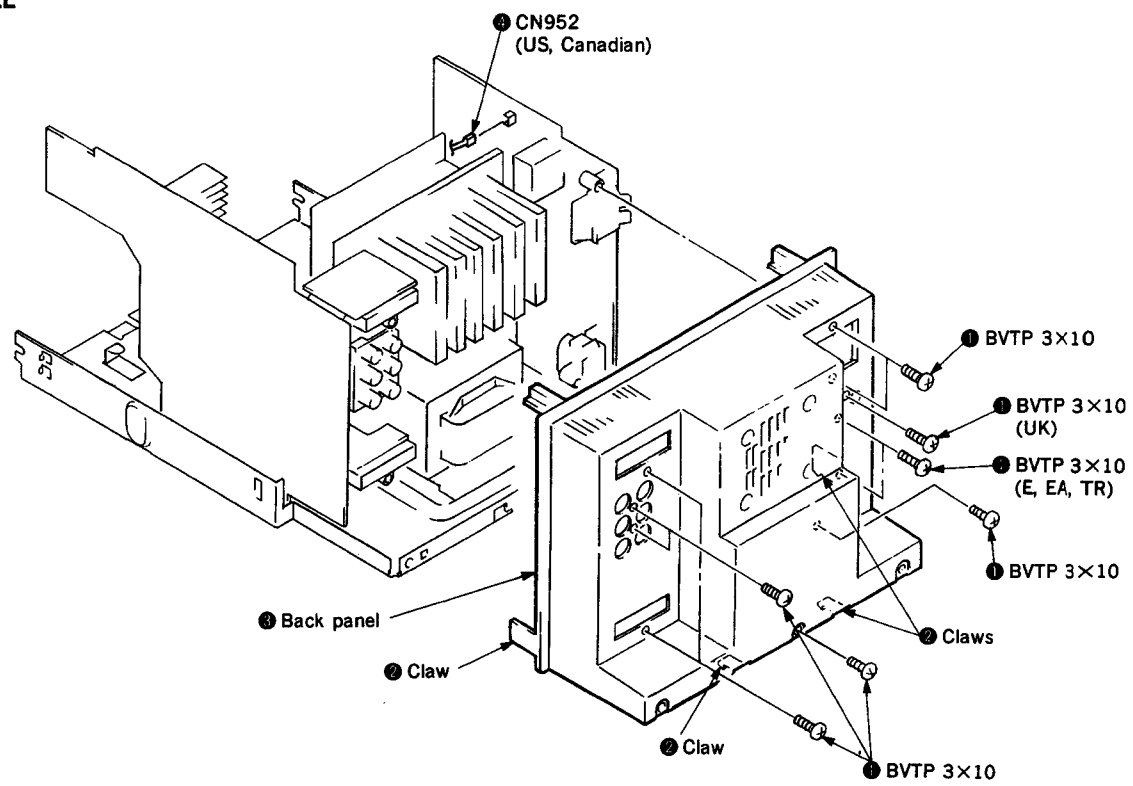

2-6. POWER TRANSFORMER

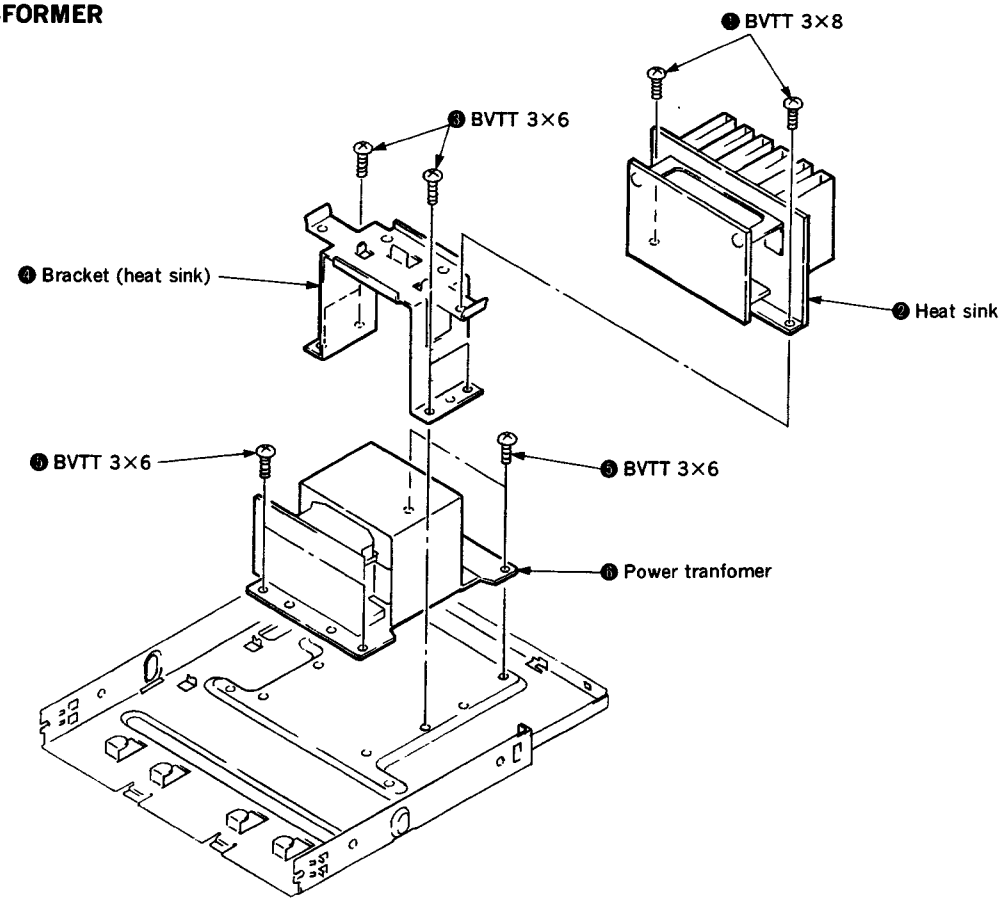

2-7. TC MAIN BOARD

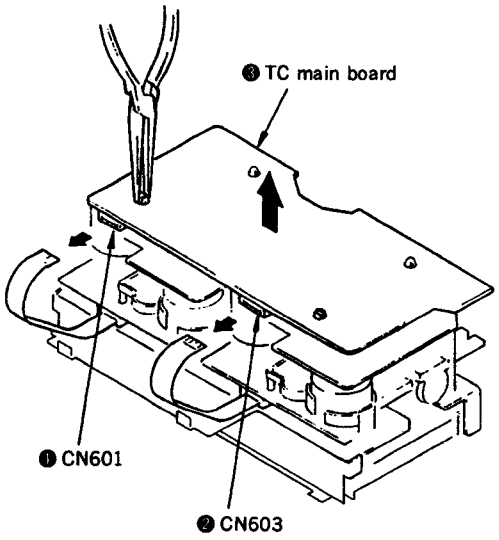

2-8. JOINT (UPPER)

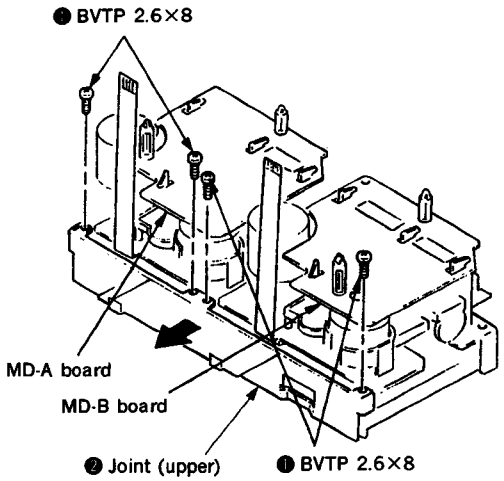

2-9. CAPSTAN/REEL MOTOR

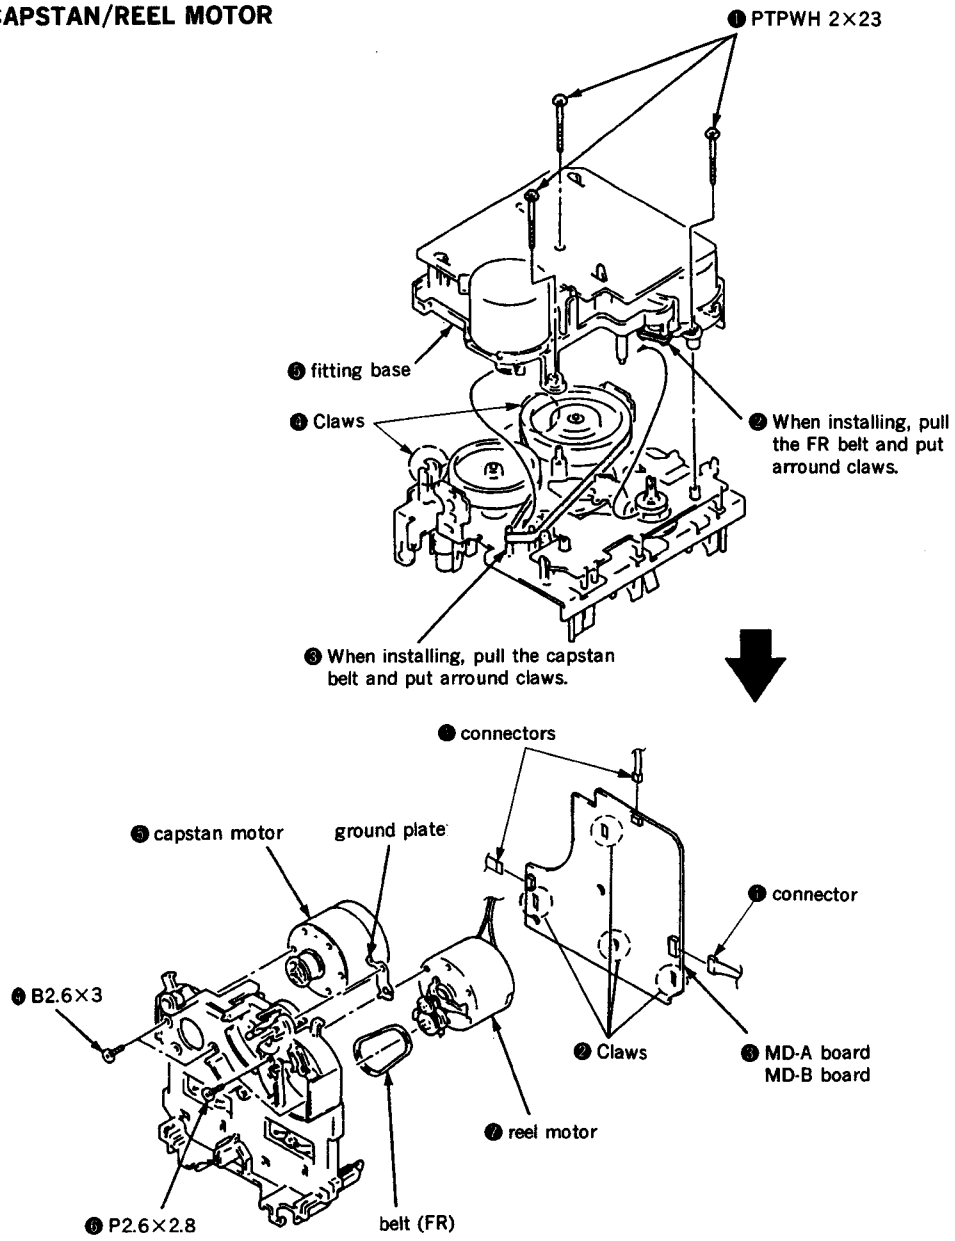

2-10. HEAD BASE ASSY

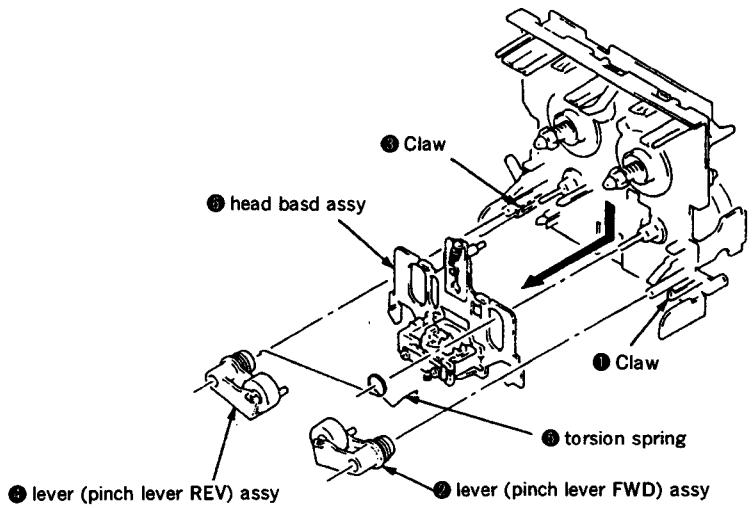

SECTION 3
MECHANICAL ADJUSTMENTS

PRECAUTION

1. Clean the following parts with a denatured alcoholmoistened swad:

record/playback head	pinch roller
erase head	rubber belts
capstan	idlers

2. Demagnetize the record/playback head with a head demagnetizer.
   (Head demagnetizer do not approach for the erase head.)
3. Do not use a magnetized screwdriver for the adjustment.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be perfomed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Torque	Torque meter	Meter reading
Forward	CQ-102C	30 to 65g • cm (0.42 to 0.90 oz • inch)
Forward back tension	CQ-102C	1 to 6g • cm (0.014 to 0.08oz • inch)
Reverse	CQ-102RC	30 to 65g • cm (0.42 to 0.90oz • inch)
Reverse back tension	CQ-102RC	1 to 6g • cm (0.014 to 0.08oz • inch)
Forward, Reverse	CQ-201B	70 to 120g • cm (0.98 to 1.67 oz • inch)

SECTION 4
ELECTRICAL ADJUSTMENTS

PRECAUTION

1. The adjustment should be performed in the publication. (Be sure to make playback adjustment at first.)
2. The adjustment and measurement should be performed for both L-CH and R-CH.
   • Switch position
   DOLBY NR switch: OFF
3. Perior to electrical adjustments, short the connector TP401 (test mode).

Test Tape

Tape	Contents	Use
P-4-A100	10kHz, −10dB	Azimuth Adjustment
P-4-L300	315Hz, 0dB	Level Adjustment
WS-48B	3kHz, 0dB	Tape Speed Adjustment

Record/Playback Head Azimuth Adjustment

DECK A DECK B

Procedure:

1. Forward Playback Mode

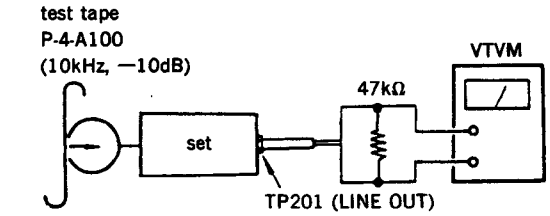

2. Turn the adjustment screw for the maximum output levels. If these levels do notmatch, turn the adjustment screw until both of output levels match together within 1dB.

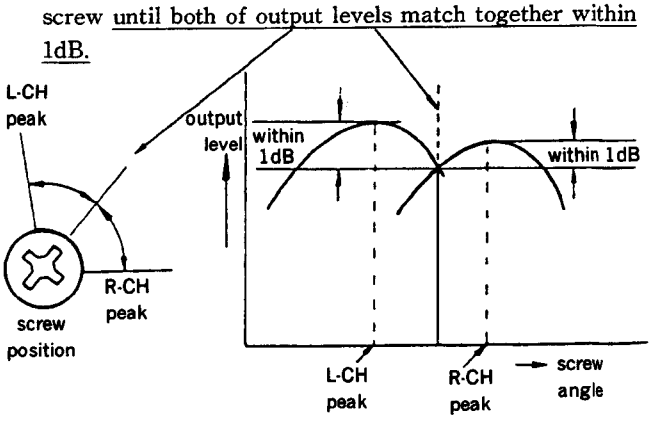

3. Playback Mode

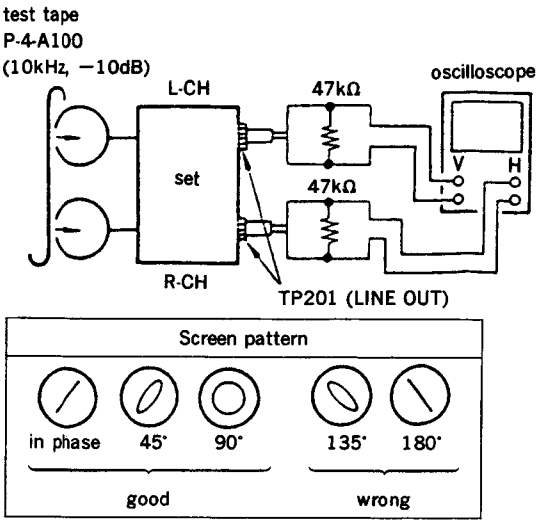

4. Change the reverse playback mode and repeat the steps 1 to 3.
5. After the adjustment, lock the adjustment screw with suitable locking compound.

Adjustment Location : —record/playback head—

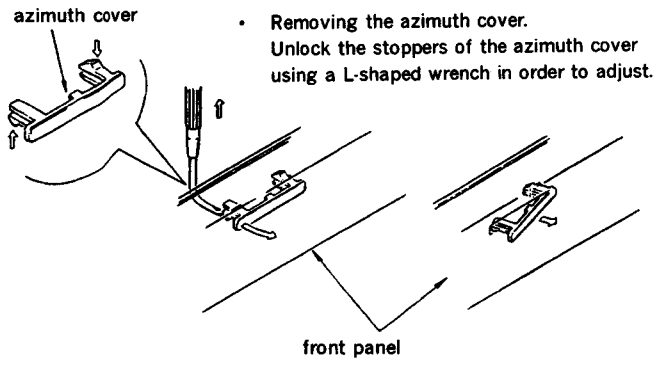
azimuth cover
• Removing the azimuth cover.
Unlock the stoppers of the azimuth cover
using a L-shaped wrench in order to adjust.
front panel

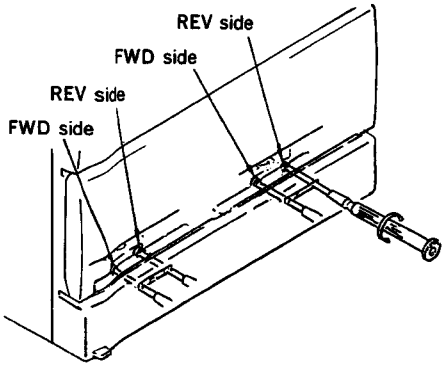

Tape Speed Adjustment DECK A DECK B

Procedure :

—Forward Playback Mode—

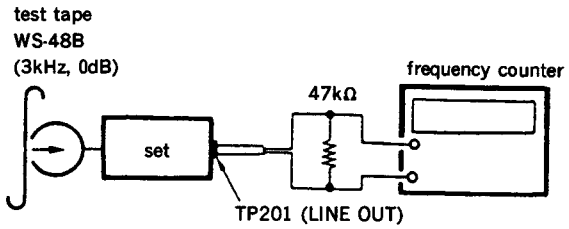

Perform high speed adjustment before normal speed adjustment.

(High speed adjustment)

1. Turn on the power and put the deck A into the FWD mode.
2. Press the HIGH SPEED switch.
3. Adjust RV72A (H) of the deck A so that a reading on the frequency counter meets the adjustment value.
4. Adjust the RV72B (H) of deck B performing steps 1 to 3 as deck A.

(Normal speed adjustment)

1. Put the set into the FWD playback mode.
2. Press the NORMAL SPEED switch.
3. At this time, adjust RV71A (L) of the deck A and RV71B (L) of the deck B so that a reading on the frequency counter meets the adjustment value.

Adjustment Limits :

Speed	Frequency Counter Reading
High	6,000 ± 20Hz
Normal	3,000 ± 10Hz

Frequency difference between the beginning and the end of the tape should be within 3%.
Frequency difference between deck A and deck B the beginning of the tape should be within 1.5%.

Adjustment Location : MD-A Board, MD-B Board

Playback Level Adjustment DECK A DECK B

Procedure :

—Forward Playback Mode—

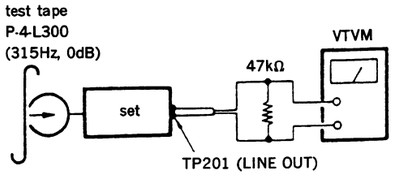

Adjust deck A : RV11A (L-CH), RV21A (R-CH) and deck B : RV11B (L-CH), RV21B (R-CH) so that the VTVM reading becomes the adjustment limits below.

Adjustment Limits :

LINE OUT level : −7.7 ± 0.5dB 0.301 to 0.338V

Level Difference between Channels : within 0.5dB

Confirm the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.

Adjustment Location : MD-A Board, MD-B Board

Tape Speed/playback Level Adjustment

Screwdriver to adjust the MD block



The MD block adjustment can be performed by inserting a screwdriver of which axis length (not including the shaft) is 35 mm or more through the rear side of the main board.

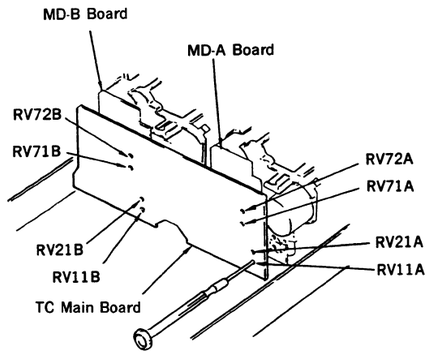

Record Bias Adjustment DECK B

Procedure :

1. Record Mode

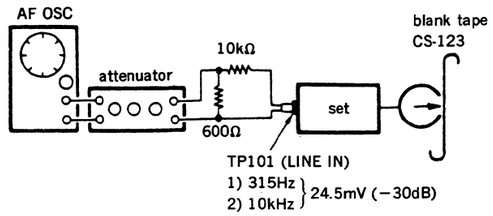

2. Playback Mode

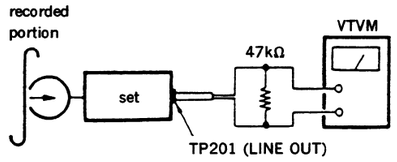

Playback the signal recorded in step 1.
Confirm that the 10kHz playback output is 0 ± 0.5dB (0.732 to 0.821V) relative to the 315Hz output. if necessary. Adjust RV12 (L-CH), RV22 (R-CH) and repeat the steps given above.

Adjustment Location : MD-B Board

Record Level Adjustment DECK B

Procedure :

1. Record Mode

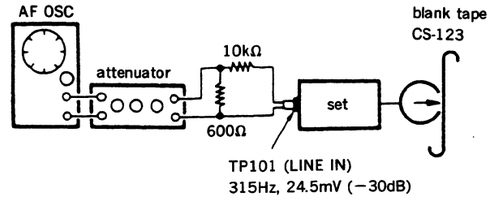

2. Playback Mode

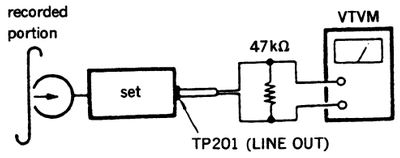

Confirm playback the tape recorded become adjustment level as follows.
If necessary, adjust RV201 (L-CH), RV301 (R-CH) and repeat steps 1 and 2.

Adjustment Limits :

LINE OUT level : −26 ± 0.5dB (37 to 41mV)

Adjustment Location : main board

Adjustment Location :

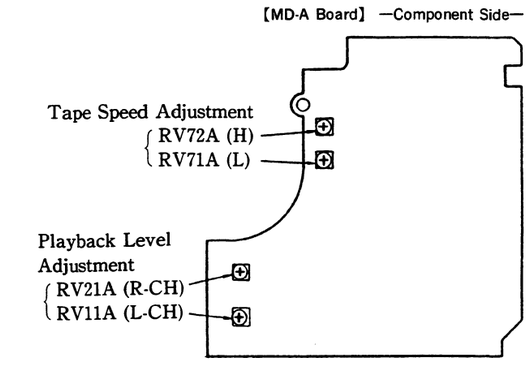

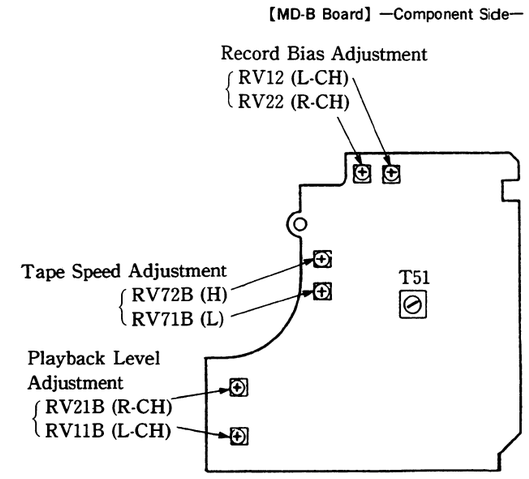

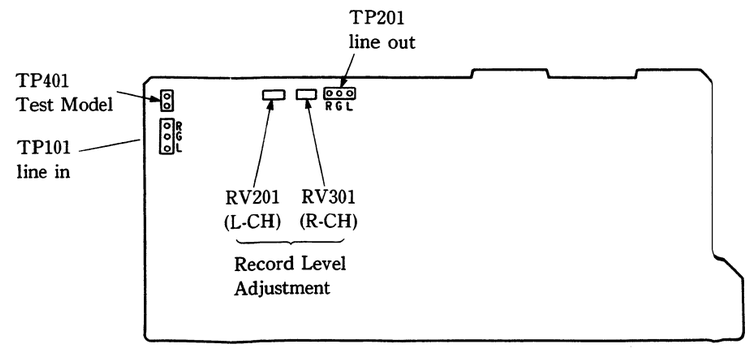

SECTION 5
DIAGRAMS

5-1. SEMICONDUCTOR LEAD LAYOUTS

CD4052BCM
CD4053BCM
CXA1101M
CXA1578M

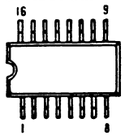

(TOP VIEW)

CD4066BCM
SN74HC32ANS



(TOP VIEW)

LB1639
LM393P

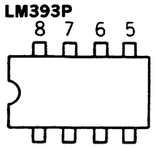

(Top view)

LC7822



(Top view)

M50964-256FP

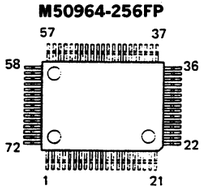

M51953AL



M5218AL
M5230L-A
μPC1237HA



M5229P



(Top view)

NJL5165K-B



NJU7305L

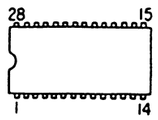

(Top view)

PST572E

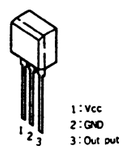

RC4558PS
μPC4570G2



(TOP VIEW)

STK-4152MK2K

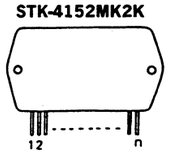

TA7272P

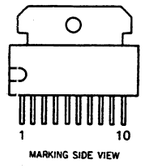

MARKING SIDE VIEW

TA7805S



TD62C950RF

(TOPVIEW)

μPD78011GC
-507-AB8

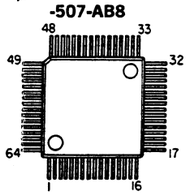

DTA114ES
DTC114ES
2SC2603-EF



RN1402
RN2402
RN2404
2SA1602-F
2SC4154-F



2SA1175-HFE
2SC3623A-LK

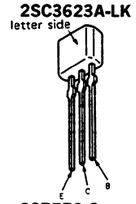

2SB772-Q
2SD882-P

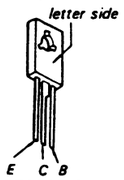

2SB1013-4
2SC1841-PAFAEA
2SD1616A-K

2SB1094-LK
2SD2012



2SB1122-S
2SD1622-S

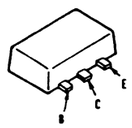

2SK246-GR

EC10DS2

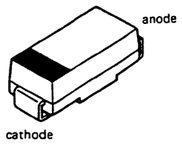

HZS27-2L
HZS30-2L
HZS6C3L
HZS9A2L
UZL-36M
11ES2



HZ12B2L
UZP-6.2BC
1N4148M



RBV-602-01

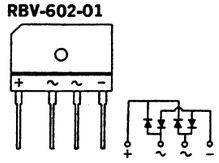

UZM5.6X
UZM8.2Z
1SS184

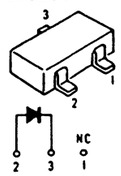

1SS226



1SS352



SEL2210S-CD

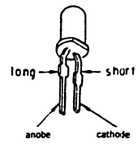

SEL4225C-C
SEL4525C-C
SEL4925A-D

5-2. CIRCUIT BOARDS LOCATION

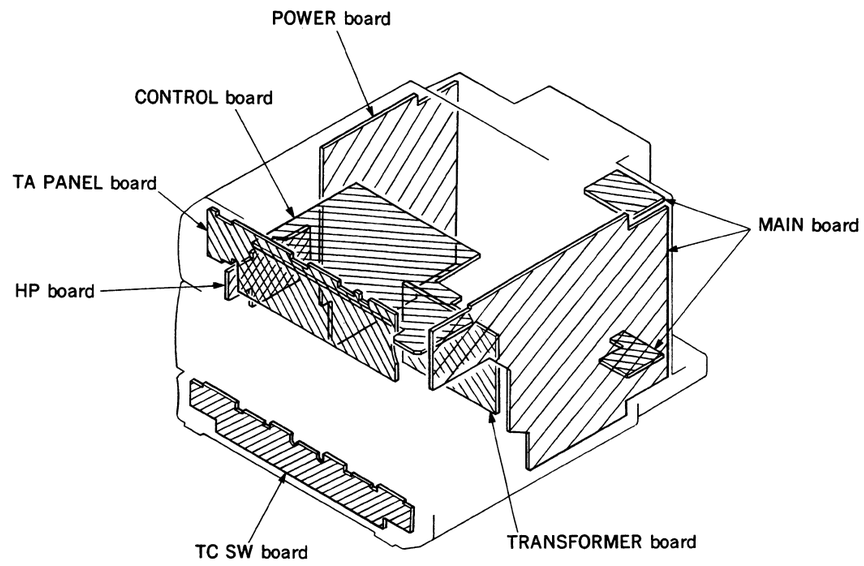

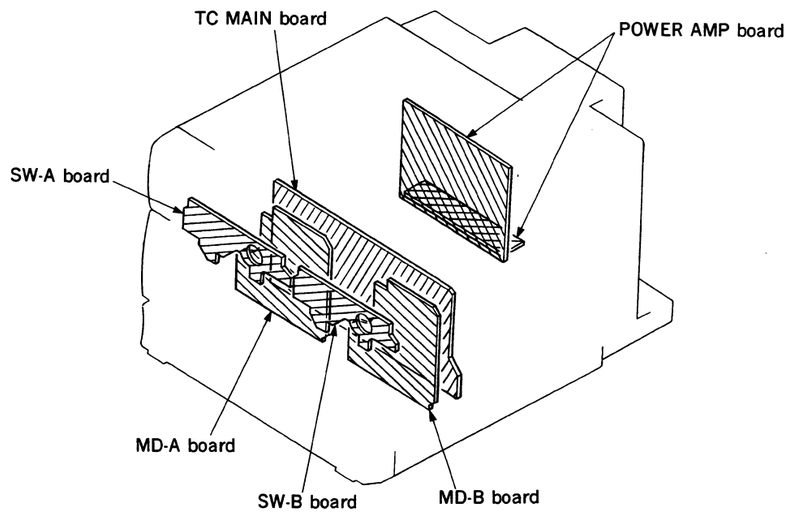

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D31	C-2	IC401	C-18
D351	H-21	IC402	D-14
D352	H-20	IC403	D-15
D353	H-17	IC404	C-17
D354	H-18	IC405	C-19
D355	H-17	IC406	D-18
D356	H-14		
D357	H-14	Q51	B-3
D358	H-14	Q52	B-3
D359	H-14	Q53	C-3
D401	D-15	Q71A	C-11
D404	D-17	Q71B	C-5
D405	D-18	Q201	D-20
D407	C-15	Q202	D-19
D410	D-18	Q301	E-19
D411	B-17	Q302	C-19
D412	C-17	Q401	C-16
D416	D-18	Q402	C-16
D4001	D-19	Q403	B-15
		Q404	B-15
IC31A	D-9	Q405	B-16
IC31B	D-3	Q407	D-17
IC81A	I-11	Q408	D-19
IC81B	I-5	Q409	C-19
IC201	E-18	Q410	C-20
IC202	E-20	Q411	B-15
IC203	C-21	Q412	D-19
IC204	C-19	Q414	D-18
IC205	D-16	Q415	D-19

Note:

- ○—— : parts extracted from the component side.
- ■ : parts mounted on the conductor side.
- ● : Through hole.
- ▒ : Pattern on the side which is seen.
- ▒ : Pattern of the rear side.

5-3. PRINTED WIRING BOARDS —DECK SECTION— • Refer to page 13 for Semiconductor Lead Layouts.

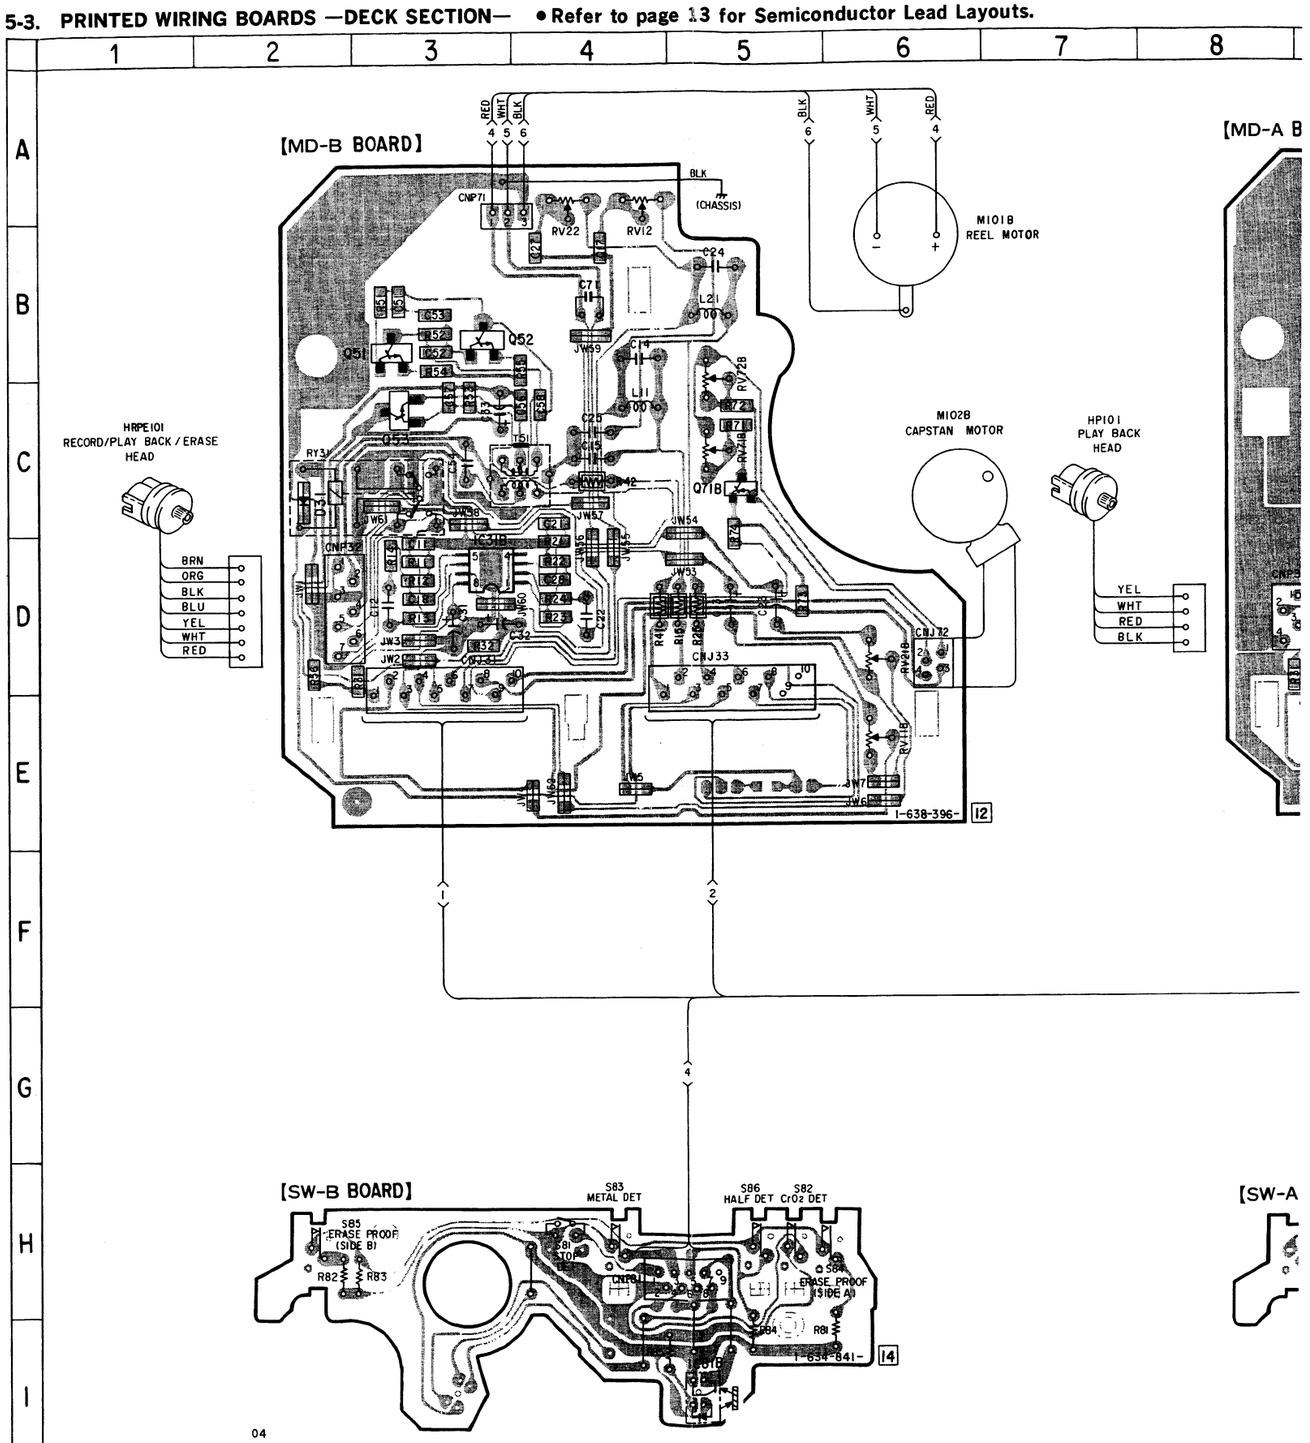

ts.

7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22

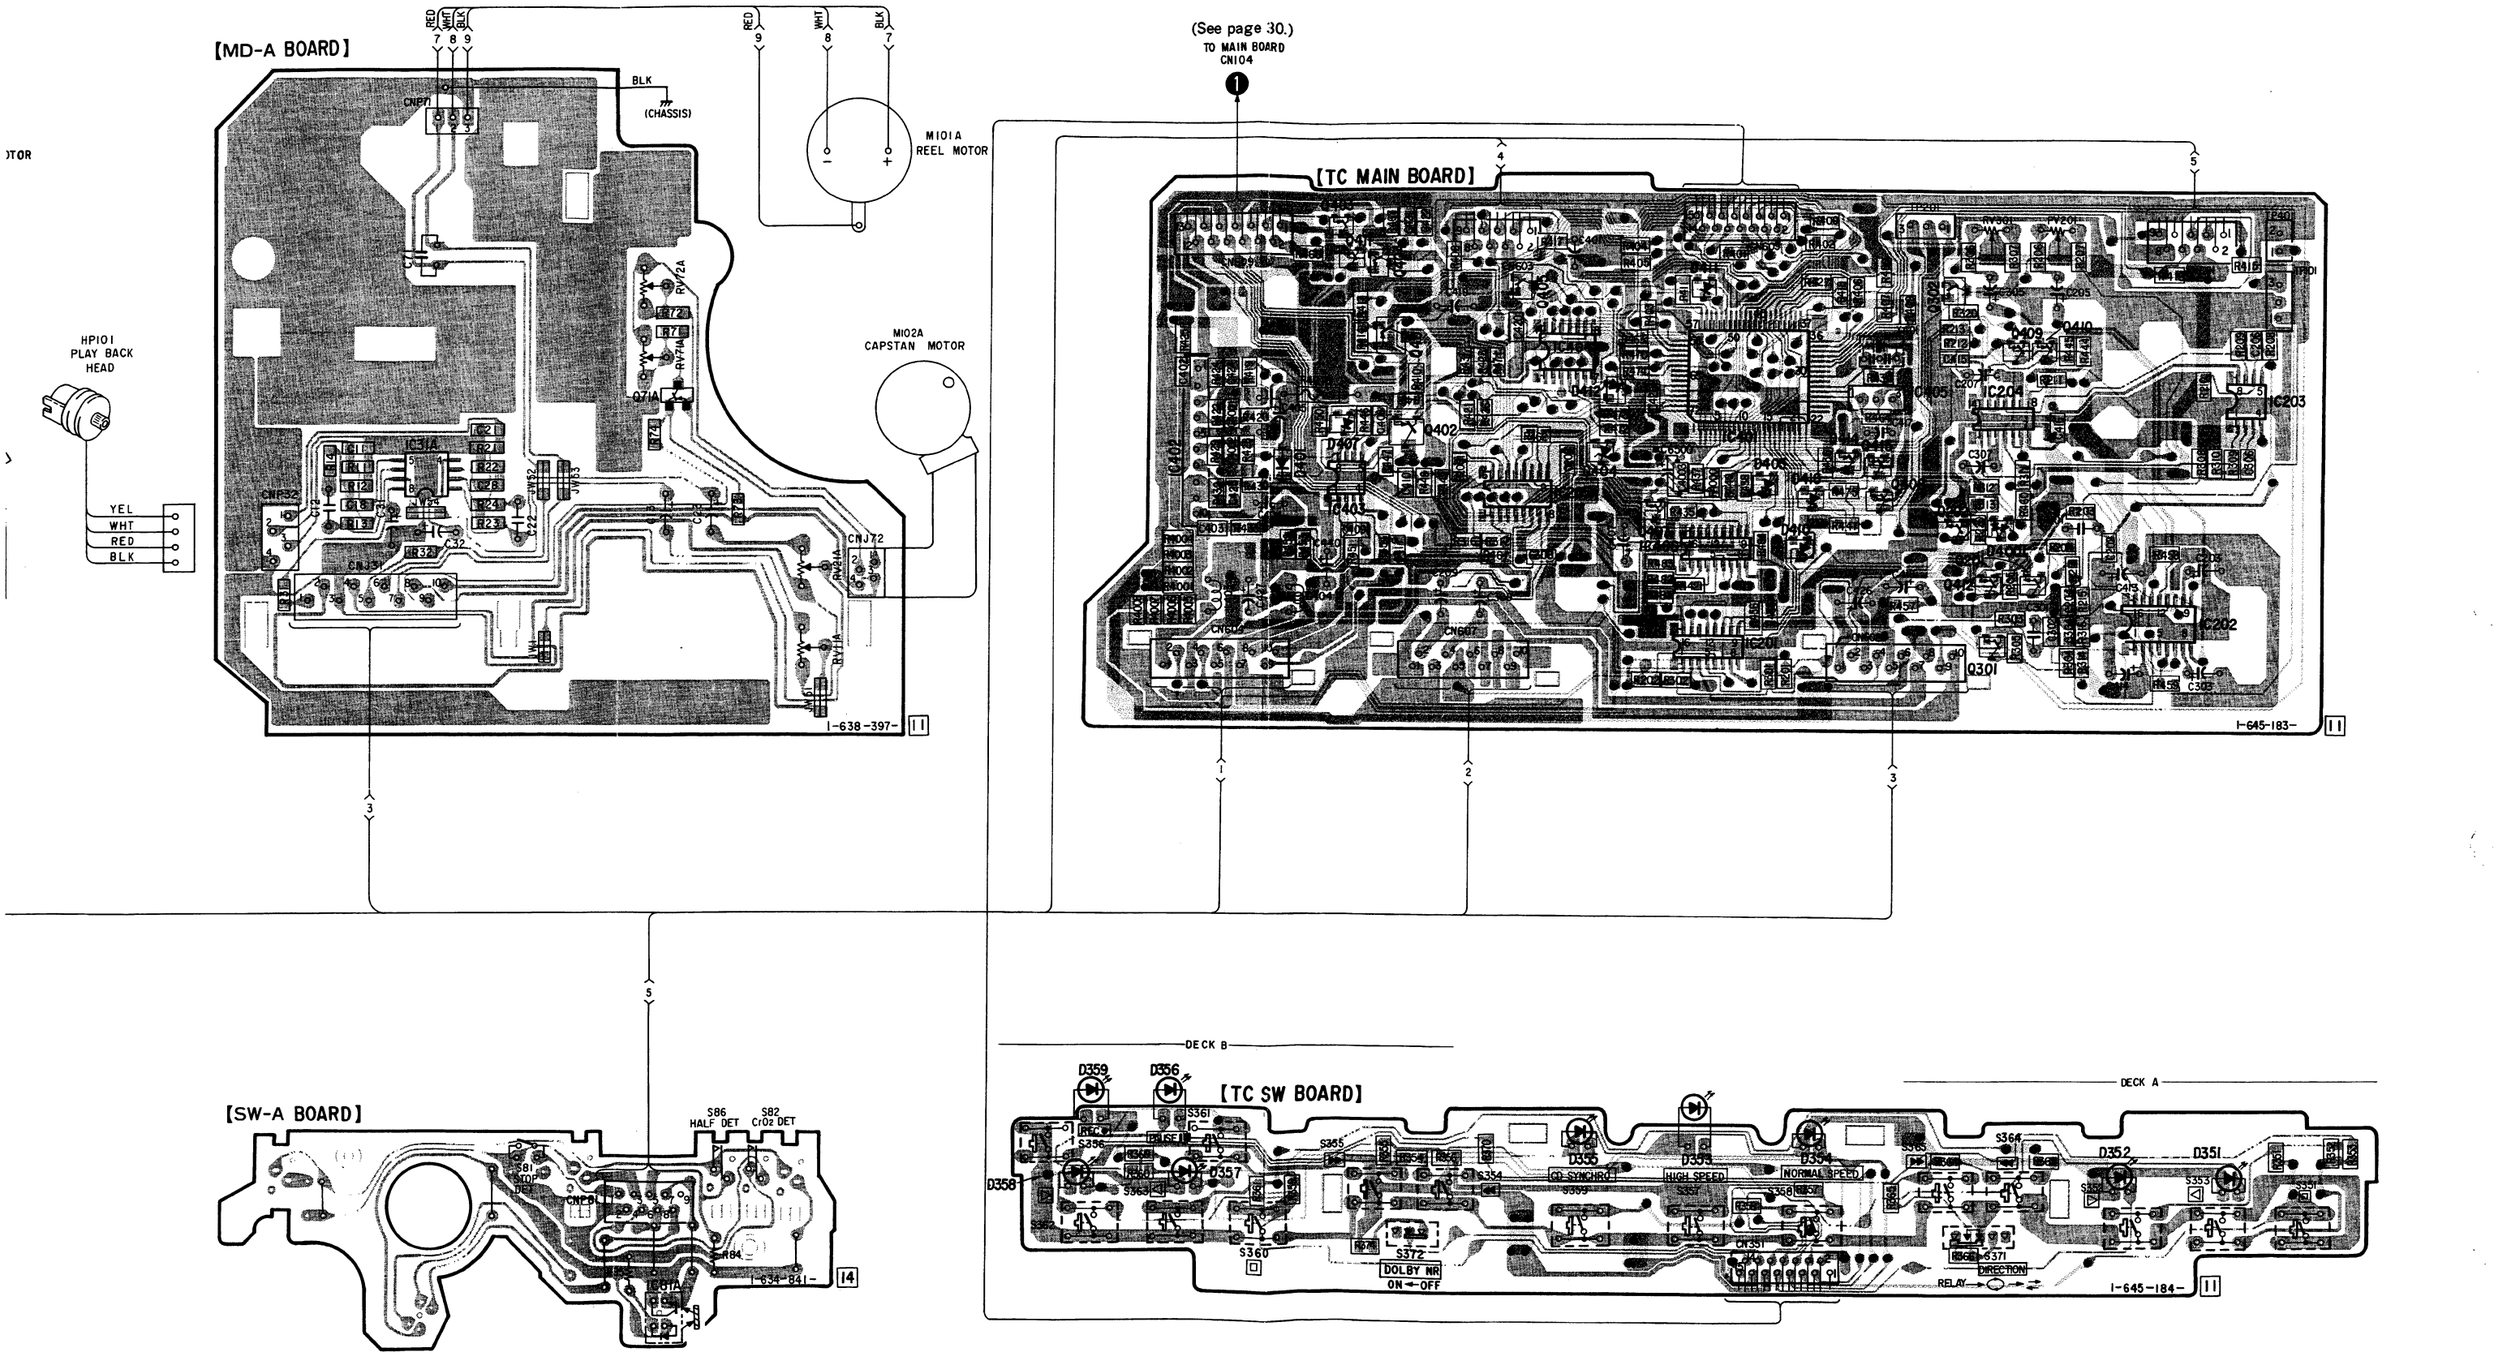

MC-Service

5-4. SCHEMATIC DIAGRAM —DECK SECTION— • Refer to page 40 for IC Block Diagrams.

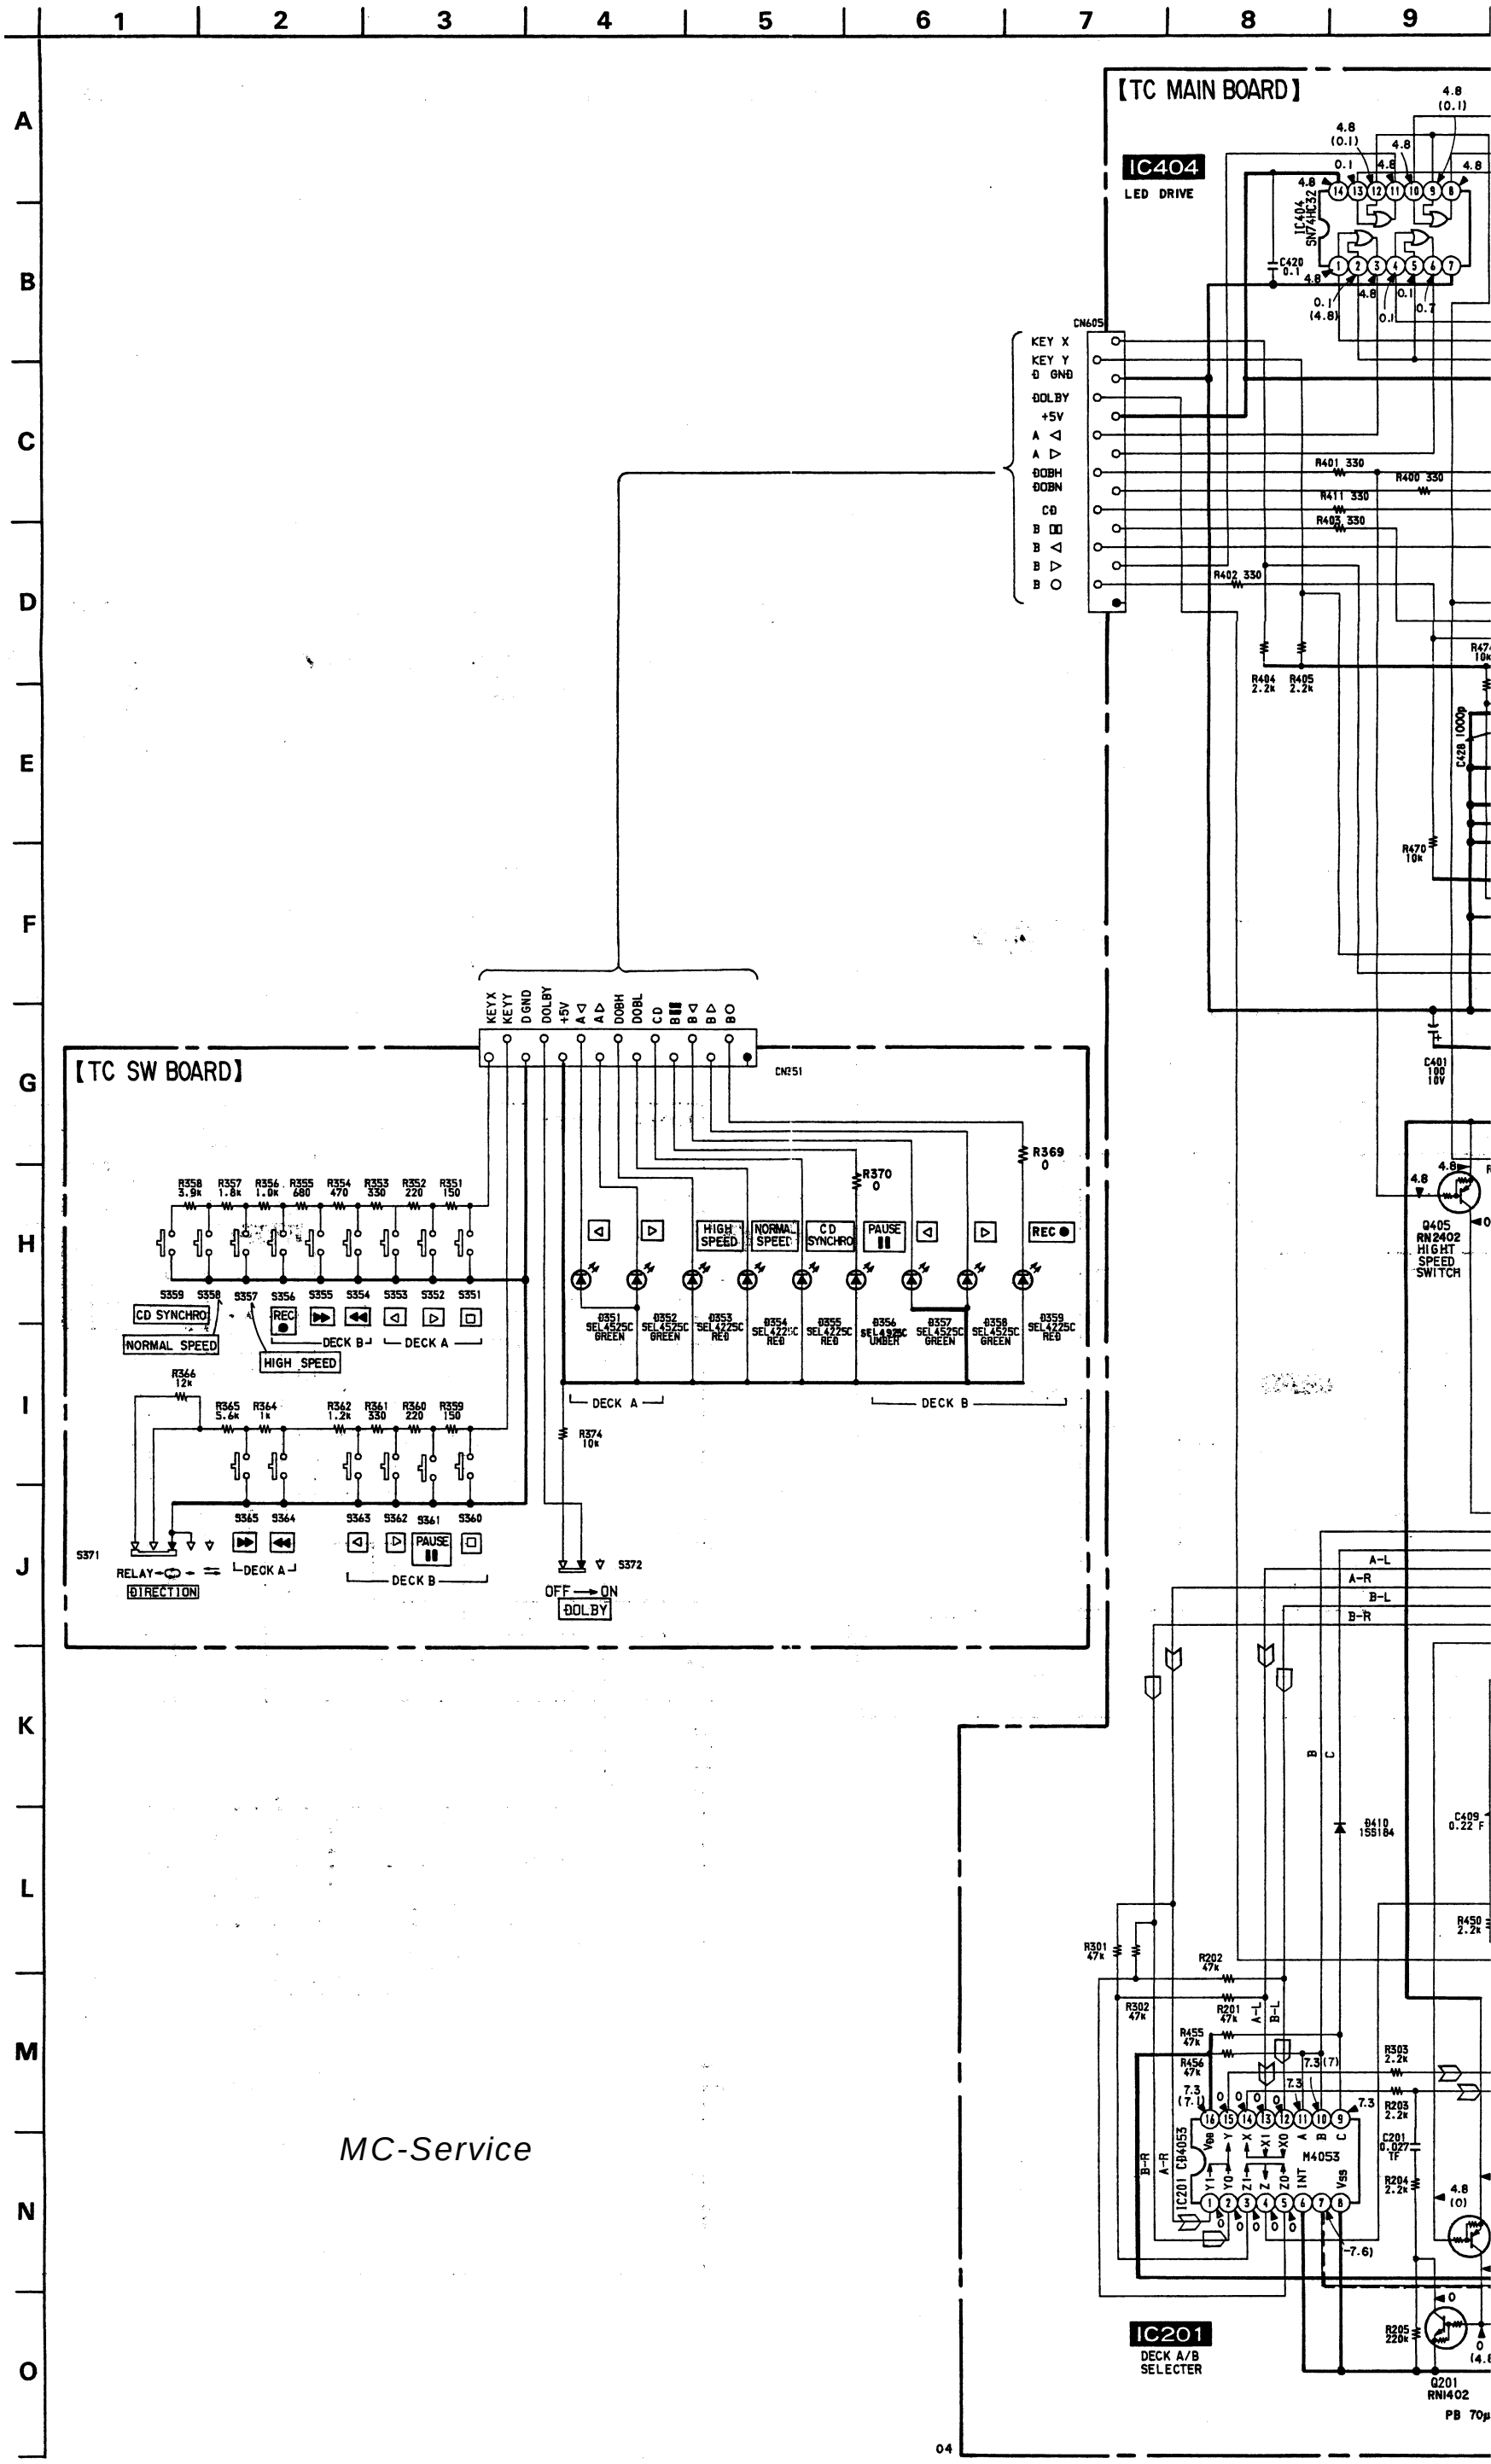

MC-Service

IC401
IC401
M50964-90X1044
SYSTEM CONTROL

IC402
REEL MOTOR
DRIVE

IC403
AMS AMP

IC405
RESET

IC406
TAPE TYPE SELECT
SWITCH

IC205
REC AMP

IC203
PB AMP

IC204
SELECT
SWITCH

IC202
DOLBY NR AMP

Q403
CAPSTAN MOTOR
H/L SWITCH

Q401,402
CAPSTAN MOTOR
SWITCH

Q404,411
CAPSTAN MOTOR
DRIVE

Q405
RN2402
HIGHT
SPEED
SWITCH

Q407
RELAY DRIVE

Q409,410
SWITCHING

Q412
PB 70μS
DRIVER

PB 70μS SWITCH

CN601
SHUT
+5V
HALF
70EQ
METAL
GND
STOPSW

CN602
+7.5V
PB L
GND
PB R
-7.5V
REEL+
REEL-
+5V(MOTOR)
H/L
-7V(MOTOR)

CN603
SHUT
+5V
HALF
70EQ
METAL
GND
STOPSW

CN604
+7.5V
PB L
GND
PB R
-7.5V
REEL +
REEL-
+5V(MOTOR)
H/L
-7V(MOTOR)

CN607
BIAS
REC L
GND
REC R
RELAY

CN609
A GND
PB L
7.5V
PB R
-7.5V
REC L
GND
REC R
MOTOR 5V
MOTOR GND
POWER ON/OFF
AUB US
MOTOR -7.5V

1 TO MAIN BOA CN104 (See page

TP101 TP201 TEST POINT

Q401, 402
CAPSTAN MOTOR
SWITCH

Q404,411
CAPSTAN MOTOR
DRIVE

CN601
SHUT
+5V
HALF
7OEQ
METAL
GND
STOPSW

CN602
+7.5V
PB L
GND
PB R
-7.5V
REEL+
REEL-
+5V(MOTOR)
H/L
-7V(MOTOR)

CN603
SHUT
+5V
HALF
7OEQ
METAL
GND
STOPSW

CN604
+7.5V
PB L
GND
PB R
-7.5V
REEL +
REEL-
+5V(MOTOR)
H/L
-7V(MOTOR)

CN607
BIAS
REC L
GND
REC R
RELAY

CN609
A GND
PB L
7.5V
PB R
-7.5V
REC L
Ð GND
REC R
MOTOR 5V
MOTOR GND
POWER ON/OFF
AUB US
MOTOR -7.5V

❶ TO MAIN BOARD CN104 (See page 24.)

TP201 L GND R TEST POINT

Q202 2SC4154 Q302 2SC4154 — LINE MUTE —

【MD-A BOARD】

CNP71 M101A REEL MOTOR
CNJ72 M102A CAPSTAN MOTOR
HIGH SPEED
NORMAL SPEED
Q71A 2SA1602 NORMAL/HIGH SPEED SWITCH
HIGH:5.2 HIGH:2.1 HIGH:5 HIGH:5.3

CNJ31
+7.5V
L-CH (PB)
GND
R-CH (PB)
-7.5V
REEL (+)
REEL (-)
+5V
HIGH
-7V

IC31 PB EQ AMP
IC31A(1/2) µPC4570G2
IC31A(2/2) µPC4570G2
PB LEVEL (L)
PB LEVEL (R)

【SW-B BOARD】

CNP81
STOP 1
GND 2
METAL 3
70U 4
HALF 5
+5V 6
S 7
8
9

S81 STOP DET
S83 METAL DET
S82 CrO2 DET
S84 ERASE PROOF (SIDE A)
S85 ERASE PROOF (SIDE B)
S86 HALF DET

IC81 ROTATION DET
IC81A IC81B NJL5165K-B

【SW-A BOARD】

CNP81
STOP 1
GND 2
METAL 3
70U 4
HALF 5
+5V 6
S 7
8
9

S81 STOP DET
S82 CrO2 DET
S86 HALF DET

IC81 ROTATION DET
IC81A NJL5165K-B

【MD-B BOARD】

CNP71 M101B REEL MOTOR
CNJ72 M102B CAPSTAN MOTOR
HIGH SPEED
NORMAL SPEED
Q71B 2SA1602 NORMAL/HIGH SPEED SWITCH
HIGH:5.2 HIGH:2.1 HIGH:5 HIGH:5.3

CNJ31
+7.5V
L-CH (PB)
GND
R-CH (PB)
-7.5V
REEL (+)
REEL (-)
+5V (MOTOR)
HIGH
-7V (MOTOR)

CNJ33
BIAS
L-CH (REC)
GND
R-CH (REC)
RELAY
+5V
DIRECTION
QUICK
NC
NC

IC31 PB EQ AMP
IC31B(1/2) µPC4570G2
IC31B(2/2) µPC4570G2
PB LEVEL (L)
PB LEVEL (R)

Q53 BIAS REG
Q51,52 BIAS OSC
T51 BIAS OSC
REC BIAS
RY31

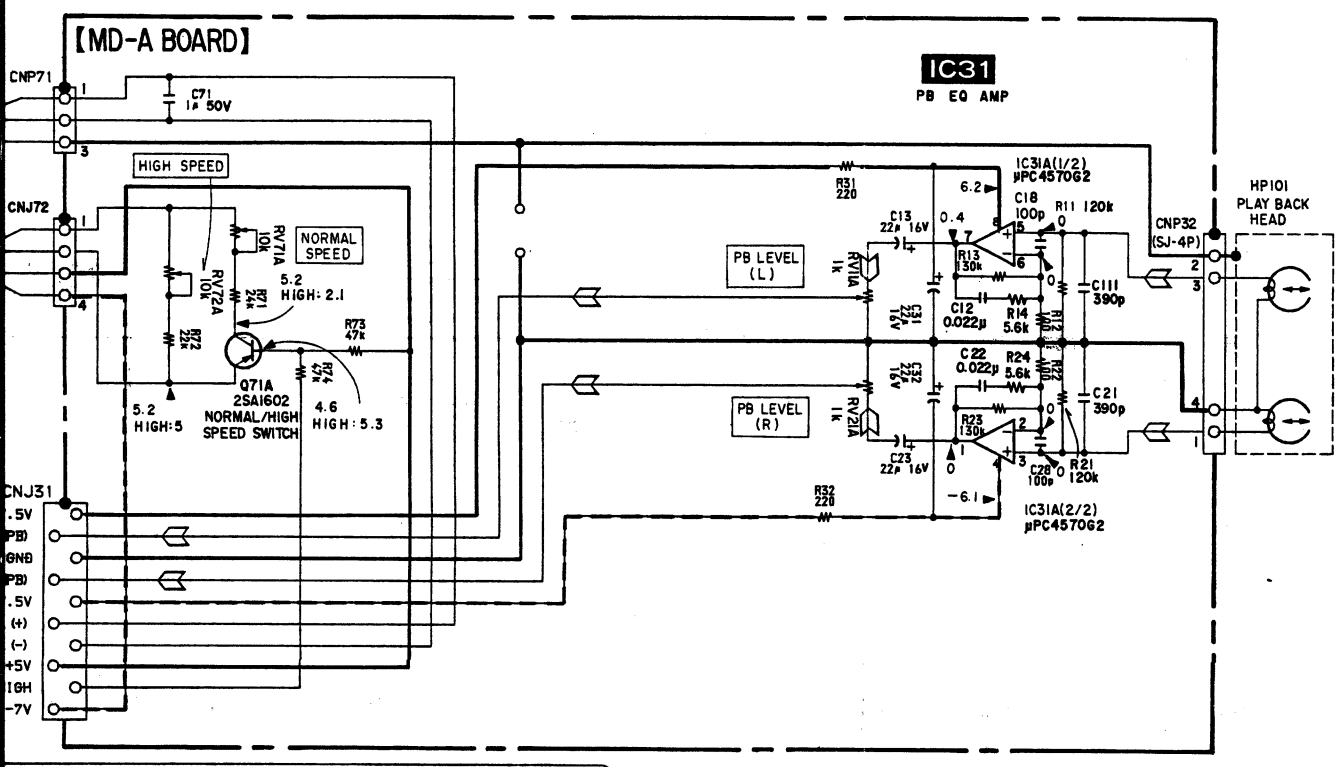

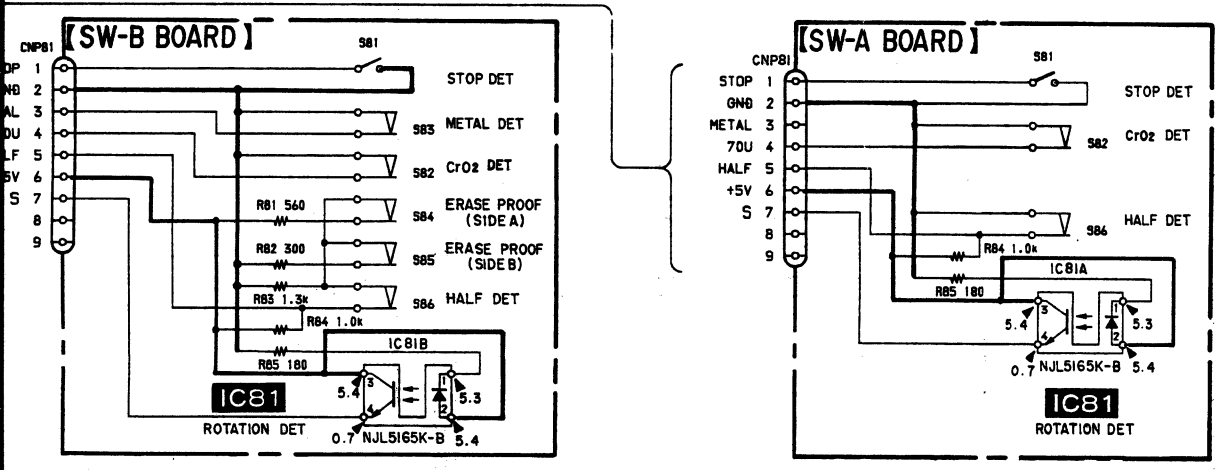

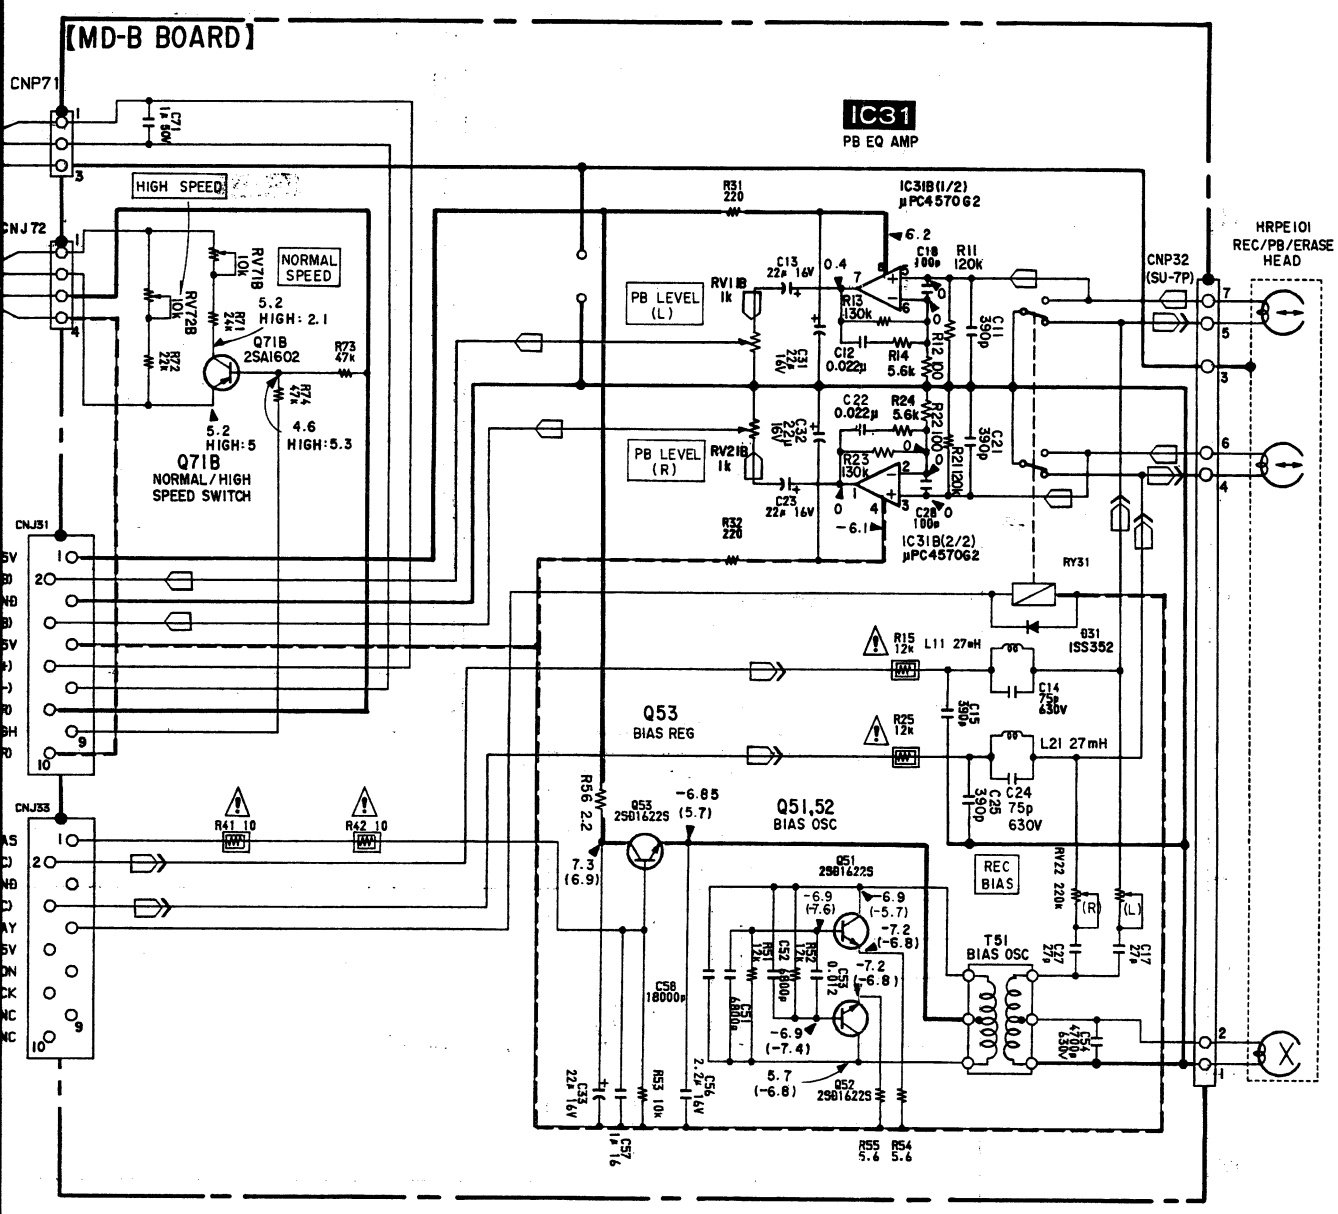

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼W or less unless otherwise specified.
- △ : internal component.
- : nonflammable resistor.
- : fusible resistor.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line
- : B– Line
- : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
  no mark : PLAY
  ( ) : REC
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  : PB (DECK A)
  : PB (DECK B)
  : REC (DECK B)

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and ¼W or less unless otherwise specified.
- : nonflammable resistor.
- : fusible resistor.

Note:	Note:
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line
- : B− Line
- : adjustment for repair.
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
  no mark: PLAY
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  : PB (DECK A)
  : REC (DECK B)

- CND: Canadian model
- G: Germany model
- IT: Italian model
- AUS: Australian model
- EA: Saudi Arabia model
- TR: Tourist model

5-5. SCHEMATIC DIAGRAM —MAIN SECTION—

• Refer to page 40 for IC Block Diagrams

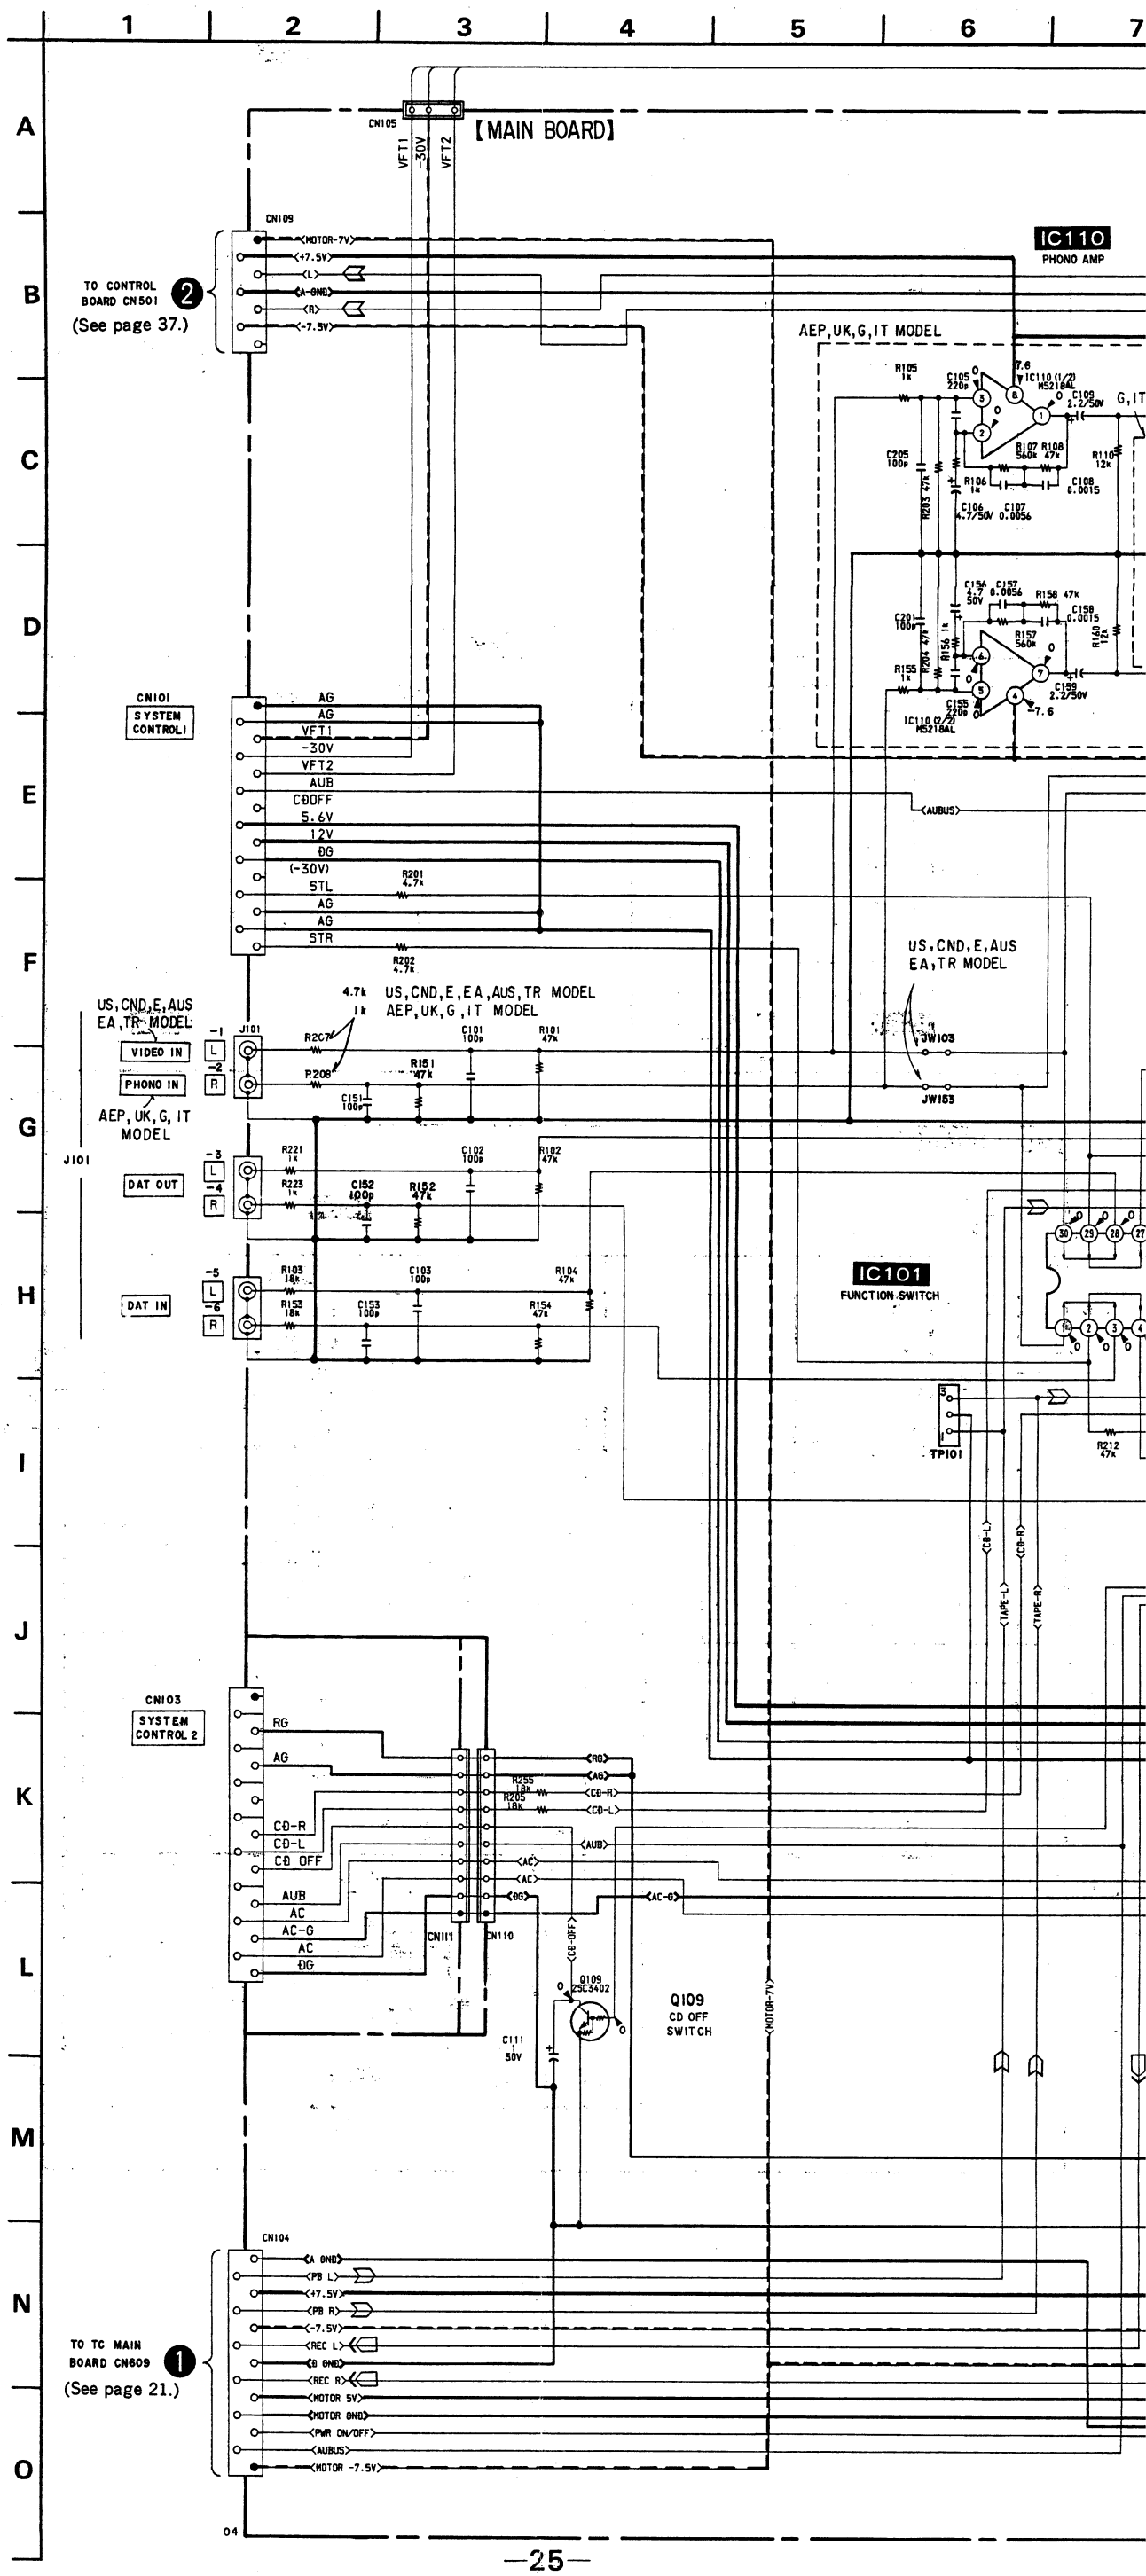

er to page 40 for IC Block Diagrams

5 6 7 8 9 10 11 12 13 14 15

IC110
PHONO AMP

AEP,UK,G,IT MODEL

G,IT MODEL

US,CND,E,AUS
EA,TR MODEL

JW103

JW153

IC101
FUNCTION SWITCH

LC7822

TP101

Q107,108
SURROUND
SWITCH

IC106
GEQ AMP

IC104
GEQ AMP

IC105
GEQ
VOLUME

Q902
POWER SWITCH

Q901
REG

IC901
REG

220/50V US,CND MODEL
330/50V EXCEPT US,
CND MODEL

Q904
+7.5V REG

Q907
-7.5V REG

Q903
POWER
SWITCH

IC902
5.6V REG

Q109
CD OFF
SWITCH

F902 3.15A

F901
3.15A 125V

F902 3.15A 125V

F901 3.15A

US,CND
MODEL

EXCEPT
US,CND
MODEL

Q910,911
POWER SWITCH

Q929,930
POWER SWITCH

Q909,913
-7.5V REG

Q908,912
+5V REG

MC-Service

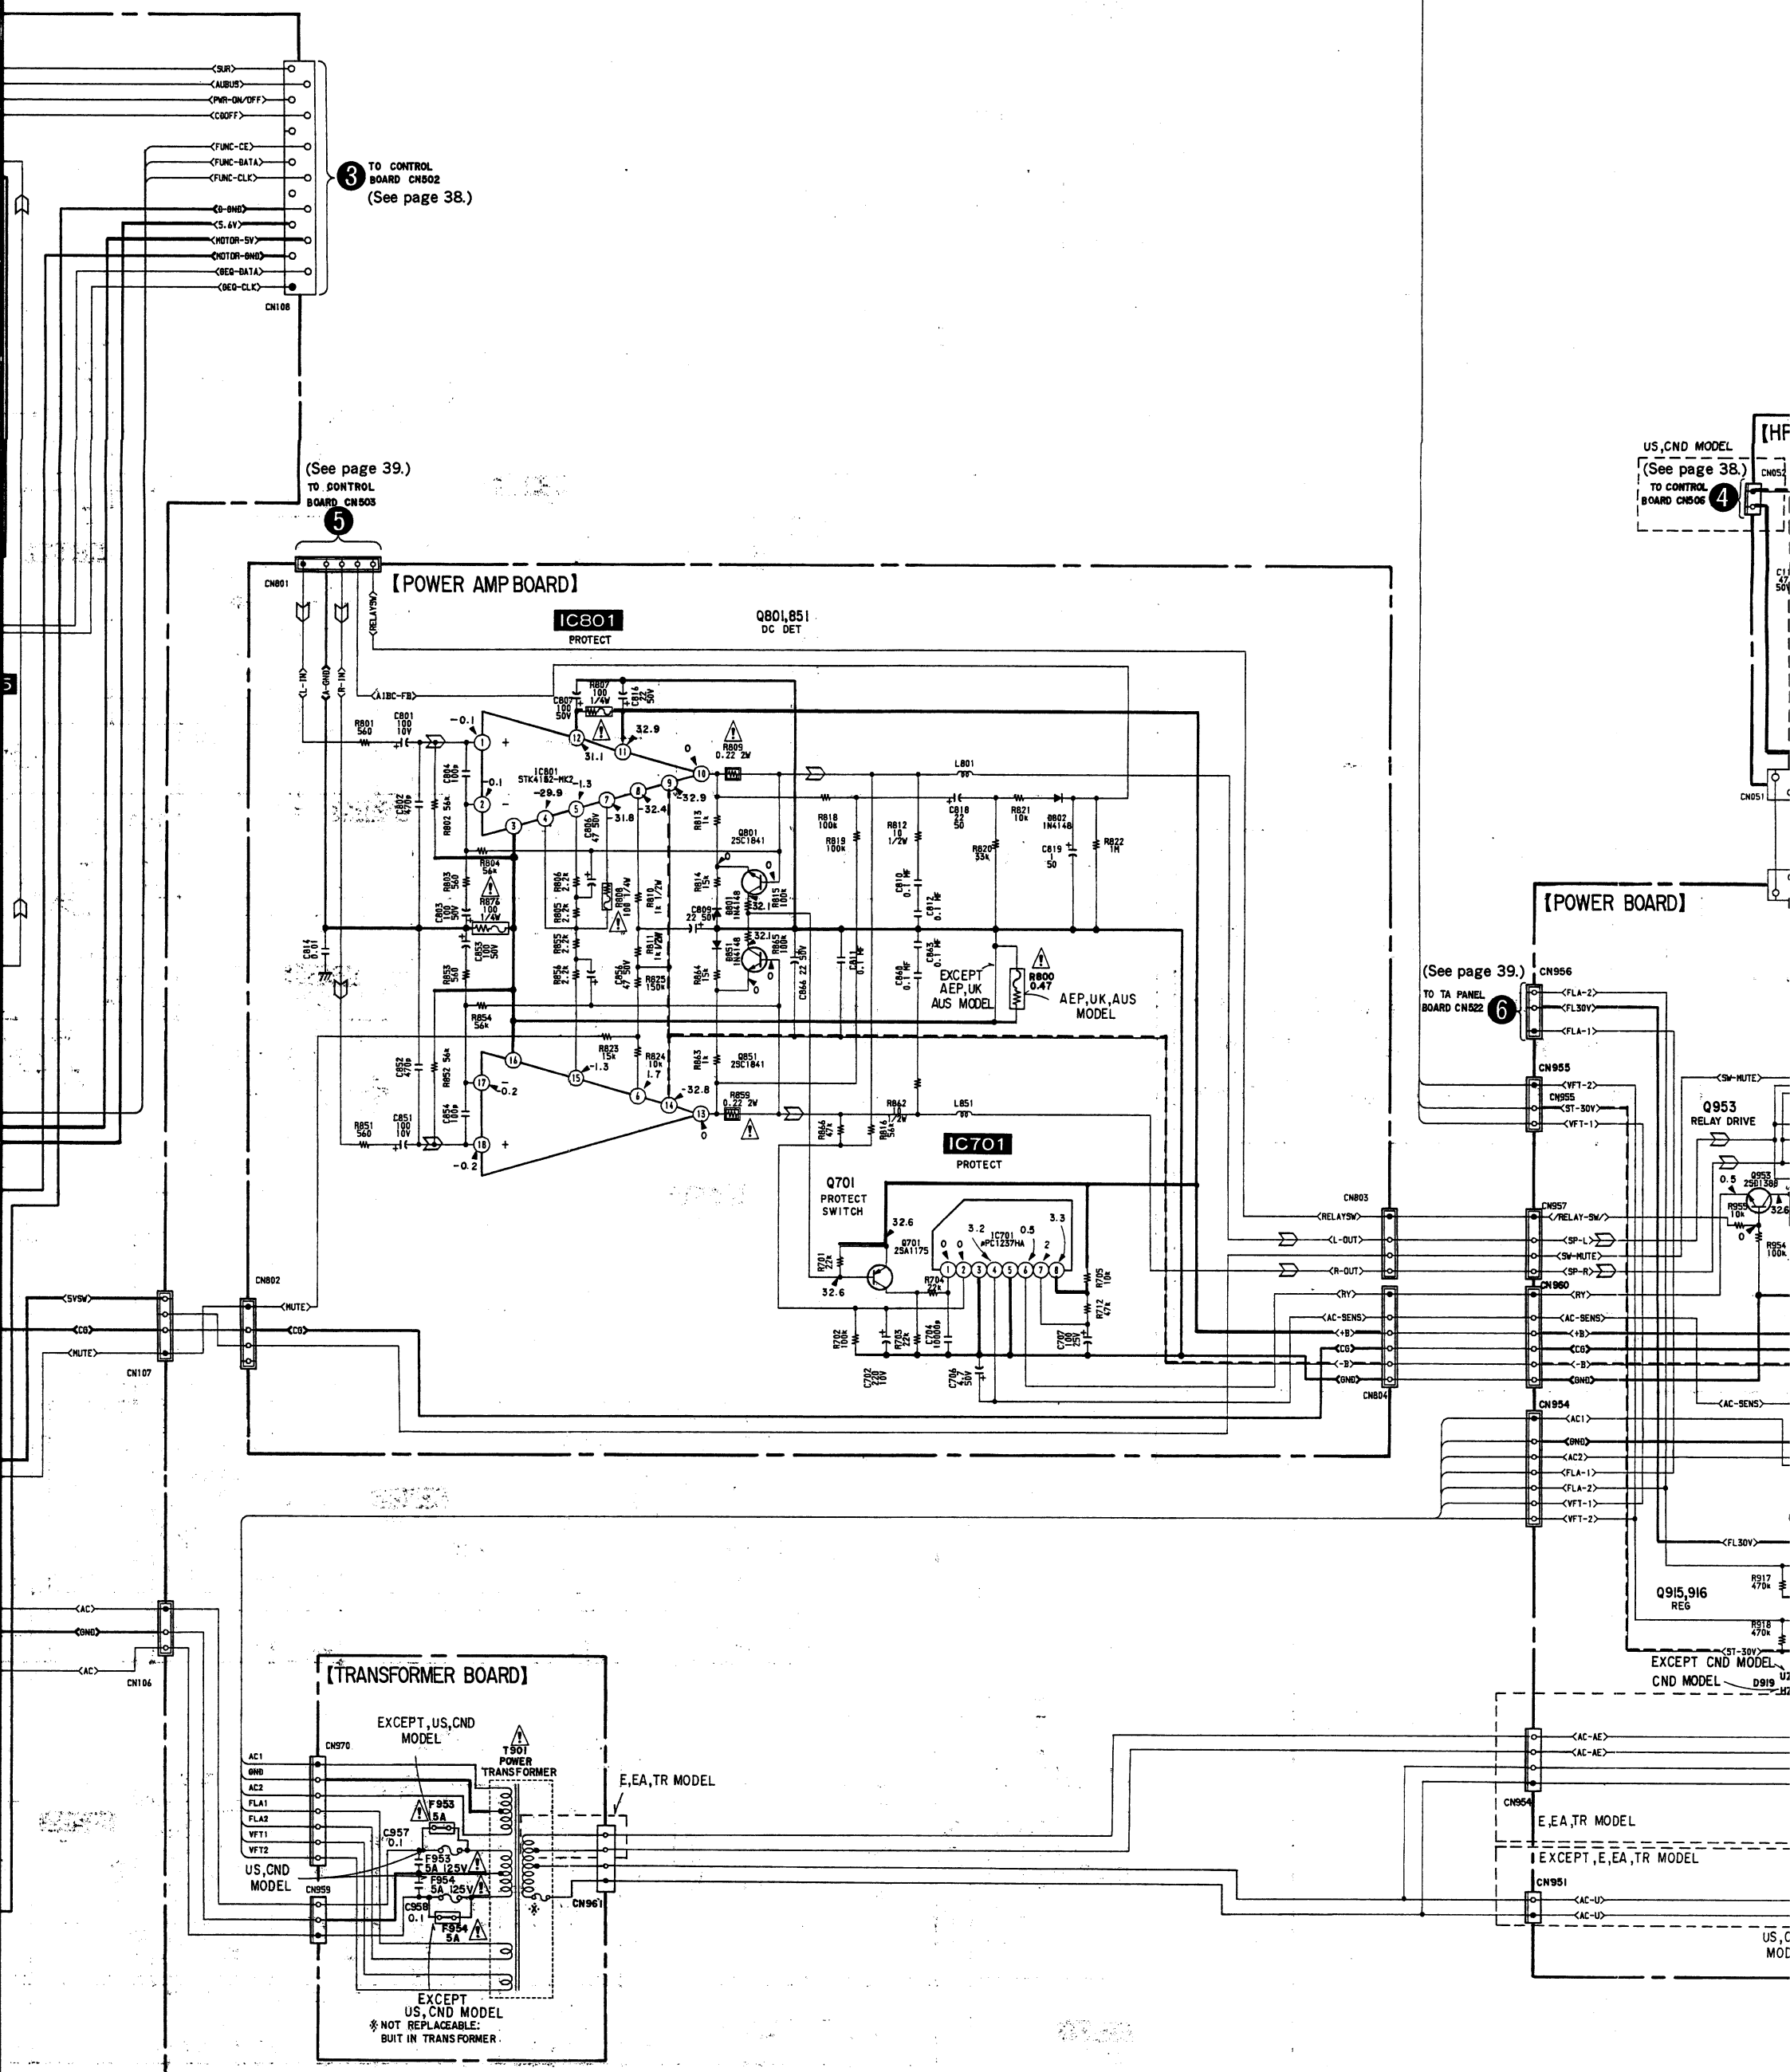
(SUR)
(AUBUS)
(PWR-ON/OFF)
(CDOFF)
(FUNC-CE)
(FUNC-DATA)
(FUNC-CLK)
(D-GND)
(5.6V)
(MOTOR-5V)
(MOTOR-GND)
(BEQ-DATA)
(BEQ-CLK)
CN108
3 TO CONTROL BOARD CN502
(See page 38.)
(See page 39.)
TO CONTROL BOARD CN503
5
CN801
【POWER AMP BOARD】
IC801
PROTECT
Q801,851
DC DET
(L-IN)
(L-GND)
(R-IN)
(AIBC-FB)
IC801 STK4182-MK2
L801
L851
EXCEPT AEP,UK AUS MODEL
AEP,UK,AUS MODEL
IC701
PROTECT
Q701
PROTECT SWITCH
Q701 2SA1175
IC701 μPC1237HA
CN803
(RELAYSW)
(L-OUT)
(R-OUT)
(RY)
(AC-SENS)
(+B)
(CG)
(-B)
(GND)
CN804
CN802
(5VSW)
(CG)
(MUTE)
CN107
CN106
(AC)
(GND)
(AC)
【TRANSFORMER BOARD】
EXCEPT,US,CND MODEL
CN970
AC1
GND
AC2
FLA1
FLA2
VFT1
VFT2
US,CND MODEL
CN959
T501 POWER TRANSFORMER
F953 5A
F954 5A 125V
C957 0.1
C958 0.1
CN961
E,EA,TR MODEL
EXCEPT US,CND MODEL
※NOT REPLACEABLE: BUIT IN TRANSFORMER
US,CND MODEL
(See page 38.)
TO CONTROL BOARD CN506 4
【HF
CN052
CN051
【POWER BOARD】
(See page 39.)
TO TA PANEL BOARD CN522 6
CN956
(FLA-2)
(FL30V)
(FLA-1)
CN955
(VFT-2)
(ST-30V)
(VFT-1)
(SW-MUTE)
Q953
RELAY DRIVE
CN957
(/RELAY-SW/)
(SP-L)
(SW-MUTE)
(SP-R)
CN960
(RY)
(AC-SENS)
(+B)
(CG)
(-B)
(GND)
CN954
(AC1)
(GND)
(AC2)
(FLA-1)
(FLA-2)
(VFT-1)
(VFT-2)
(FL30V)
Q915,916
REG
(ST-30V)
EXCEPT CND MODEL
CND MODEL
D919
(AC-AE)
(AC-AE)
CN954
E,EA,TR MODEL
EXCEPT,E,EA,TR MODEL
CN951
(AC-U)
(AC-U)
US,C
MOD

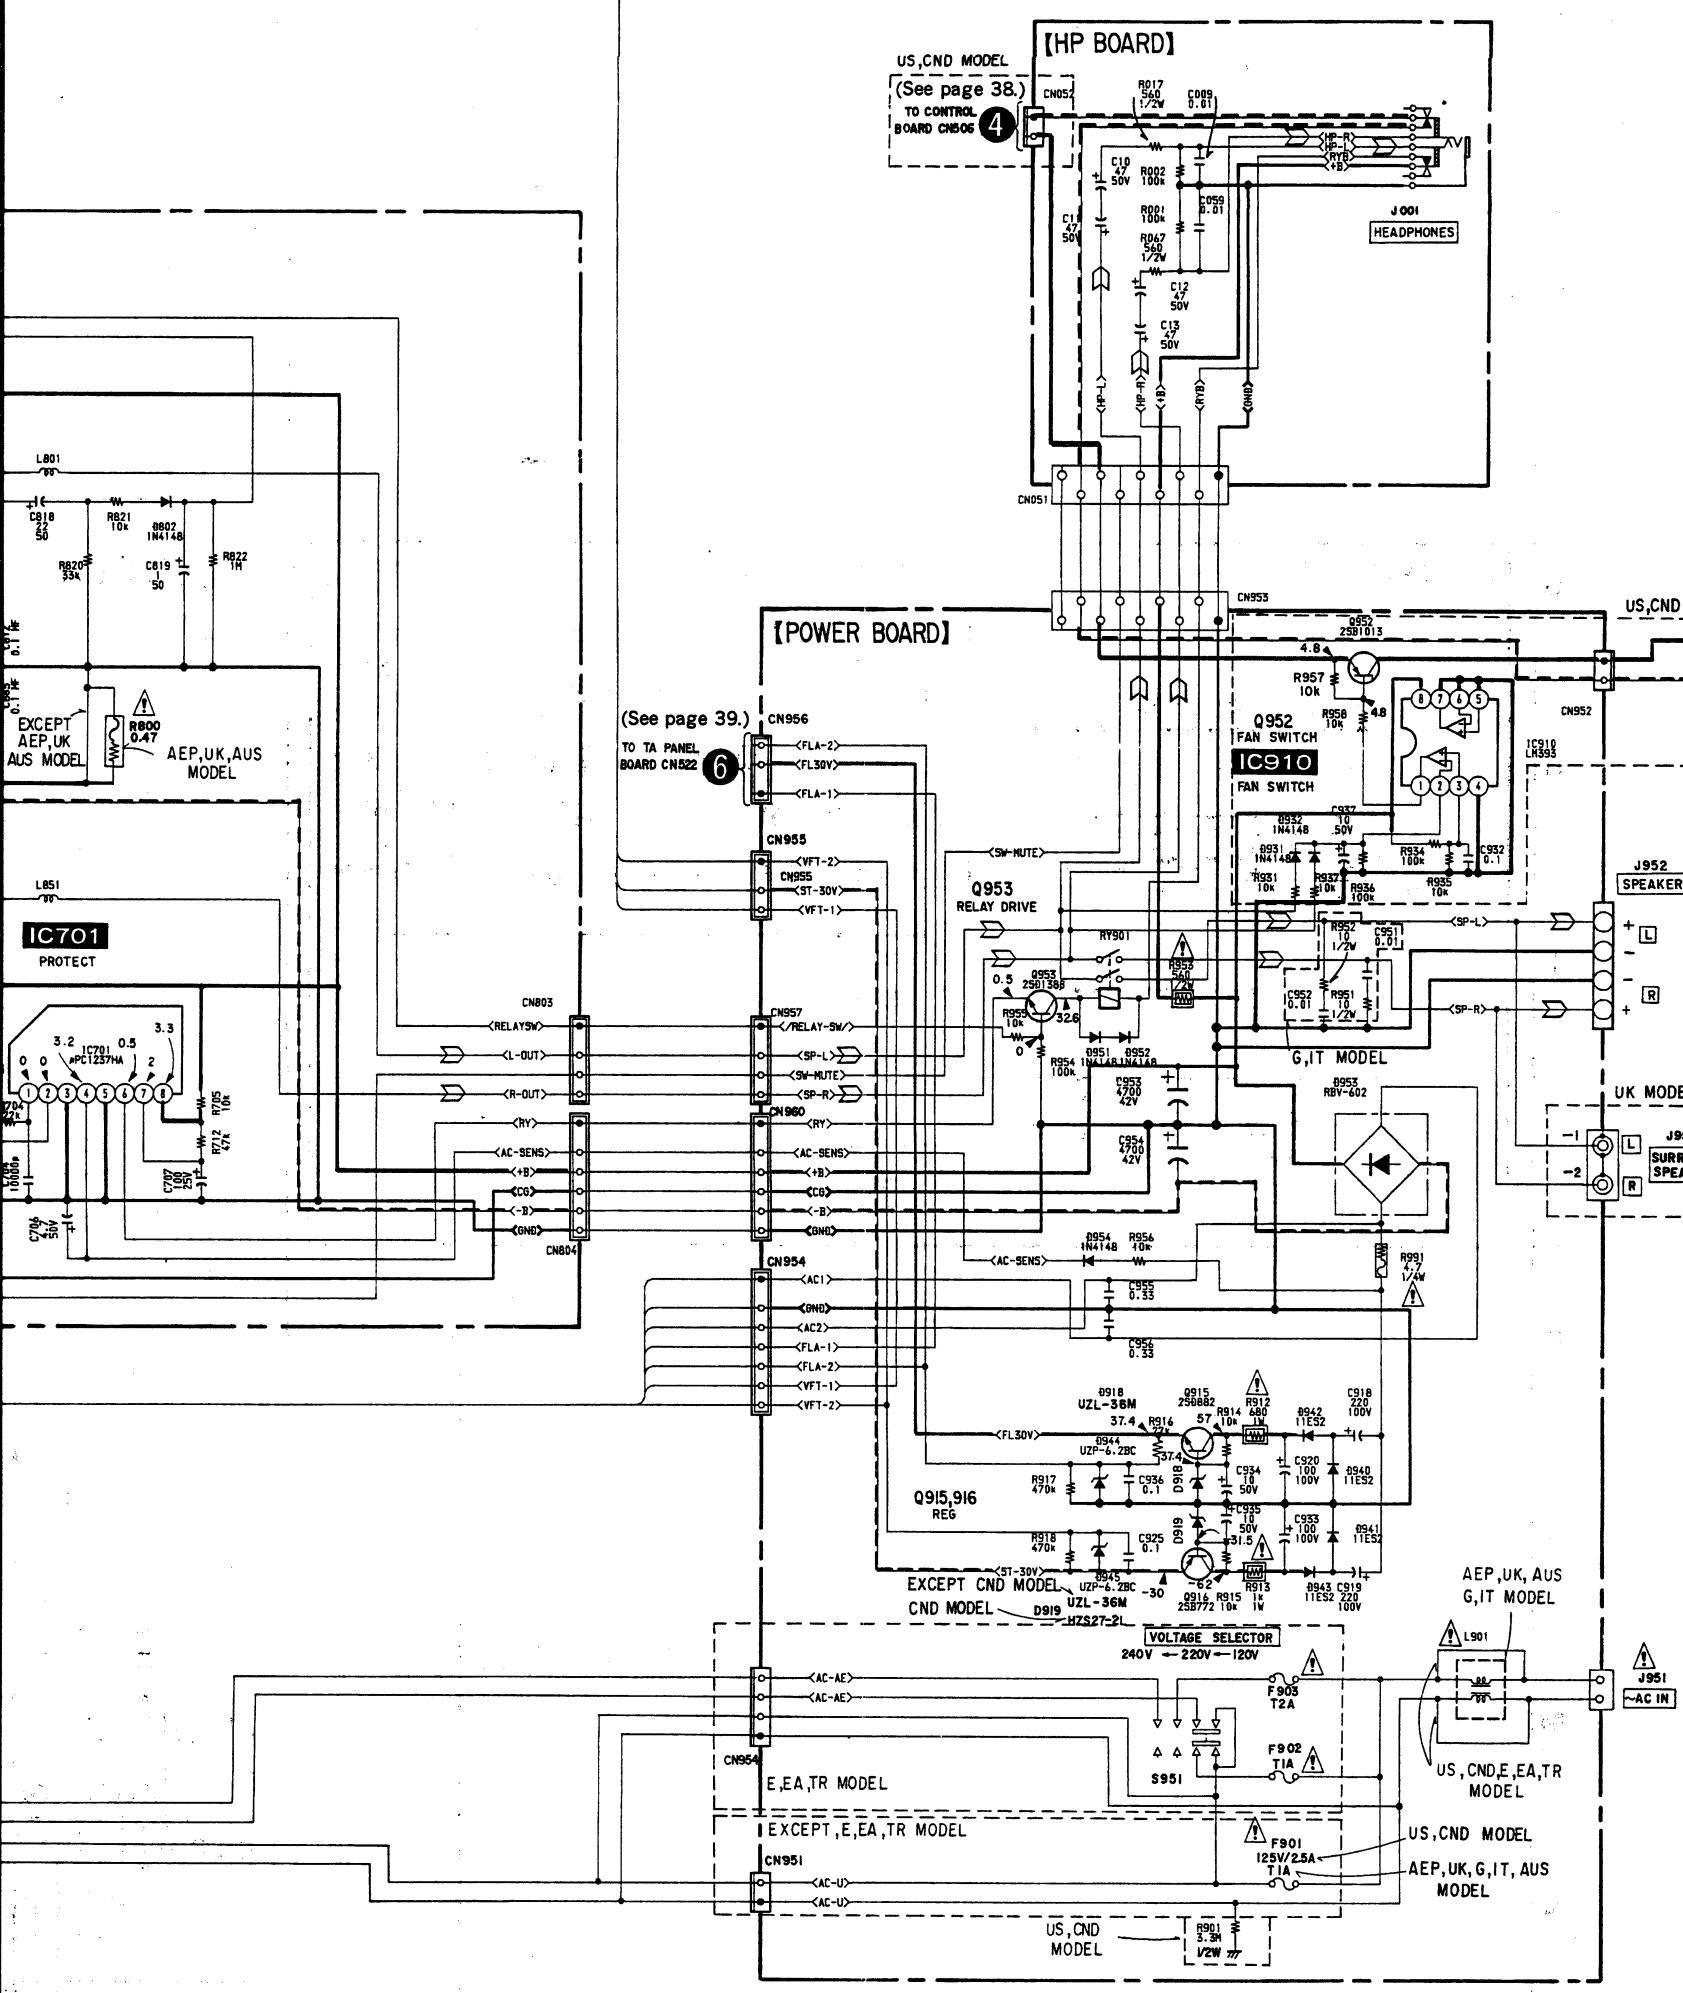
【HP BOARD】
US,CND MODEL
(See page 38.)
TO CONTROL BOARD CN505
CN052
R017 560 1/2W
C089 0.01
C10 47 50V
R002 100k
R001 100k
R047 560 1/2W
C059 0.01
C11 47 50V
C12 47 50V
C13 47 50V
HP-R
HP-L
RYB
+B
J001
HEADPHONES
CN051
【POWER BOARD】
CN953
Q952 2SB1013
R957 10k
R958 10k
Q952 FAN SWITCH
IC910 FAN SWITCH
IC910 LM393
C937 10 50V
D932 1N4148
D931 1N4148
R931 10k
R932 10k
R934 100k
R935 10k
R936 100k
C932 0.1
US,CND MODEL
CN952
FAN MOTOR
(See page 39.)
TO TA PANEL BOARD CN522
CN956
FLA-2
FL30V
FLA-1
CN955
VFT-2
ST-30V
VFT-1
SW-MUTE
Q953 RELAY DRIVE
RY901
Q953 2SD1398
R955 10k
R954 100k
D951 1N4148
D952 1N4148
R952 10 1/2W
C951 0.01
C952 0.01
R951 10 1/2W
SP-L
SP-R
J952 SPEAKER
G,IT MODEL
C953 4700 42V
C954 4700 42V
D953 RBV-602
UK MODEL
J953 SURROUND SPEAKER
CN803
RELAY-SW
L-OUT
R-OUT
CN957
CN960
RY
AC-SENS
+B
CG
-B
GND
CN804
CN954
AC1
AC2
D954 1N4148
R956 10k
R991 4.7 1/4W
C955 0.33
C956 0.33
Q915,916 REG
D918 UZL-38M
Q915 2SD882
R912 680 1W
D942 1ES2
C918 220 100V
R916 22k
D944 UZP-6.2BC
R914 10k
C920 100 100V
D940 1ES2
R917 470k
C936 0.1
D916
C934 10 50V
C935 10 50V
C933 100 100V
D941 1ES2
R918 470k
C925 0.1
D915
D945 UZP-6.2BC
Q916 2SB772
R915 1k 1W
R913 1k 1W
D943 1ES2
C919 220 100V
EXCEPT CND MODEL
CND MODEL
D919 UZL-36M HZS27-2L
VOLTAGE SELECTOR
240V ← 220V ← 120V
AEP,UK, AUS G,IT MODEL
L901
J951 ~AC IN
F903 T2A
F902 T1A
S951
US,CND,E,EA,TR MODEL
E,EA,TR MODEL
EXCEPT,E,EA,TR MODEL
CN951
AC-U
F901 125V/2.5A T1A
US,CND MODEL
AEP,UK,G,IT,AUS MODEL
R901 3.3M V2W
L801
C818 22 50
R821 10k
D802 1N4148
R822 1M
R820 33k
C819 1 50
EXCEPT AEP,UK AUS MODEL
R800 0.47
AEP,UK,AUS MODEL
L851
IC701 PROTECT
IC701 μPC1237HA
R705 10k
R712 47k
C707 100 25V
C706 50V

5-6. PRINTED WIRING BOARDS —MAIN SECTION— • Refer to page 13 for Semiconductor Lead Layouts.

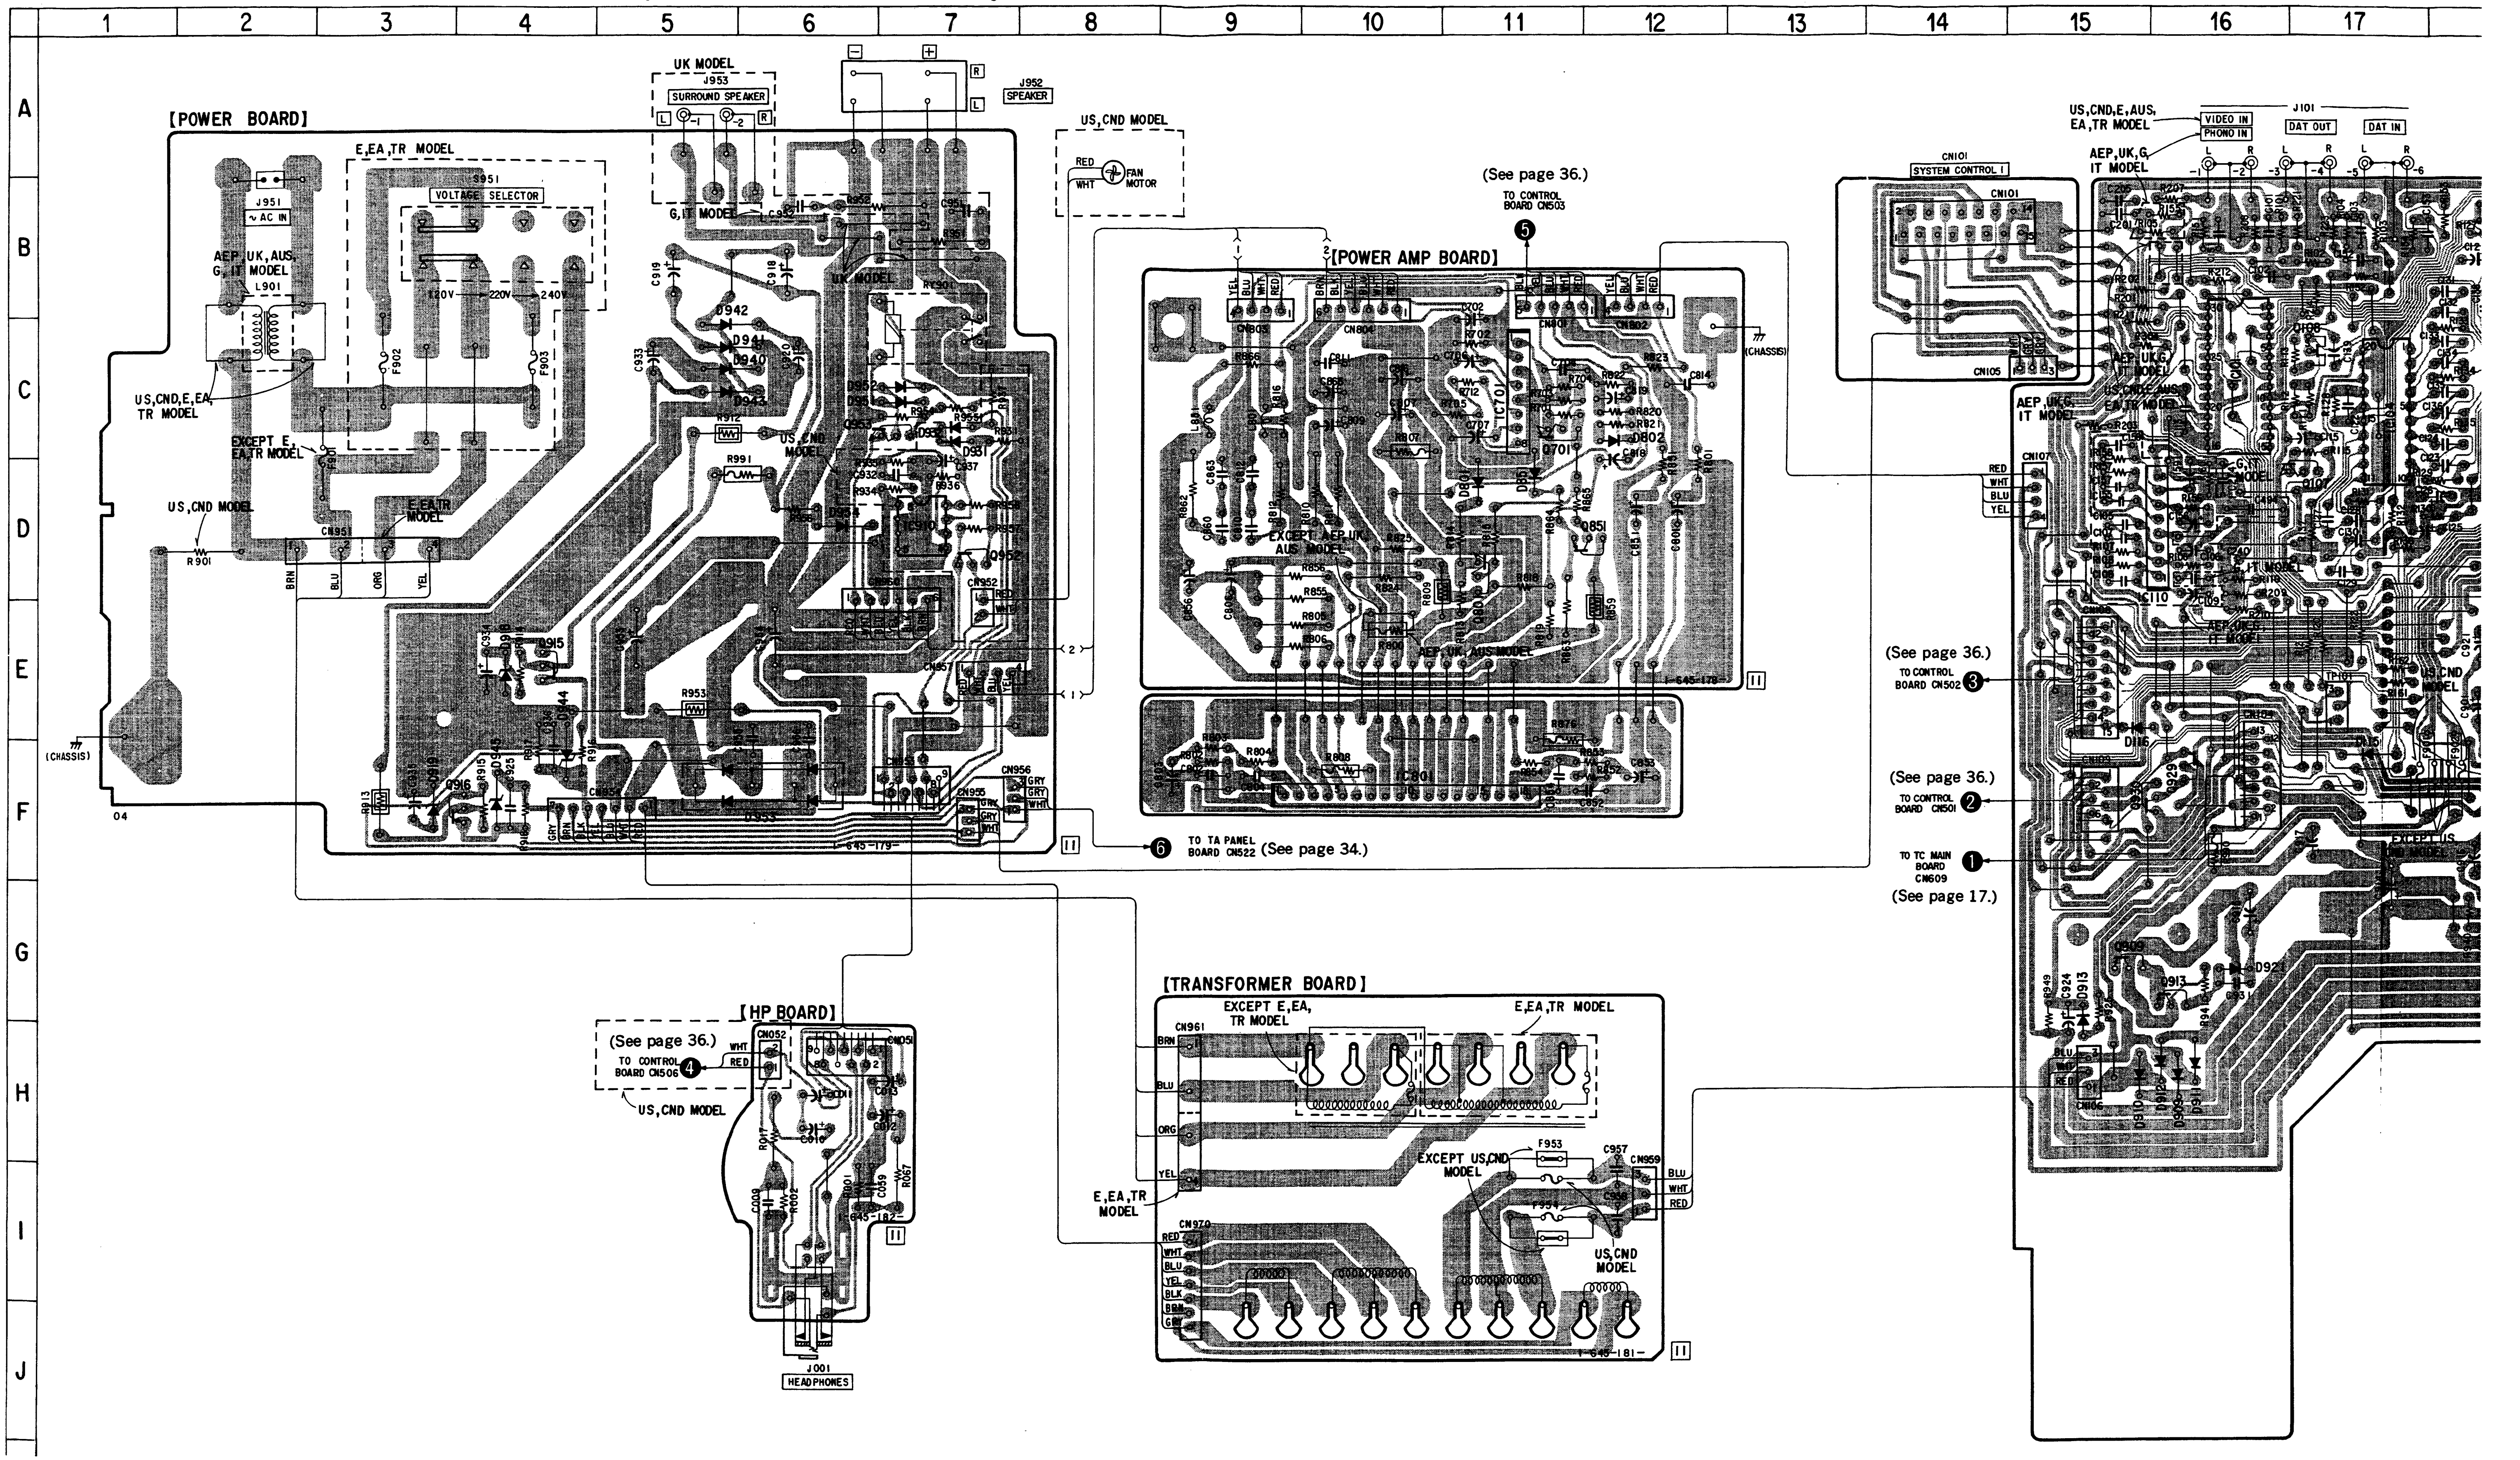

[POWER BOARD]
[POWER AMP BOARD]
[TRANSFORMER BOARD]
[HP BOARD]
UK MODEL
J953
SURROUND SPEAKER
J952
SPEAKER
US,CND MODEL
FAN MOTOR
E,EA,TR MODEL
S951
VOLTAGE SELECTOR
120V
220V
240V
J951
~AC IN
AEP,UK,AUS, G,IT MODEL
L901
US,CND,E,EA, TR MODEL
EXCEPT E, EA,TR MODEL
US,CND MODEL
R901
CN951
BRN
BLU
ORG
YEL
(CHASSIS)
G,IT MODEL
UK MODEL
(See page 36.)
TO CONTROL BOARD CN503
TO TA PANEL BOARD CN522 (See page 34.)
EXCEPT AEP,UK, AUS MODEL
AEP,UK,AUS MODEL
IC801
IC701
CN101
SYSTEM CONTROL I
US,CND,E,AUS, EA,TR MODEL
VIDEO IN
PHONO IN
AEP,UK,G, IT MODEL
J101
DAT OUT
DAT IN
TO CONTROL BOARD CN502
TO CONTROL BOARD CN501
TO TC MAIN BOARD CN609
(See page 17.)
TO CONTROL BOARD CN506
J001
HEADPHONES
EXCEPT E,EA, TR MODEL
EXCEPT US,CND MODEL
US,CND MODEL
1-645-179-
1-645-178-
1-645-181-
1-645-182-

MC-Service

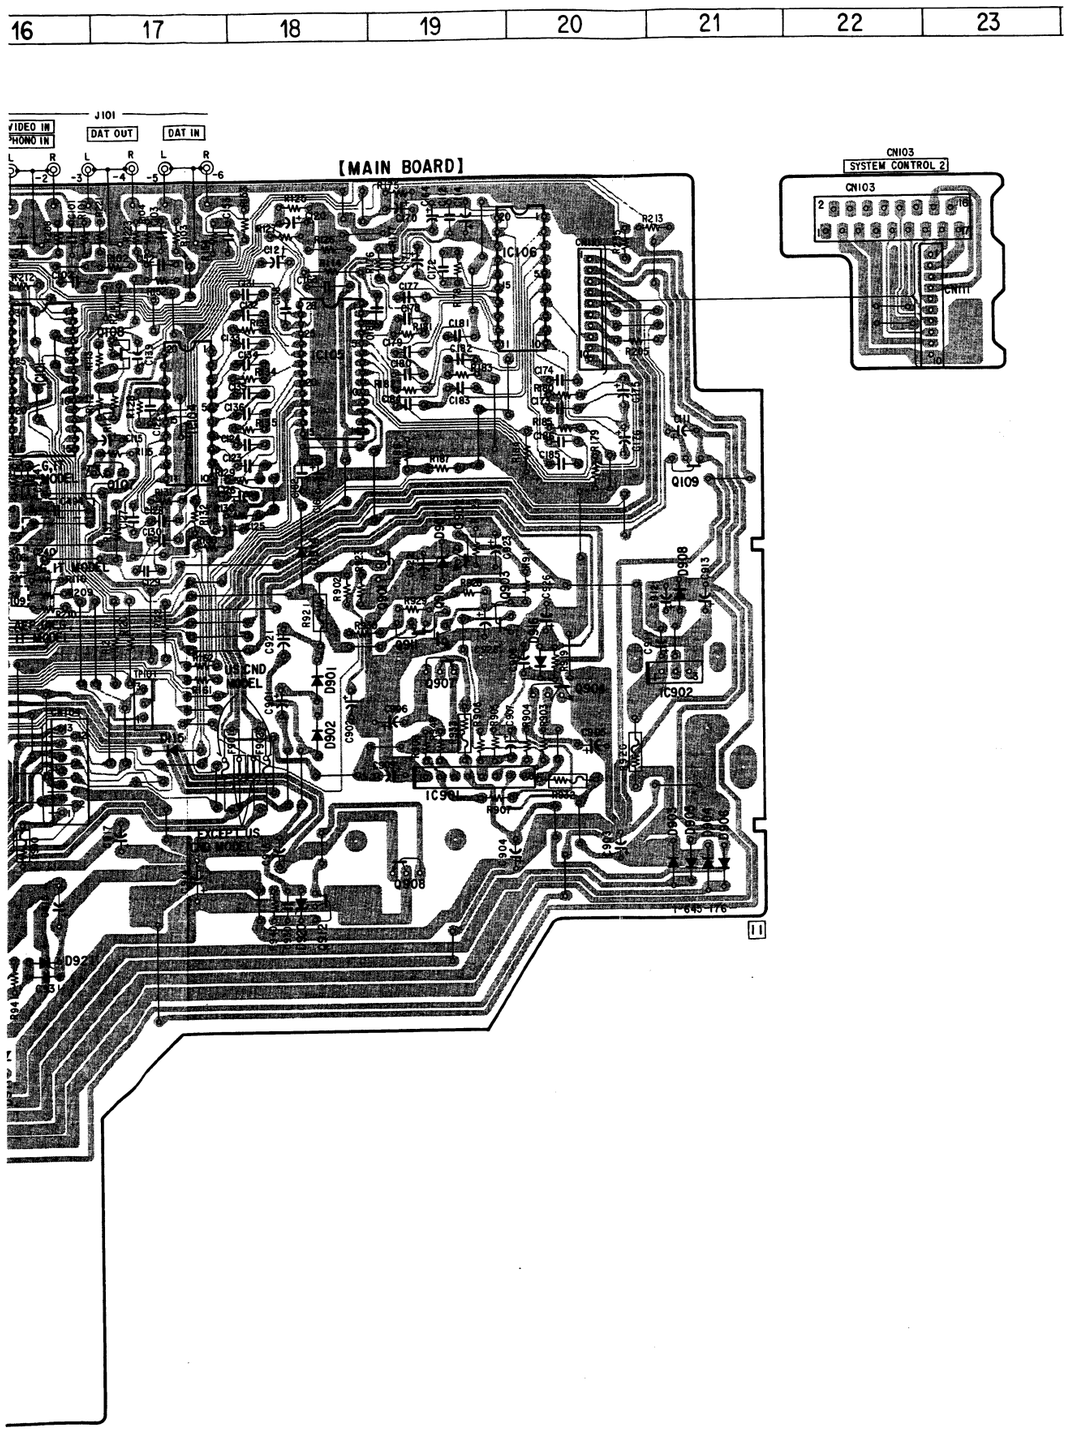
16
17
18
19
20
21
22
23
J101
VIDEO IN
PHONO IN
DAT OUT
DAT IN
[MAIN BOARD]
CN103
SYSTEM CONTROL 2
CN103
CN111
IC106
IC105
IC902
IC901
Q109
Q907
Q908
Q901
D901
D902
D908
D921
R213
C174
C183
C181
C177
C127
C121
C135
C115
C107
C106
C105
C102
C101
C103
C104
C108
C109
C110
C111
C112
C113
C114
C116
C117
C118
C119
C120
C122
C123
C124
C125
C126
C128
C129
C130
C131
C132
C133
C134
C136
C137
C138
C139
C140
C141
C142
C143
C144
C145
C146
C147
C148
C149
C150
C151
C152
C153
C154
C155
C156
C157
C158
C159
C160
C161
C162
C163
C164
C165
C166
C167
C168
C169
C170
C171
C172
C173
C175
C176
C178
C179
C180
C182
C184
C185
C186
C187
C188
C189
C190
C191
C192
C193
C194
C195
C196
C197
C198
C199
C200
C201
C202
C203
C204
C205
C206
C207
C208
C209
C210
C211
C212
C213
C214
C215
C216
C217
C218
C219
C220
C221
C222
C223

5-8. SCHEMATIC DIAGRAM —PANEL SECTION— • Refer to page 40 for IC Block Diagrams.

Note:

- All capacitors are in μF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.
- △ : internal component.
- ▬▬ : B+ Line
- ▬ ▬ ▬ : B– Line
- Voltage and waveforms are dc with respect to ground under no-signal conditions.
  no mark: PLAY
  ✳ : Impossible measurement point
- Voltages are taken with a VOM (Input Impedance 10MΩ). Voltage variations may be noted due to normal production tolerances.
- Signal path.
  ▷ : PB (DECK A)
- CND: Canadian model
- G: Germany model
- IT: Italian model
- AUS: Australian model
- EA: Saudi Arabia model
- TR: Tourist model

【CONTROL BOARD】

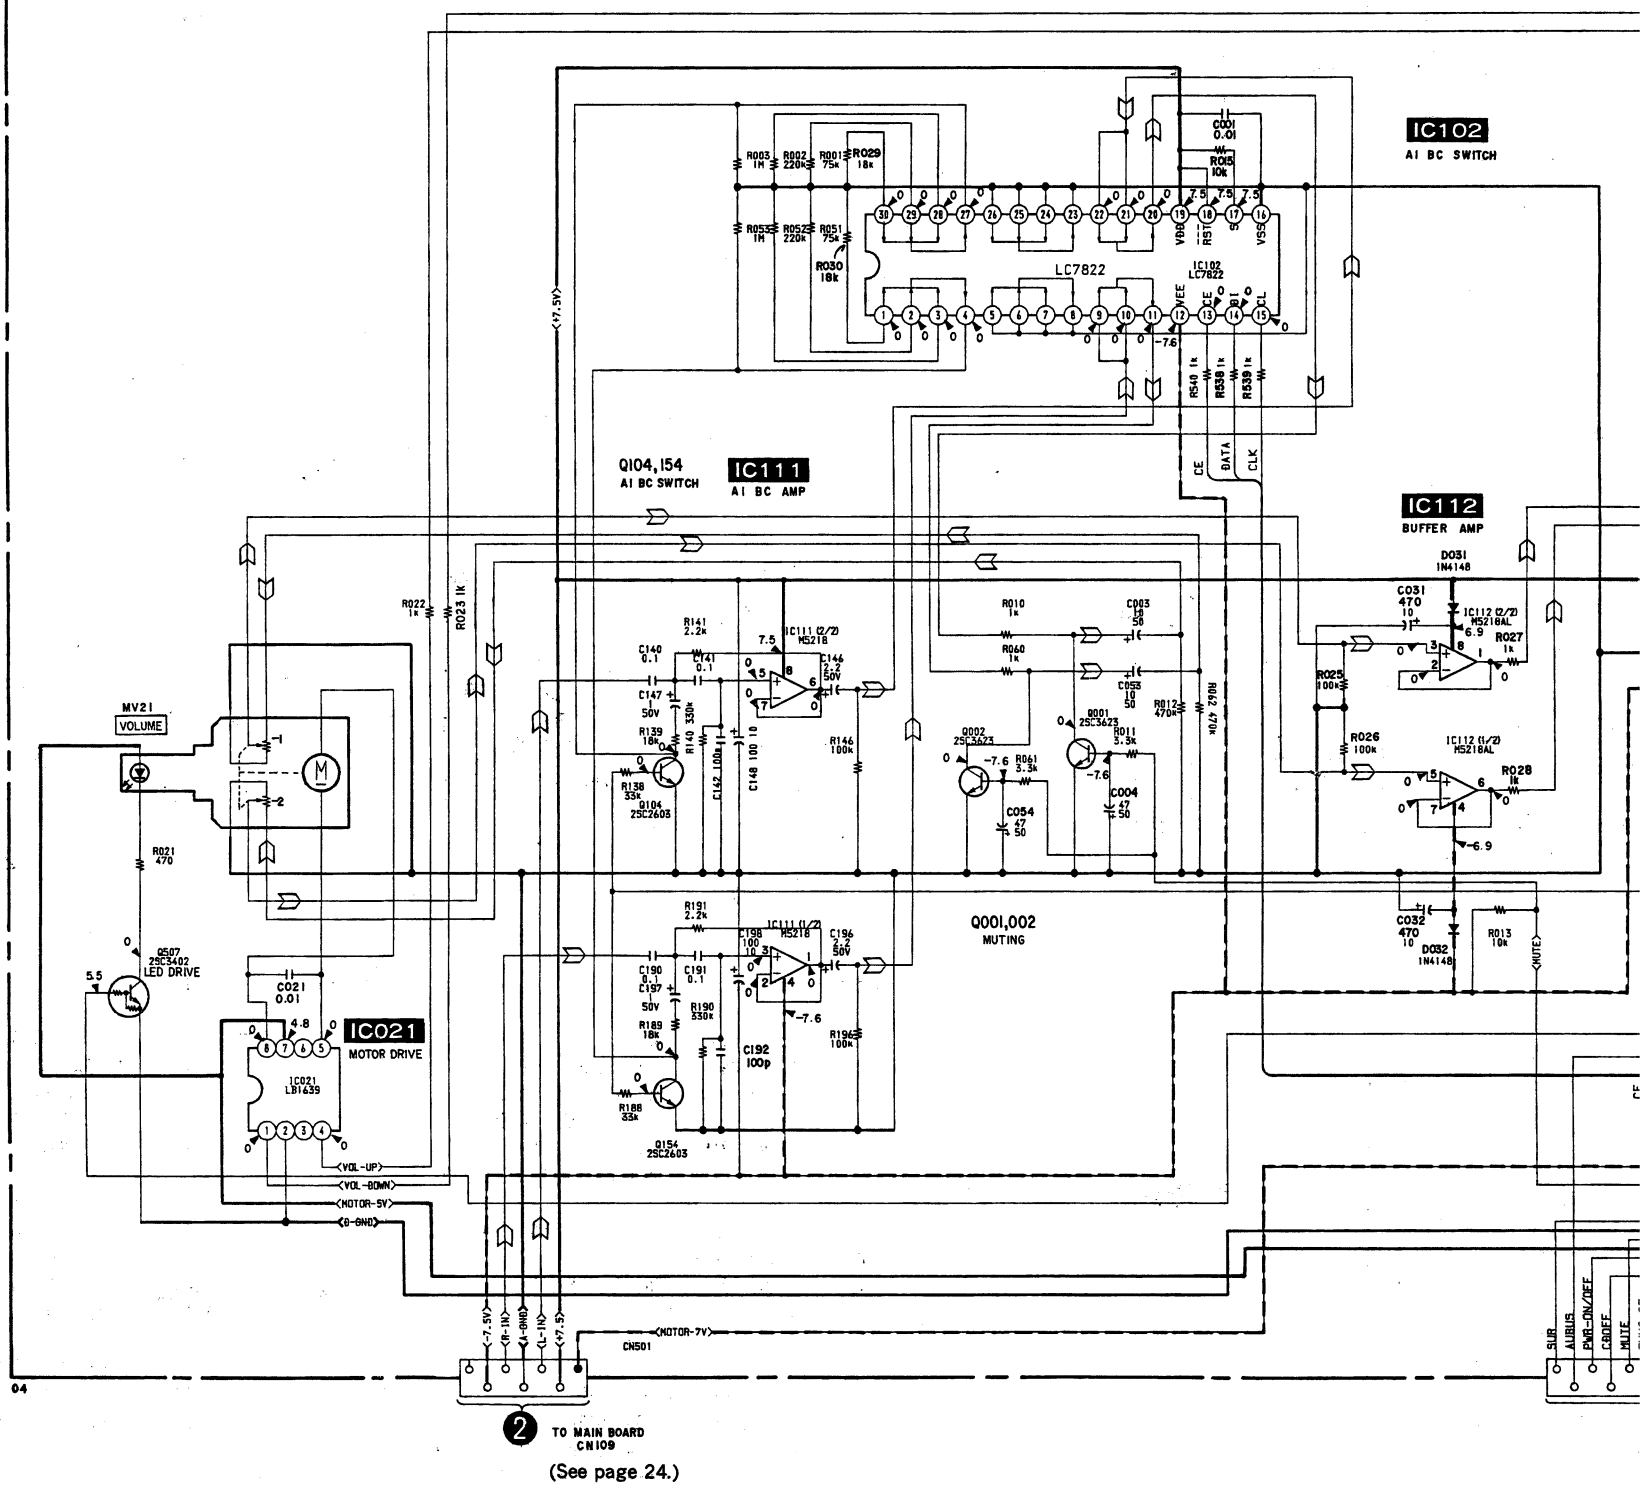

(See page 24.)

4 5 6 7 8 9 10 11 12 13 14 15

se noted. pF: μμF
t for electrolytics

s unless otherwise

ct to ground under

mpedance 10MΩ).
to normal produc-

【TA PANEL BOARD】

FL521 FLUORESCENT INDICATOR TUBE

IC551 TA62C950NF

C522 0.1 C523 0.1 R551 1k

<VOL-DOWN>
<VOL-UP>

IC102
AI BC SWITCH

LC7822 IC102 LC7822

Q104,154 AI BC SWITCH
IC111 AI BC AMP
IC112 BUFFER AMP

Q001,002 MUTING

Q104 2SC2603 Q154 2SC2603

Q505 2SA1115 SWITCH
Q509 1N4148 SWITCH

X501 8.38M

IC501 SYSTEM CONT IC501 μPD78012

AEP,UK,G,IT MODEL
US,CND,E,EA AUS,TR MODEL

Q501 AU BUS BUFFER

US,CND MODEL

<7.5V> <L-IND> <7.5V> <MOTOR-7V>

CN501

TO MAIN BOARD CN109
(See page 24.)

CN502

TO MAIN BOARD CN108
(See page 27.)

CN506

TO HP BOARD CN052
(See page 28.)

(See page 28.)

TO POWER BOARD CN956

【TA PANEL BOARD】

FL521 FLUORESCENT INDICATOR TUBE

IC551 FL DRIVE

IC551 T862C950RF

SYSTEM POWER S520 / DISPLAY S521 / DIRECT S522 / FUNCTION S523 / + S524 / PRESET S525 / − S526

DIRECT R527 560 Ø520 / TUNER Ø521 / R528 560 / CD Ø522 / DAT Ø523 / Ø524 / Ø525 / ON STANDBY Ø526

AEP, UK, G, IT MODEL: PHONO, TUNER, CD, DAT, TAPE

US,CND, E,AUS,EA, TR MODEL: TUNER, CD, DAT, TAPE, VIDEO

DIGITAL EFFEC CONTROL

(See page 28.)

IC504 RESET DET

IC501 SYSTEM CONTROL IC501 μPD78012

Q502 RESET

Q506 RELAY SWITCH

Q503 MUTING SWITCH

Q505 2SA1115 SWITCH

Q501 AU BUS BUFFER

AEP,UK,G,IT MODEL

US,CND,E,EA AUS,TR MODEL

US,CND MODEL

TO MAIN BOARD CN108

(See page 27.)

TO HP BOARD CN052

(See page 28.)

TO POWER AMP BOARD CN801

(See page 27.)

• IC Block Diagrams

IC021 LB1639

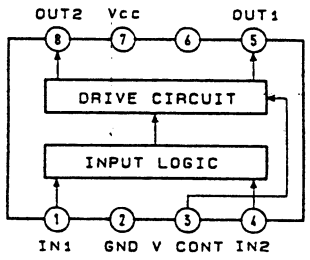

IC101, 102 LC7822

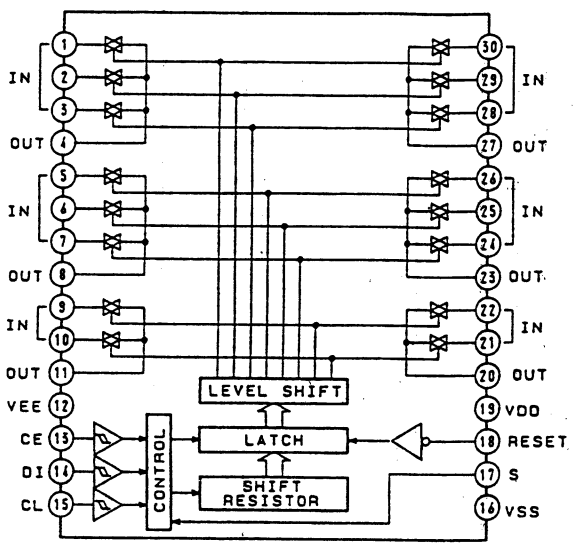

IC104, 106 M5229P

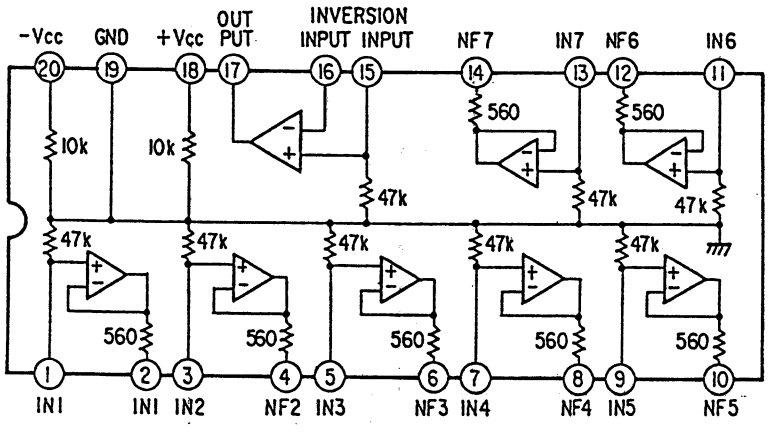

IC105 NJU7305L

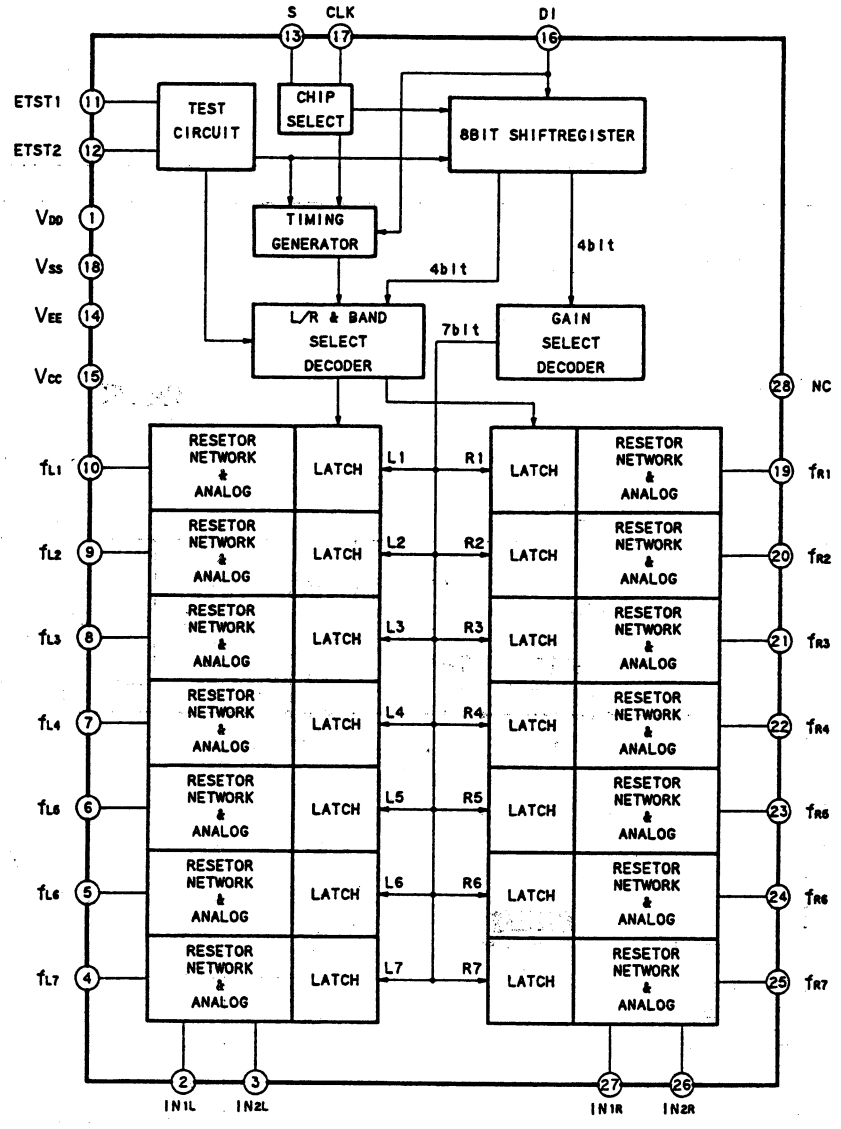

IC202 CXA1101M

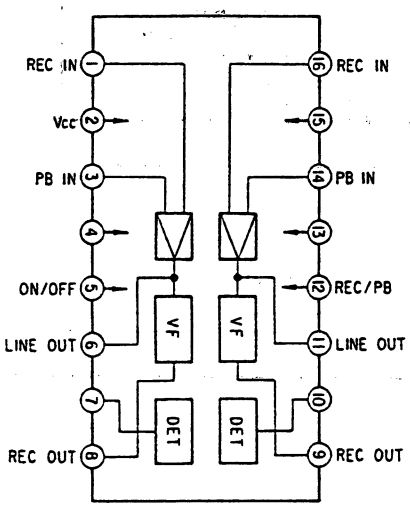

IC205 CXA1578M

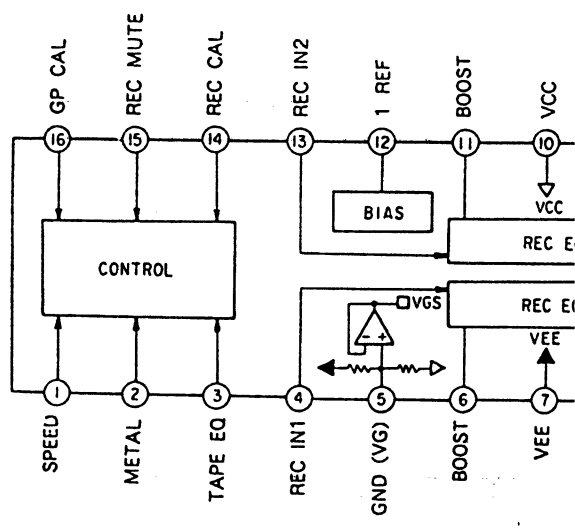

IC504 M51953AL

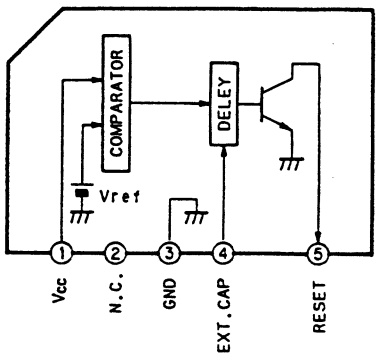

IC701 μPD1237HA

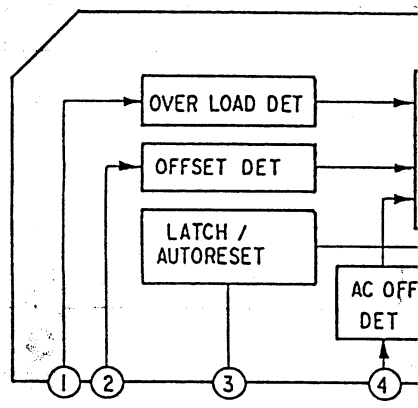

IC205 CXA1578M

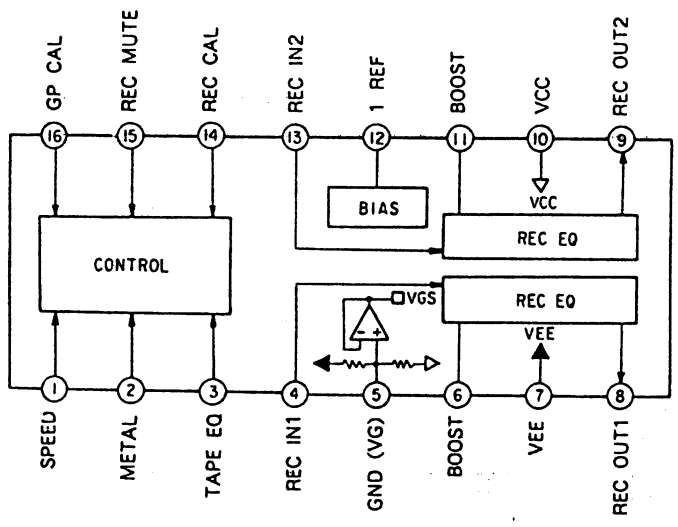

IC406 CD4052BCM

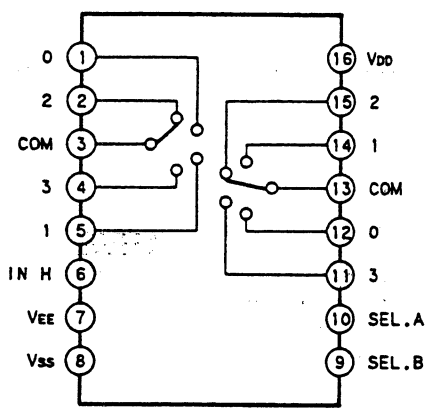

IC504 M51953AL

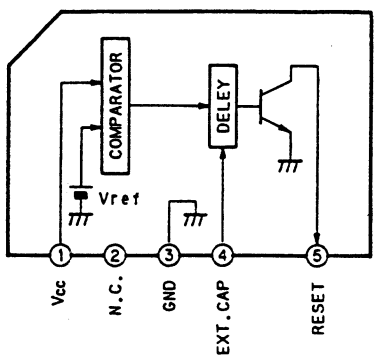

IC901 M5230L-A

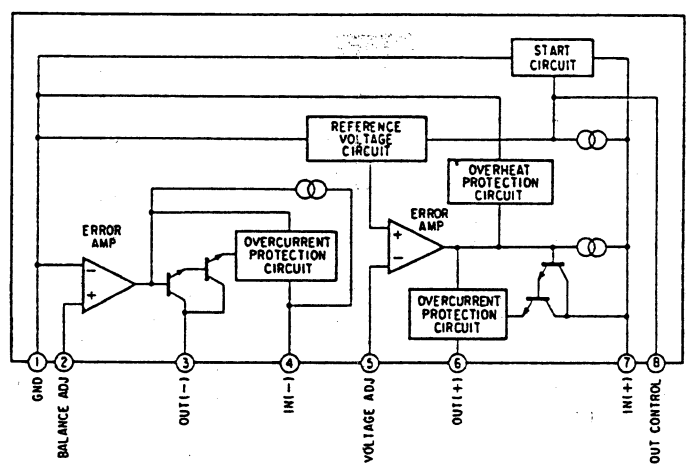

IC701 μPD1237HA

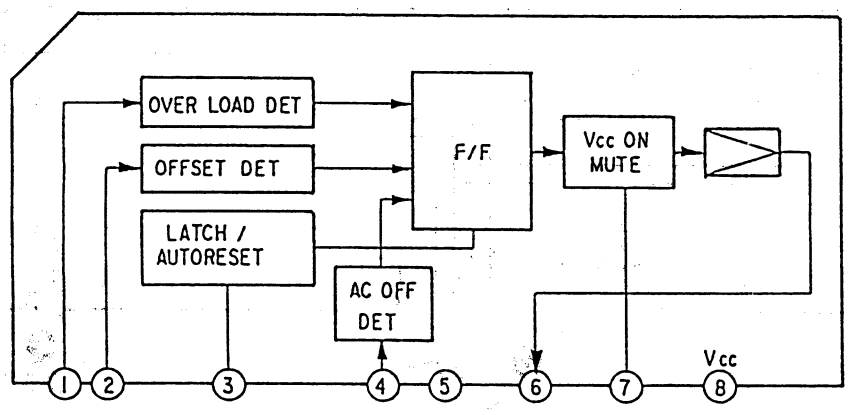

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.

6-1. CABINET SECTION

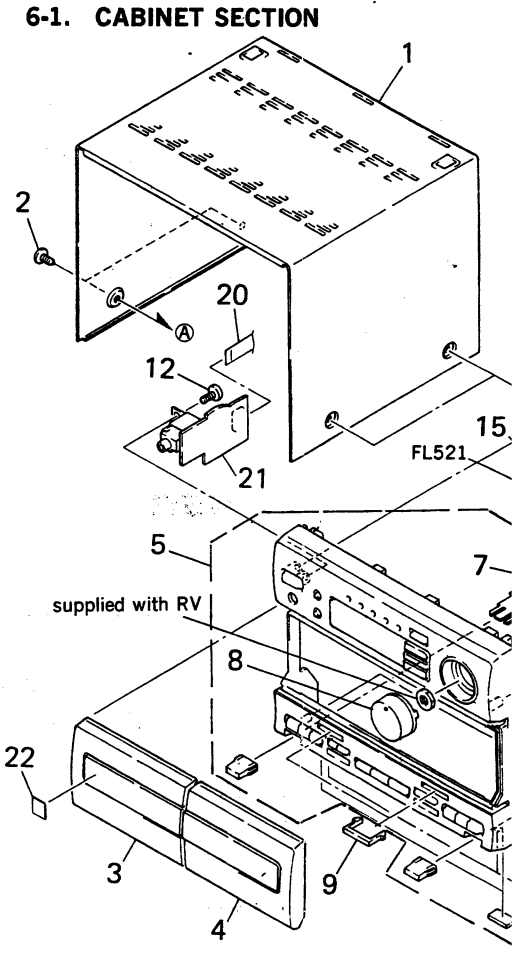

Ref. No.	Part No.	Description
* 1	4-953-614-11	CASE
2	3-363-099-01	SCREW (CASE 3 TP2)
3	X-4942-819-1	LID (A) ASSY, CASSETTE
4	X-4942-820-1	LID (B) ASSY, CASSETTE
5	X-4942-816-1	PANEL ASSY, FRONT (US, Canadian, E, AUS, EA, T
5	X-4942-821-1	PANEL ASSY, FRONT (AEP,
6	4-930-336-21	FOOT (FELT)
7	3-489-099-11	SPRING, TENSION
8	X-4942-539-1	KNOB (VOL) ASSY
9	4-953-606-01	COVER, AZIMUTH
10	4-953-601-01	KNOB, SLIDE
* 11	A-4356-163-A	TC SW BOARD, COMPLETE (
* 11	A-4356-209-A	TC SW BOARD, COMPLETE (
12	4-951-620-01	SCREW (2.6X8), +BVTP
* 13	A-4356-160-A	TA PANEL BOARD, COMPLETI

02 CXA1101M

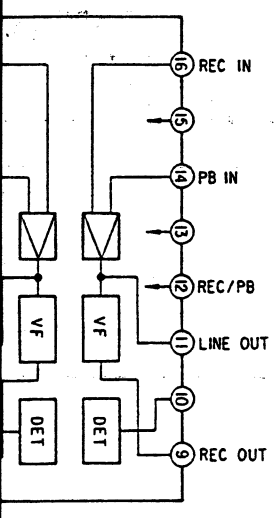

SECTION 6
EXPLEDED VIEWS

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE)... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Hardware (# mark) list is given in the last of this parts list.
- G : Germany model
- IT : Italian model
- AUS : Australian model
- EA : Saudi Arabia model
- TR : Tourist model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. CABINET SECTION

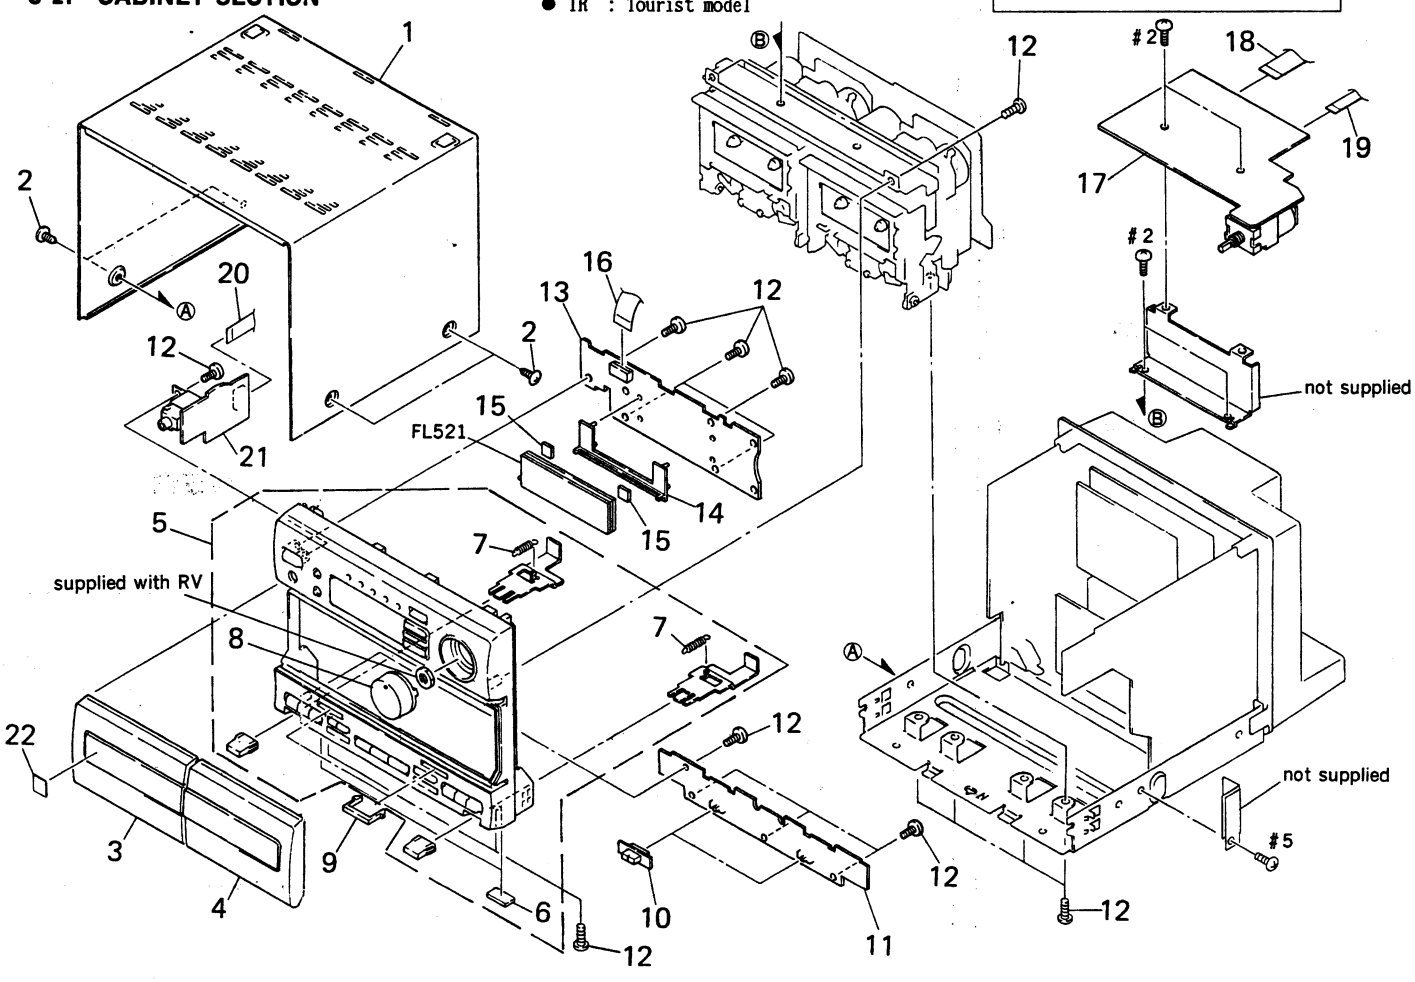

Ref. No.	Part No.	Description	Remark
* 1	4-953-614-11	CASE	
2	3-363-099-01	SCREW (CASE 3 TP2)	
3	X-4942-819-1	LID (A) ASSY, CASSETTE	
4	X-4942-820-1	LID (B) ASSY, CASSETTE	
5	X-4942-816-1	PANEL ASSY, FRONT (US, Canadian, E, AUS, EA, TR)	
5	X-4942-821-1	PANEL ASSY, FRONT (AEP, UK, G, IT)	
6	4-930-336-21	FOOT (FELT)	
7	3-489-099-11	SPRING, TENSION	
8	X-4942-539-1	KNOB (VOL) ASSY	
9	4-953-606-01	COVER, AZIMUTH	
10	4-953-601-01	KNOB, SLIDE	
* 11	A-4356-163-A	TC SW BOARD, COMPLETE (G, IT)	
* 11	A-4356-209-A	TC SW BOARD, COMPLETE (EXCEPT G, IT)	
12	4-951-620-01	SCREW (2.6X8), +BVTP	
* 13	A-4356-160-A	TA PANEL BOARD, COMPLETE (G, IT)	
* 13	A-4356-191-A	TA PANEL BOARD, COMPLETE (E, EA, TR)	
* 13	A-4356-202-A	TA PANEL BOARD, COMPLETE (US, Canadian)	
* 13	A-4356-206-A	TA PANEL BOARD, COMPLETE (AEP, UK, AUS)	
* 14	4-953-602-01	HOLDER (FL TUBE)	
* 15	4-921-941-01	CUSHION (FL)	
16	1-575-903-11	WIRE, FLAT TYPE (15 CORE)	
* 17	A-4356-161-A	CONTROL BOARD, COMPLETE (G, IT)	
* 17	A-4356-192-A	CONTROL BOARD, COMPLETE (E, AUS, EA, TR)	
* 17	A-4356-203-A	CONTROL BOARD, COMPLETE (US, Canadian)	
* 17	A-4356-207-A	CONTROL BOARD, COMPLETE (AEP, UK)	
18	1-696-727-11	WIRE (FLAT TYPE) (15 CORE)	
19	1-575-731-11	WIRE, FLAT TYPE (7 CORE)	
20	1-690-588-31	WIRE, FLAT TYPE (9 CORE)	
* 21	1-645-182-11	HP BOARD	
22	3-703-710-41	STICKER, SONY SYMBOL (12)	
FL521	1-519-735-11	INDICATOR TUBE, FLUORESCENT	

IC406 CD4052BCM

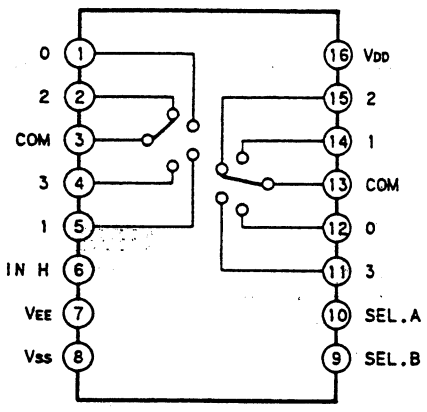

-A

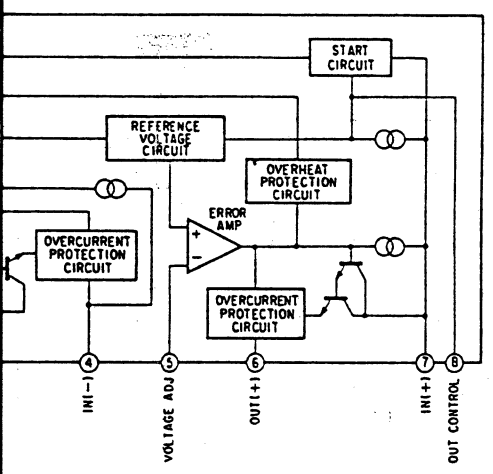

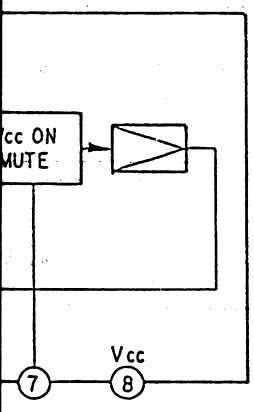

5-7. PRINTED WIRING BOARDS —PANEL SECTION—

• Refer to page 13 for Semiconductor Lead Layouts.

• Semiconductor Location

Ref. No.	Location
D031	C-12
D032	B-13
D501	E-11
D503	D-9
D504	D-9
D505	B-10
D508	B-10
D509	E-11
D520	D-2
D521	E-6
D522	E-5
D523	E-4
D524	E-4
D525	E-3
D526	E-1
IC021	E-14
IC102	D-12
IC111	D-13
IC112	B-12
IC501	D-10
IC504	D-9
IC551	D-5
Q001	D-14
Q002	E-14
Q104	D-13
Q154	C-12
Q501	E-11
Q502	D-9
Q503	C-10
Q505	E-9
Q506	C-10
Q507	E-14

Note:

• ○—— : parts extracted from the component side.

• CND: Canadian model
• G: Germany model
• IT: Italian model
• AUS: Australian model
• EA: Saudi Arabia model
• TR: Tourist model

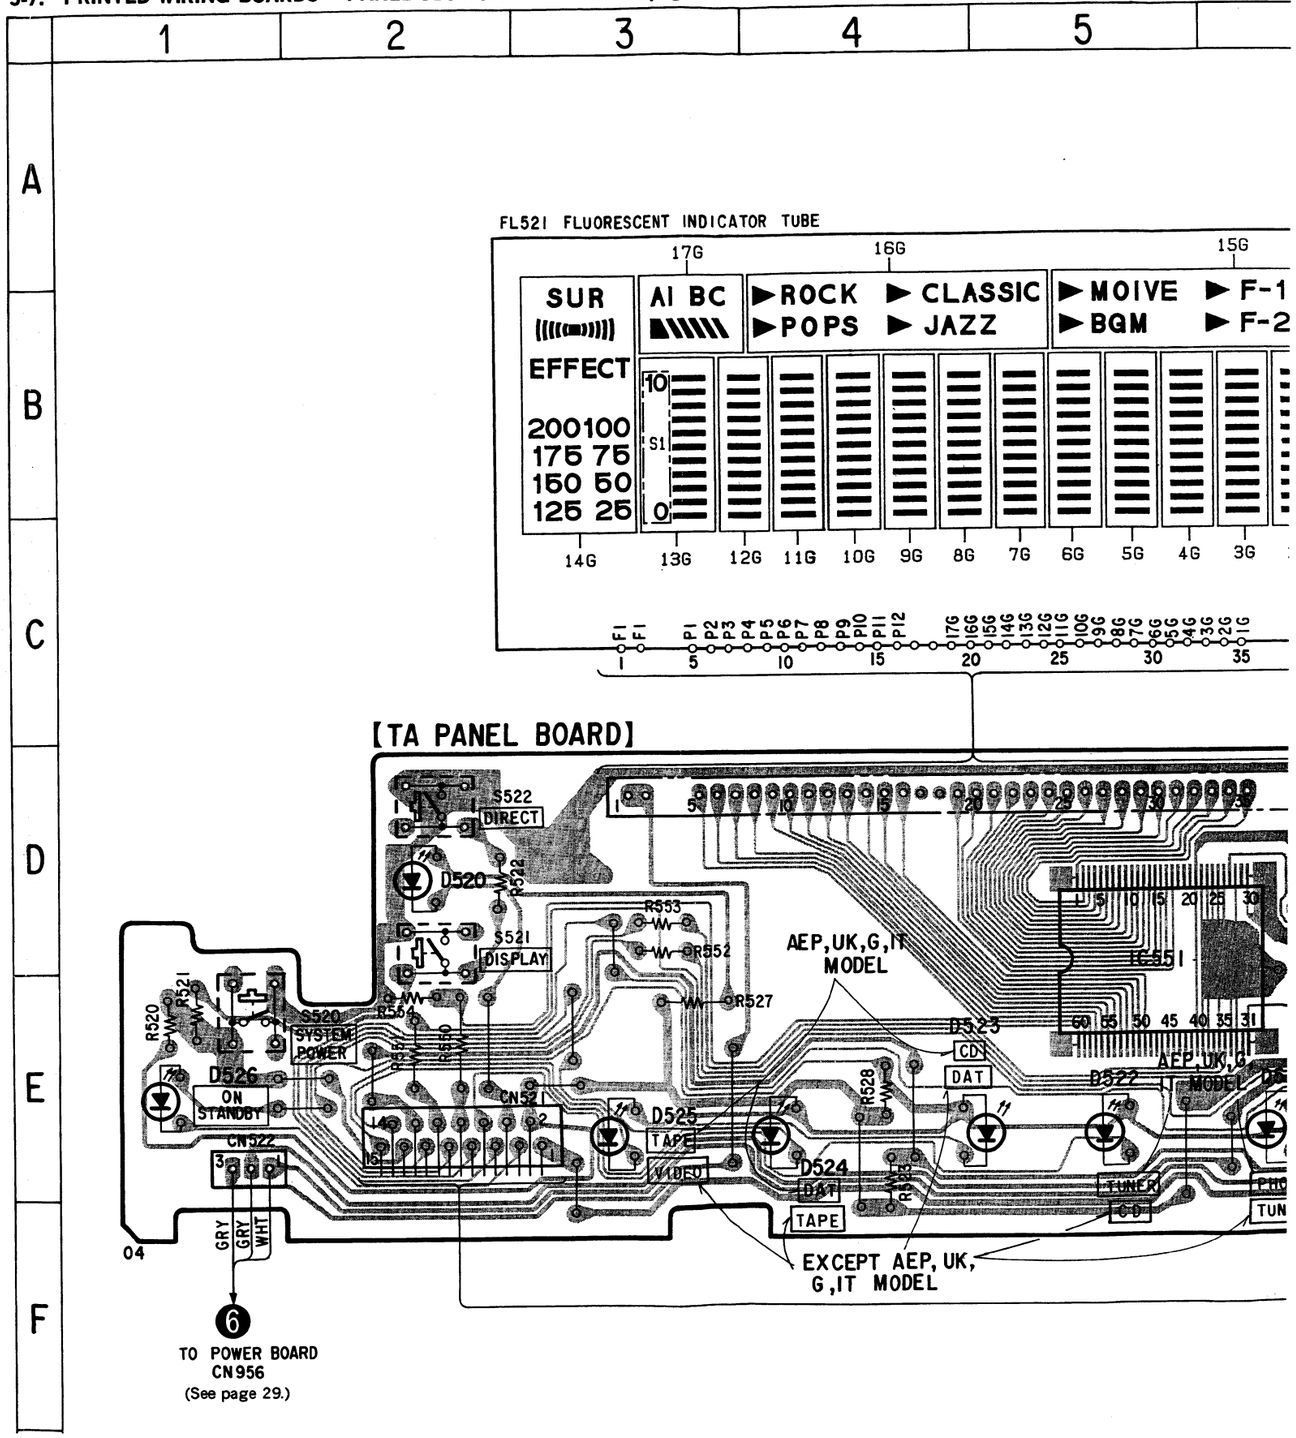

5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15

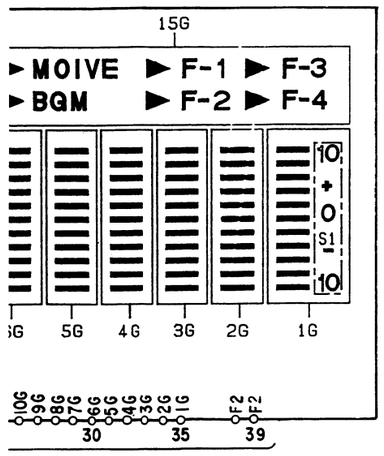

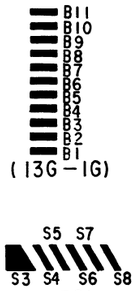

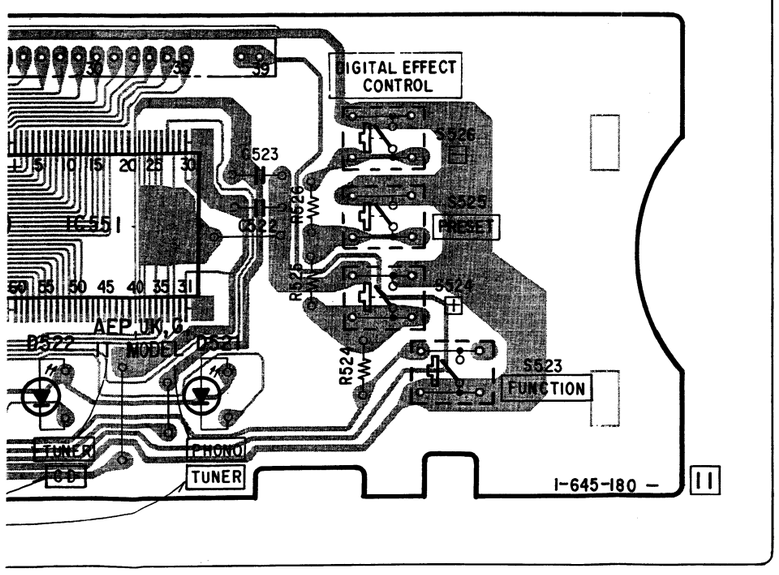

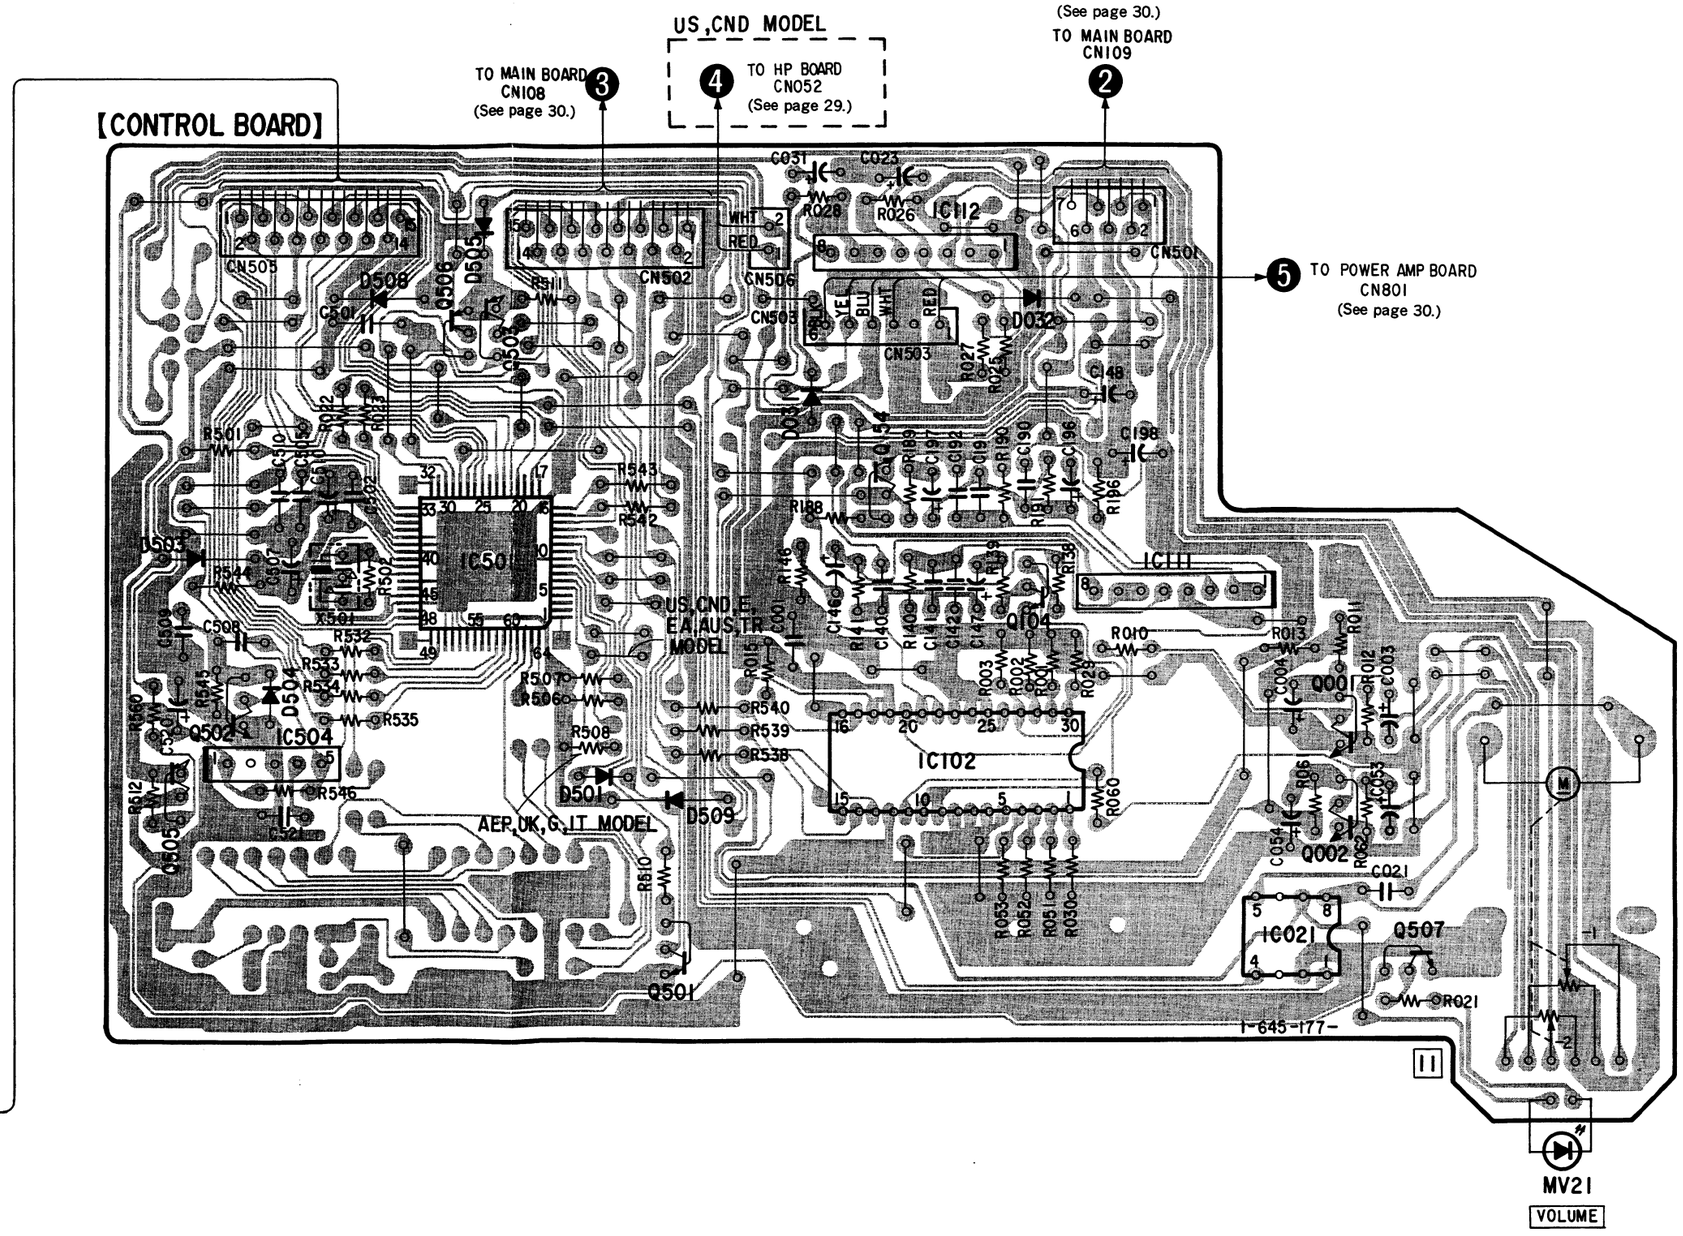

6-2. CHASSIS SECTION

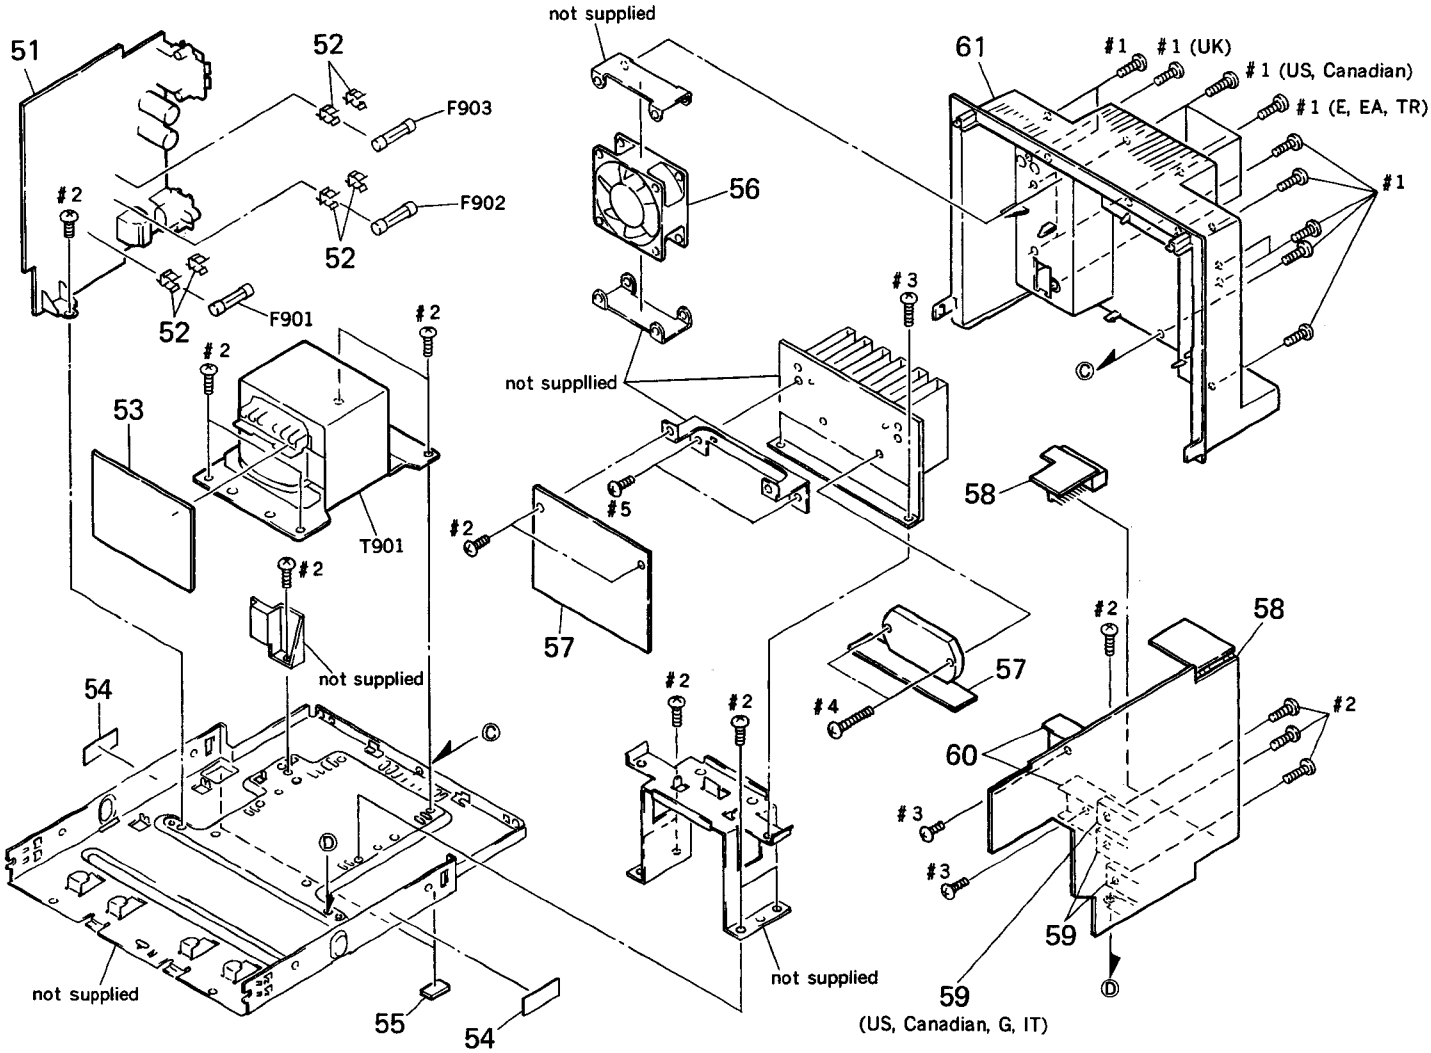

Ref. No.	Part No.	Description	Remark
* 51	A-4356-156-A	POWER BOARD, COMPLETE (G, IT)	
* 51	A-4356-186-A	POWER BOARD, COMPLETE (E, TR)	
* 51	A-4356-187-A	POWER BOARD, COMPLETE (EA)	
* 51	A-4356-194-A	POWER BOARD, COMPLETE (US, Canadian)	
* 51	A-4356-197-A	POWER BOARD, COMPLETE (AEP, AUS)	
* 51	A-4356-198-A	POWER BOARD, COMPLETE (UK)	
* 52	1-533-213-31	HOLDER, FUSE	
* 53	1-645-181-11	TRANSFORMER BOARD	
* 54	3-703-044-26	LABEL, CAUTION (US, Canadian)	
55	4-930-336-21	FOOT (FELT)	
56	1-541-860-41	MOTOR, DC FAN (US, Canadian)	
* 57	A-4356-158-A	POWER AMP BOARD, COMPLETE (G, IT)	
* 57	A-4356-189-A	POWER AMP BOARD, COMPLETE (E, EA, TR)	
* 57	A-4356-196-A	POWER AMP BOARD, COMPLETE (US, Canadian)	
* 57	A-4356-200-A	POWER AMP BOARD, COMPLETE (AEP, UK, AUS)	
* 58	A-4356-159-A	MAIN BOARD, COMPLETE (G, IT)	
* 58	A-4356-190-A	MAIN BOARD, COMPLETE (E, AUS, EA, TR)	
* 58	A-4356-201-A	MAIN BOARD, COMPLETE (US, Canadian)	
* 58	A-4356-205-A	MAIN BOARD, COMPLETE (AEP, UK)	

Ref. No.	Part No.	Description	Remark
* 59	3-309-144-21	HEAT SINK	
* 60	4-363-146-71	HEAT SINK, V. OUT (EXCEPT US, Canadian, G, IT)	
* 61	4-953-613-01	PANEL, BACK (US, Canadian, AUS)	
* 61	4-953-613-11	PANEL, BACK (AEP, G, IT)	
* 61	4-953-613-21	PANEL, BACK (UK)	
* 61	4-953-613-31	PANEL, BACK (E, EA, TR)	
⚠F901	1-532-078-00	FUSE T1A (AEP, UK, G, IT, AUS)	
⚠F901	1-532-744-11	FUSE, GLASS TUBE 125V/2.5A (US, Canadian)	
⚠F902	1-532-203-00	FUSE T2A (E, EA, TR)	
⚠F903	1-532-078-00	FUSE T1A (E, EA, TR)	
⚠T901	1-697-002-11	TRANSFORMER, POWER (E, EA, TR)	
⚠T901	1-697-003-11	TRANSFORMER, POWER (UK, AUS)	
⚠T901	1-697-004-11	TRANSFORMER, POWER (AEP, G, IT)	
⚠T901	1-697-005-11	TRANSFORMER, POWER (US, Canadian)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-3. CASSETTE HOLDER SECTION

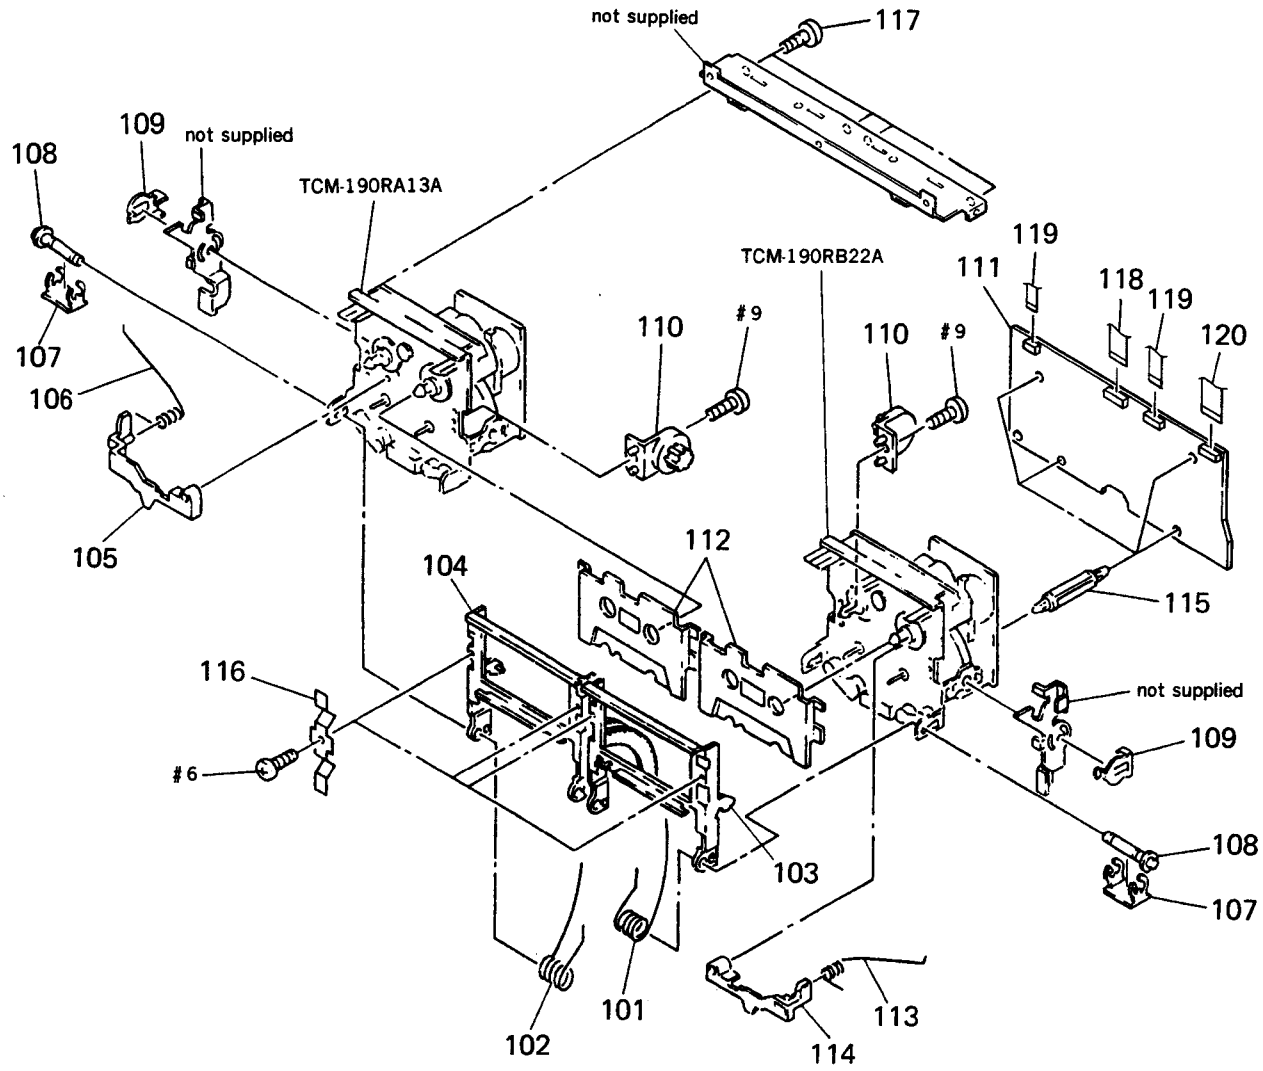

Ref. No.	Part No.	Description	Remark
101	3-354-960-01	SPRING (LOADING R), TORSION	
102	3-354-959-01	SPRING (LOADING L), TORSION	
103	X-3362-856-1	HOLDER (R) ASSY, CASSETTE	
104	X-3362-857-1	HOLDER (L) ASSY, CASSETTE	
105	3-354-955-01	LEVER (EJ SAFTY LEVER L)	
106	3-354-961-01	SPRING (EJ SAFTY SPRING L)	
107	3-367-720-01	RING (W), RETAINING	
108	3-367-721-01	SHAFT (FULCRUM SHAFT)	
109	3-354-957-01	JOINT (LOCK LEVER)	
110	3-354-963-01	DAMPER	

Ref. No.	Part No.	Description	Remark
* 111	A-4356-164-A	TC MAIN BOARD, COMPLETE (G, IT)	
* 111	A-4356-210-A	TC MAIN BOARD, COMPLETE (EXCEPT G, IT)	
112	3-367-711-01	RETAINER, CASSETTE	
113	3-354-962-01	SPRING (EJ SAFTY SPRING R)	
114	3-354-956-01	LEVER (EJ SAFTY LEVER R)	
* 115	3-682-419-21	HOLDER, P.C.B	
116	3-340-137-01	SPRING, CASSETTE RETAINER	
117	4-951-620-01	SCREW (2.6X8), +BVTP	
118	1-696-731-11	WIRE (FLAT TYPE) (15 CORE)	
119	1-696-725-11	WIRE (FLAT TYPE) (9 CORE)	
120	1-696-726-11	WIRE (FLAT TYPE) (13 CORE)	

MC-Service

6-4. MECHANISM DECK SECTION 1
(DECK A : TCM-190RA13A)
(DECK B : TCM-190RB22A)

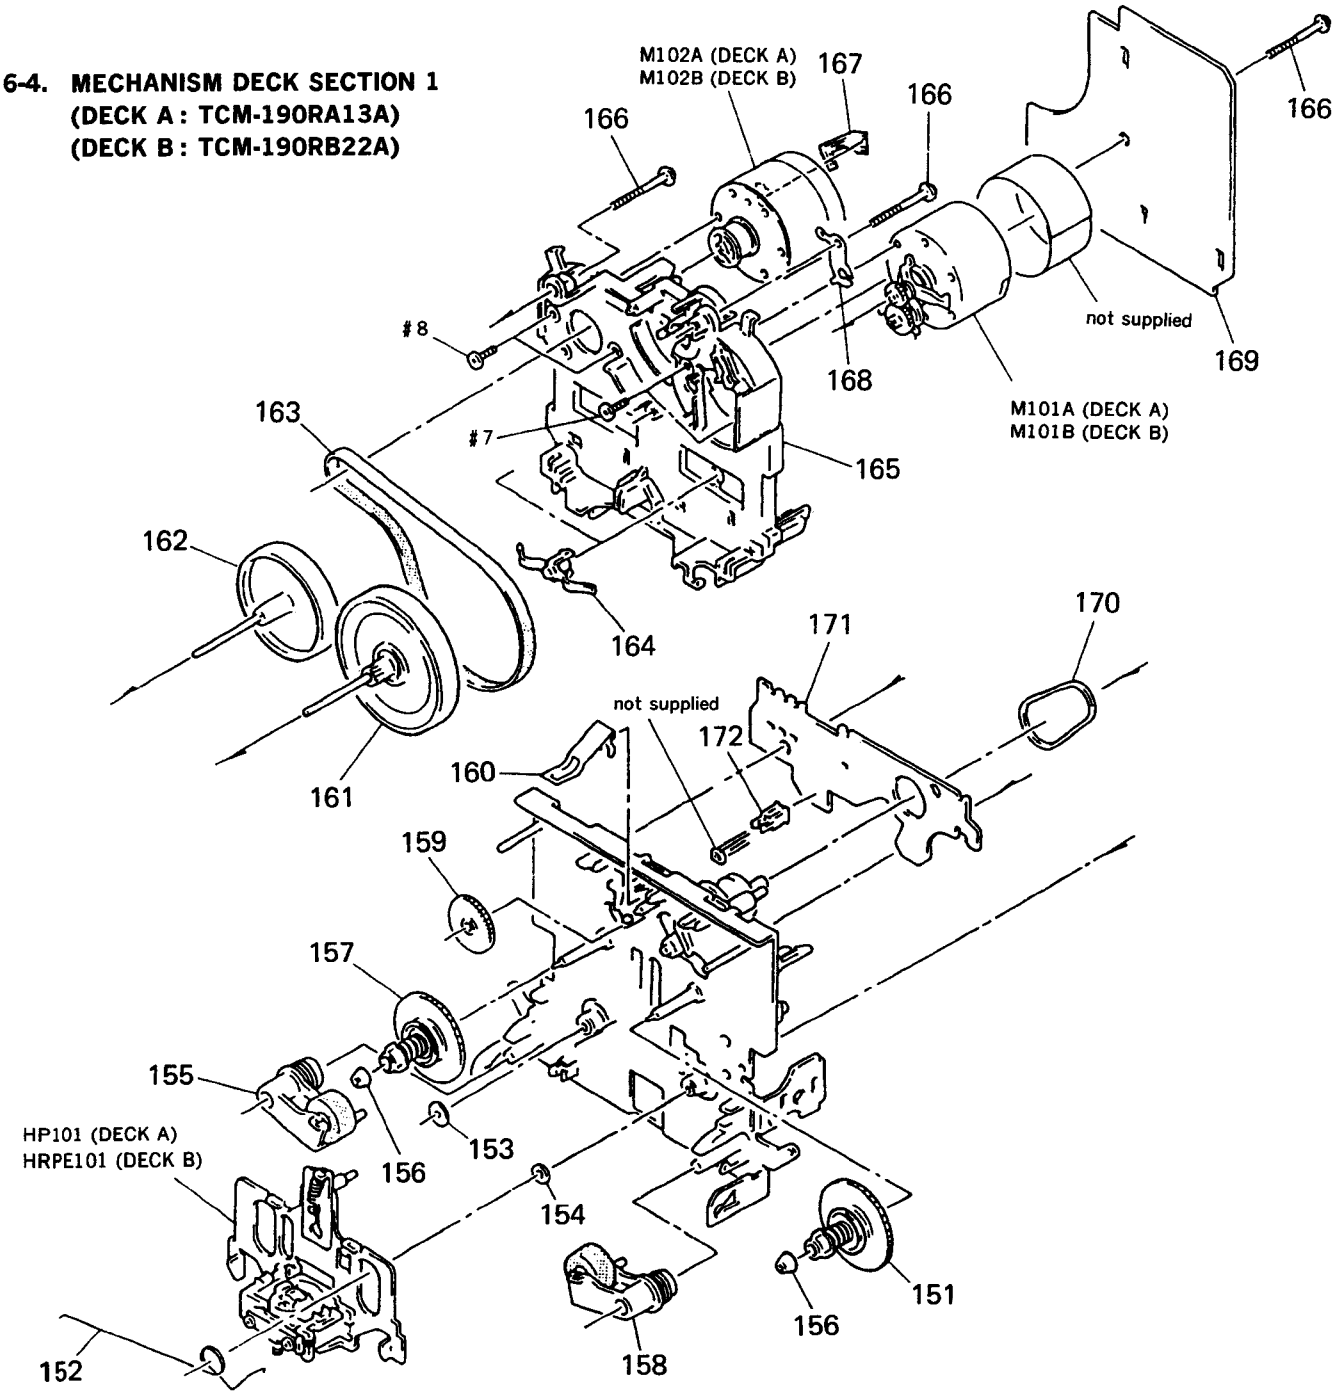

Ref. No.	Part No.	Description	Remark
151	X-3359-404-1	TABLE ASSY, REEL	
152	3-359-455-01	SPRING, TORSION	
153	3-356-714-01	WASHER	
154	3-356-713-01	WASHER	
155	X-3359-409-1	LEVER (PINCH LEVER REV) ASSY	
156	3-362-308-01	CAP (REEL)	
157	X-3362-078-1	TABLE ASSY (B), REEL	
158	X-3359-408-1	LEVER (PINCH LEVER FWD) ASSY	
159	3-359-424-01	GEAR (REV GEAR)	
160	3-359-430-01	SPRING(CASSETTE RETAINER), LEAF	
161	X-3359-406-1	FLYWHEEL (FWD) ASSY	
162	X-3359-410-1	FLYWHEEL (REV) ASSY	
163	3-359-417-01	BELT (FLAT), CAPSTAN	
164	3-575-321-00	RETAINER, THRUST, CAPSTAN	
* 165	3-359-436-01	BASE (THRUST RETAINER), FITTING	

Ref. No.	Part No.	Description	Remark
166	3-359-414-01	SCREW (+PTPWH 2X23)	
167	1-638-983-11	PC BOARD, MOTOR FLEXIBLE	
168	3-359-450-01	PLATE, GROUND	
* 169	A-2006-399-A	MD-A BOARD, COMPLETE	
* 169	A-2006-400-A	MD-B BOARD, COMPLETE	
170	3-359-466-01	BELT (FR), SQUARE	
* 171	1-634-841-14	SW-A BOARD (DECK A)	
* 171	1-634-841-14	SW-B BOARD (DECK B)	
172	3-343-419-01	HOLDER (S SENSER A)	
HP101	A-2003-868-F	BASE ASSY, HEAD (DECK A)	
HRPE101A	2003-838-F	BASE ASSY, HEAD (DECK B)	
M101A	X-3363-501-1	MOTOR ASSY, REEL (DECK A)	
M101B	X-3363-501-1	MOTOR ASSY, REEL (DECK B)	
M102A	X-3359-417-1	MOTOR ASSY, CAPSTAN (DECK A)	
M102B	X-3359-417-1	MOTOR ASSY, CAPSTAN (DECK B)	

6-5. MECHANISM DECK SECTION 2
(DECK A : TCM-190RA13A)
(DECK B : TCM-190RB22A)

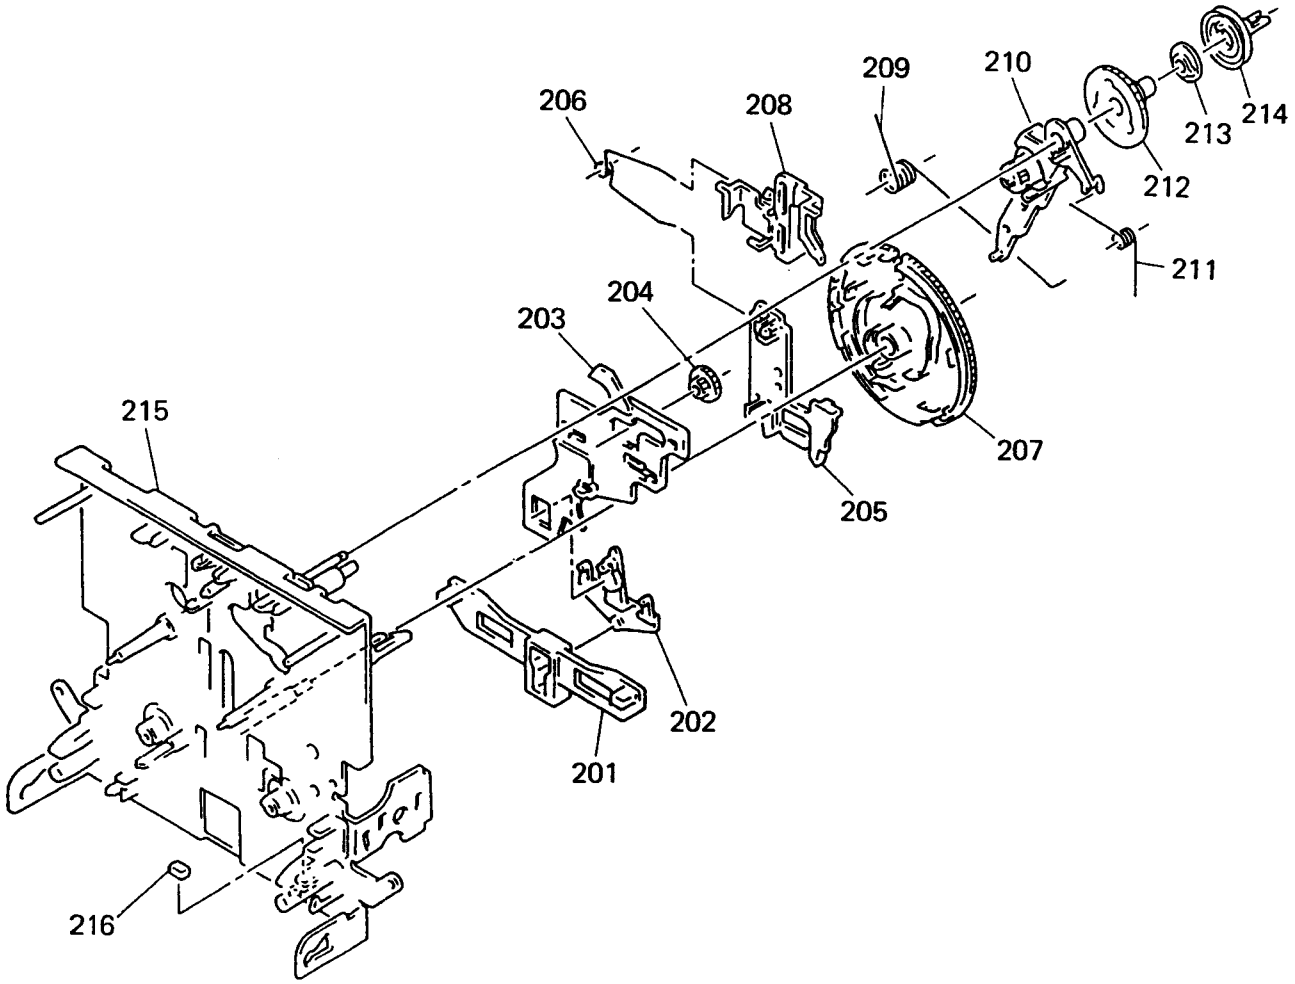

Ref. No.	Part No.	Description	Remark
* 201	3-359-425-01	SLIDER (REVERSE SLIDER)	
202	3-359-426-01	LEVER (REVERSE LEVER)	
* 203	3-359-415-01	SLIDER (TRIGGER SLIDER)	
204	3-359-448-01	GEAR (TRIGGER)	
* 205	3-359-427-01	SLIDER (REVERSE SLIDER)	
206	3-359-454-01	SPRING, TORSION	
207	3-359-420-01	GEAR (CAM GEAR)	
208	3-359-429-01	SLIDER (BRAKE PLATE)	

Ref. No.	Part No.	Description	Remark
209	3-359-456-01	SPRING(TRIGGER SPRING), TORSION	
210	X-3359-405-1	LEVER (FR ARM) ASSY	
211	3-359-453-01	SPRING (FR ARM), TORSION	
212	3-359-419-01	GEAR (FR GEAR)	
213	3-359-421-01	CLUTCH (REEL DISK)	
214	3-359-418-01	PULLEY (FR PULLEY)	
215	X-3363-790-1	CHASSIS ASSY, MECHANICAL	
216	3-359-469-01	SPACER	

SECTION 7
ELECTRICAL PARTS LIST

CONTROL

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

When indicating parts by reference number, please include the board.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

- G : Germany model
- IT : Italian model
- AUS : Australian model
- EA : Saudi Arabia model
- TR : Tourist model

Ref. No.	Part No.	Description			Remark
*	A-4356-161-A	CONTROL BOARD, COMPLETE (G, IT)			
*	A-4356-192-A	CONTROL BOARD, COMPLETE (E, AUS, EA, TR)			
*	A-4356-203-A	CONTROL BOARD, COMPLETE (US, Canadian)			
*	A-4356-207-A	CONTROL BOARD, COMPLETE (AEP, UK)			
		**********			
		< CAPACITOR >			
C001	1-161-379-00	CERAMIC	0.01uF	20%	25V
C003	1-124-907-11	ELECT	10uF	20%	50V
C004	1-124-910-11	ELECT	47uF	20%	50V
C021	1-136-153-00	FILM	0.01uF	5%	50V
C031	1-124-472-11	ELECT	470uF	20%	10V
C032	1-124-472-11	ELECT	470uF	20%	10V
C053	1-124-907-11	ELECT	10uF	20%	50V
C054	1-124-910-11	ELECT	47uF	20%	50V
C140	1-136-165-00	FILM	0.1uF	5%	50V
C141	1-136-165-00	FILM	0.1uF	5%	50V
C142	1-162-282-31	CERAMIC	100PF	10%	50V
C146	1-124-925-11	ELECT	2.2uF	20%	100V
C147	1-124-903-11	ELECT	1uF	20%	50V
C148	1-124-443-00	ELECT	100uF	20%	10V
C190	1-136-165-00	FILM	0.1uF	5%	50V
C191	1-136-165-00	FILM	0.1uF	5%	50V
C192	1-162-282-31	CERAMIC	100PF	10%	50V
C196	1-124-925-11	ELECT	2.2uF	20%	100V
C197	1-124-903-11	ELECT	1uF	20%	50V
C198	1-124-443-00	ELECT	100uF	20%	10V
C501	1-161-379-00	CERAMIC	0.01uF	20%	25V
C502	1-164-159-11	CERAMIC	0.1uF		50V
C505	1-164-159-11	CERAMIC	0.1uF		50V
C506	1-125-623-11	CAP, DOUBLE LAYEYERS			0.22F
C507	1-124-907-11	ELECT	10uF	20%	50V
C508	1-136-173-00	FILM	0.47uF	5%	50V
C509	1-164-159-11	CERAMIC	0.1uF		50V
C510	1-161-379-00	CERAMIC	0.01uF	20%	25V
C520	1-124-907-11	ELECT	10uF	20%	50V
C521	1-136-165-00	FILM	0.1uF	5%	50V
		< CONNECTOR >			
* CN501	1-568-850-11	SOCKET, CONNECTOR 7P			
* CN502	1-568-858-11	SOCKET, CONNECTOR 15P			
* CN505	1-568-858-11	SOCKET, CONNECTOR 15P			
		< DIODE >			
D031	8-719-987-63	DIODE	1N4148M		
D032	8-719-987-63	DIODE	1N4148M		
D115	8-719-987-63	DIODE	1N4148M		
D116	8-719-987-63	DIODE	1N4148M		
D501	8-719-987-63	DIODE	1N4148M		
D503	8-719-987-63	DIODE	1N4148M		
D504	8-719-987-63	DIODE	1N4148M		
D505	8-719-987-63	DIODE	1N4148M		
D508	8-719-987-63	DIODE	1N4148M		
D509	8-719-987-63	DIODE	1N4148M		
		< IC >			
IC021	8-759-820-62	IC	LB1639		
IC102	8-759-805-14	IC	LC7822		
IC111	8-759-634-50	IC	M5218AL		
IC112	8-759-634-50	IC	M5218AL		
IC501	8-759-081-00	IC	uPD78011GC-507-AB8		
IC504	8-759-634-97	IC	M51953AL		
		< VARIABLE RESISTOR >			
MV021	1-241-999-11	RES, VAR, CARBON 100K/100K (VOLUME)			
		< TRANSISTOR >			
Q001	8-729-141-30	TRANSISTOR	2SC3623A-LK		
Q002	8-729-141-30	TRANSISTOR	2SC3623A-LK		
Q104	8-729-620-05	TRANSISTOR	2SC2603-EF		
Q154	8-729-620-05	TRANSISTOR	2SC2603-EF		
Q501	8-729-620-05	TRANSISTOR	2SC2603-EF		
Q502	8-729-620-05	TRANSISTOR	2SC2603-EF		
Q503	8-729-900-61	TRANSISTOR	DTA114ES		
Q505	8-729-119-76	TRANSISTOR	2SA1175-HFE		
Q506	8-729-900-61	TRANSISTOR	DTA114ES		
Q507	8-729-900-80	TRANSISTOR	DTC114ES		

CONTROL HP MAIN

Ref.No.	Part No.	Description				Remark
		< RESISTOR >				
R001	1-247-876-11	CARBON	75K	5%	1/4W	
R002	1-247-887-00	CARBON	220K	5%	1/4W	
R003	1-247-903-00	CARBON	1M	5%	1/4W	
R010	1-249-417-11	CARBON	1K	5%	1/4W	F
R011	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R012	1-247-895-00	CARBON	470K	5%	1/4W	
R013	1-249-429-11	CARBON	10K	5%	1/4W	
R015	1-249-429-11	CARBON	10K	5%	1/4W	
R021	1-249-413-11	CARBON	470	5%	1/4W	F
R022	1-249-417-11	CARBON	1K	5%	1/4W	F
R023	1-249-417-11	CARBON	1K	5%	1/4W	F
R025	1-249-441-11	CARBON	100K	5%	1/4W	
R026	1-249-441-11	CARBON	100K	5%	1/4W	
R027	1-249-417-11	CARBON	1K	5%	1/4W	F
R028	1-249-417-11	CARBON	1K	5%	1/4W	F
R029	1-249-432-11	CARBON	18K	5%	1/4W	
R030	1-249-432-11	CARBON	18K	5%	1/4W	
R051	1-247-876-11	CARBON	75K	5%	1/4W	
R052	1-247-887-00	CARBON	220K	5%	1/4W	
R053	1-247-903-00	CARBON	1M	5%	1/4W	
R060	1-249-417-11	CARBON	1K	5%	1/4W	F
R061	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R062	1-247-895-00	CARBON	470K	5%	1/4W	
R138	1-249-435-11	CARBON	33K	5%	1/4W	
R139	1-249-432-11	CARBON	18K	5%	1/4W	
R140	1-247-891-00	CARBON	330K	5%	1/4W	
R141	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R146	1-249-441-11	CARBON	100K	5%	1/4W	
R188	1-249-435-11	CARBON	33K	5%	1/4W	
R189	1-249-432-11	CARBON	18K	5%	1/4W	
R190	1-247-891-00	CARBON	330K	5%	1/4W	
R191	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R196	1-249-441-11	CARBON	100K	5%	1/4W	
R501	1-249-417-11	CARBON	1K	5%	1/4W	F
R502	1-247-903-00	CARBON	1M	5%	1/4W	
R506	1-249-429-11	CARBON	10K	5%	1/4W	
R507	1-249-429-11	CARBON	10K	5%	1/4W	
R508	1-249-437-11	CARBON (AEP, UK, G, IT)	47K	5%	1/4W	
R510	1-249-429-11	CARBON	10K	5%	1/4W	
R511	1-249-429-11	CARBON	10K	5%	1/4W	
R512	1-249-429-11	CARBON	10K	5%	1/4W	
R532	1-249-417-11	CARBON	1K	5%	1/4W	F
R533	1-249-417-11	CARBON	1K	5%	1/4W	F
R534	1-249-417-11	CARBON	1K	5%	1/4W	F
R535	1-249-417-11	CARBON	1K	5%	1/4W	F
R538	1-249-417-11	CARBON	1K	5%	1/4W	F
R539	1-249-417-11	CARBON	1K	5%	1/4W	F
R540	1-249-417-11	CARBON	1K	5%	1/4W	F
R542	1-249-417-11	CARBON	1K	5%	1/4W	F
R543	1-249-417-11	CARBON	1K	5%	1/4W	F
R544	1-249-433-11	CARBON	22K	5%	1/4W	
R545	1-249-433-11	CARBON	22K	5%	1/4W	
R546	1-249-429-11	CARBON	10K	5%	1/4W	
R560	1-249-429-11	CARBON	10K	5%	1/4W	
		< VIBRATOR >				
X501	1-579-599-21	VIBRATOR, CERAMIC (8.32MHz)				
**********						
*	1-645-182-11	HP BOARD				
		********				
		< CAPACITOR >				
C10	1-124-910-11	ELECT	47uF	20%	50V	
C11	1-124-910-11	ELECT	47uF	20%	50V	
C12	1-124-910-11	ELECT	47uF	20%	50V	
C13	1-124-910-11	ELECT	47uF	20%	50V	
C009	1-161-379-00	CERAMIC	0.01uF	20%	25V	
C059	1-161-379-00	CERAMIC	0.01uF	20%	25V	
		< CONNECTOR >				
* CN051	1-568-852-11	SOCKET, CONNECTOR 9P				
* CN052	1-564-505-11	PLUG, CONNECTOR 2P (US, Canadian)				
		< JACK >				
J001	1-562-837-21	JACK (HEADPHONES)				
		< RESISTOR >				
R001	1-249-441-11	CARBON	100K	5%	1/4W	
R002	1-249-441-11	CARBON	100K	5%	1/4W	
R017	1-247-749-11	CARBON	560	5%	1/2W	
R067	1-247-749-11	CARBON	560	5%	1/2W	
**********						
*	A-4356-159-A	MAIN BOARD, COMPLETE (G, IT)				
*	A-4356-190-A	MAIN BOARD, COMPLETE (E, AUS, EA, TR)				
*	A-4356-201-A	MAIN BOARD, COMPLETE (US, Canadian)				
*	A-4356-205-A	MAIN BOARD, COMPLETE (AEP, UK)				
		**********				
*	3-309-144-21	HEAT SINK				
	7-682-547-04	SCREW +BVTT 3X6 (S)				
*	4-363-146-71	HEAT SINK, V.OUT (AEP, UK, E, AUS, EA, TR)				
		< CAPACITOR >				
C101	1-162-282-31	CERAMIC	100PF	10%	50V	

Ref. No.	Part No.	Description			Remark
C102	1-162-282-31	CERAMIC	100PF	10%	50V
C103	1-162-282-31	CERAMIC	100PF	10%	50V
C105	1-162-286-31	CERAMIC (AEP, UK, G, IT)	220PF	10%	50V
C106	1-124-927-11	ELECT (AEP, UK, G, IT)	4.7uF	20%	100V
C107	1-130-480-00	MYLAR (AEP, UK, G, IT)	0.0056uF	5%	50V
C108	1-130-473-00	MYLAR (AEP, UK, G, IT)	0.0015uF	5%	50V
C109	1-124-925-11	ELECT (AEP, UK, G, IT)	2.2uF	20%	100V
C111	1-124-903-11	ELECT	1uF	20%	50V
C112	1-161-379-00	CERAMIC	0.01uF	20%	25V
C113	1-161-379-00	CERAMIC	0.01uF	20%	25V
C114	1-124-907-11	ELECT	10uF	20%	50V
C115	1-124-903-11	ELECT	1uF	20%	50V
C120	1-124-907-11	ELECT	10uF	20%	50V
C121	1-124-925-11	ELECT	2.2uF	20%	100V
C122	1-162-286-31	CERAMIC	220PF	10%	50V
C123	1-136-168-00	FILM	0.18uF	5%	50V
C124	1-136-168-00	FILM	0.18uF	5%	50V
C125	1-124-902-00	ELECT	0.47uF	20%	50V
C126	1-124-902-00	ELECT	0.47uF	20%	50V
C127	1-130-021-00	MYLAR	0.0018uF	10%	50V
C128	1-130-021-00	MYLAR	0.0018uF	10%	50V
C129	1-130-479-00	MYLAR	0.0047uF	5%	50V
C130	1-130-479-00	MYLAR	0.0047uF	5%	50V
C131	1-136-154-00	FILM	0.012uF	5%	50V
C132	1-136-154-00	FILM	0.012uF	5%	50V
C133	1-136-158-00	FILM	0.027uF	5%	50V
C134	1-136-158-00	FILM	0.027uF	5%	50V
C135	1-136-163-00	FILM	0.068uF	5%	50V
C136	1-136-163-00	FILM	0.068uF	5%	50V
C138	1-162-286-31	CERAMIC	220PF	10%	50V
C139	1-124-903-11	ELECT	1uF	20%	50V
C151	1-162-282-31	CERAMIC	100PF	10%	50V
C152	1-162-282-31	CERAMIC	100PF	10%	50V
C153	1-162-282-31	CERAMIC	100PF	10%	50V
C155	1-162-286-31	CERAMIC (AEP, UK, G, IT)	220PF	10%	50V
C156	1-124-927-11	ELECT (AEP, UK, G, IT)	4.7uF	20%	100V
C157	1-130-480-00	MYLAR (AEP, UK, G, IT)	0.0056uF	5%	50V
C158	1-130-473-00	MYLAR (AEP, UK, G, IT)	0.0015uF	5%	50V
C159	1-124-925-11	ELECT (AEP, UK, G, IT)	2.2uF	20%	100V
C161	1-124-477-11	ELECT	47uF	20%	25V

Ref. No.	Part No.	Description			Remark
C162	1-161-379-00	CERAMIC	0.01uF	20%	25V
C163	1-161-379-00	CERAMIC	0.01uF	20%	25V
C164	1-124-907-11	ELECT	10uF	20%	50V
C170	1-124-907-11	ELECT	10uF	20%	50V
C171	1-124-925-11	ELECT	2.2uF	20%	100V
C172	1-162-286-31	CERAMIC	220PF	10%	50V
C173	1-136-168-00	FILM	0.18uF	5%	50V
C174	1-136-168-00	FILM	0.18uF	5%	50V
C175	1-124-902-00	ELECT	0.47uF	20%	50V
C176	1-124-902-00	ELECT	0.47uF	20%	50V
C177	1-130-021-00	MYLAR	0.0018uF	10%	50V
C178	1-130-021-00	MYLAR	0.0018uF	10%	50V
C179	1-130-479-00	MYLAR	0.0047uF	5%	50V
C180	1-130-479-00	MYLAR	0.0047uF	5%	50V
C181	1-136-154-00	FILM	0.012uF	5%	50V
C182	1-136-154-00	FILM	0.012uF	5%	50V
C183	1-136-158-00	FILM	0.027uF	5%	50V
C184	1-136-158-00	FILM	0.027uF	5%	50V
C185	1-136-163-00	FILM	0.068uF	5%	50V
C186	1-136-163-00	FILM	0.068uF	5%	50V
C188	1-162-286-31	CERAMIC	220PF	10%	50V
C201	1-162-282-31	CERAMIC (AEP, UK, G, IT)	100PF	10%	50V
C205	1-162-282-31	CERAMIC (AEP, UK, G, IT)	100PF	10%	50V
C494	1-161-379-00	CERAMIC (AEP, UK, G, IT)	0.01uF	20%	25V
C240	1-162-282-31	CERAMIC	100PF	10%	50V (G, IT)
C290	1-162-282-31	CERAMIC	100PF	10%	50V (G, IT)
C901	1-126-969-91	ELECT (US, Canadian)	220uF	20%	50V
C901	1-126-970-91	ELECT (EXCEPT US, Canadian)	330uF	20%	50V
C902	1-124-478-11	ELECT	100uF	20%	25V
C903	1-126-943-11	ELECT	2200uF	20%	25V
C904	1-126-943-11	ELECT	2200uF	20%	25V
C905	1-124-907-11	ELECT	10uF	20%	50V
C906	1-124-907-11	ELECT	10uF	20%	50V
C907	1-124-907-11	ELECT	10uF	20%	50V
C908	1-124-907-11	ELECT	10uF	20%	50V
C909	1-124-907-11	ELECT	10uF	20%	50V
C911	1-124-907-11	ELECT	10uF	20%	50V
C912	1-124-907-11	ELECT	10uF	20%	50V
C913	1-124-907-11	ELECT	10uF	20%	50V
C914	1-124-636-00	ELECT	3300uF	20%	25V
C915	1-124-636-00	ELECT	3300uF	20%	25V
C916	1-124-893-11	ELECT	2200uF	20%	10V
C917	1-124-893-11	ELECT	2200uF	20%	10V
C921	1-126-969-91	ELECT (US, Canadian)	220uF	20%	50V

MAIN

Ref. No.	Part No.	Description			Remark
C921	1-126-970-91	ELECT (EXCEPT US, Canadian)	330uF	20%	50V
C922	1-126-101-11	ELECT	100uF	20%	16V
C923	1-124-907-11	ELECT	10uF	20%	50V
C924	1-124-927-11	ELECT	4.7uF	20%	100V
C926	1-126-176-11	ELECT	220uF	20%	10V
C928	1-124-477-11	ELECT	47uF	20%	25V
C930	1-164-159-11	CERAMIC	0.1uF		50V
C931	1-164-159-11	CERAMIC	0.1uF		50V
		< CONNECTOR >			
* CN101	1-566-859-11	SOCKET, CONNECTOR 15P (SYSTEM CONTROL 1)			
* CN103	1-569-624-11	SOCKET, CONNECTOR 17P (SYSTEM CONTROL 2)			
* CN104	1-568-832-11	SOCKET, CONNECTOR 13P			
* CN105	1-564-496-11	PIN, CONNECTOR 3P			
* CN106	1-564-506-11	PLUG, CONNECTOR 3P			
* CN108	1-568-834-11	SOCKET, CONNECTOR 15P			
* CN109	1-568-826-11	SOCKET, CONNECTOR 7P			
* CN110	1-695-649-11	CONNECTOR, BOARD TO BOARD 10P			
* CN111	1-568-455-11	PIN, CONNECTOR (PC BOARD) 10P			
		< DIODE >			
D901	8-719-200-82	DIODE	11ES2		
D902	8-719-200-82	DIODE	11ES2		
D903	8-719-200-82	DIODE	11ES2		
D904	8-719-200-82	DIODE	11ES2		
D905	8-719-200-82	DIODE	11ES2		
D906	8-719-200-82	DIODE	11ES2		
D907	8-719-910-25	DIODE	HZ12B2L		
D908	8-719-987-63	DIODE	1N4148M		
D909	8-719-200-82	DIODE	11ES2		
D910	8-719-200-82	DIODE	11ES2		
D911	8-719-200-82	DIODE	11ES2		
D912	8-719-200-82	DIODE	11ES2		
D913	8-719-987-63	DIODE	1N4148M		
D914	8-719-987-63	DIODE	1N4148M		
D916	8-719-987-63	DIODE	1N4148M		
D920	8-719-933-41	DIODE	HZS6C3L		
D921	8-719-933-54	DIODE	HZS9A2L		
		< FUSE >			
⚠F901	1-532-781-11	FUSE, MICRO 3.15A 125V (US, Canadian)			
⚠F901	1-532-844-21	LINK, IC 3.15A (EXCEPT US, Canadian)			
⚠F902	1-532-781-11	FUSE, MICRO 3.15A 125V (US, Canadian)			
⚠F902	1-532-844-21	LINK, IC 3.15A (EXCEPT US, Canadian)			
		< IC >			
IC101	8-759-805-14	IC	LC7822		
IC104	8-759-603-14	IC	M5229P		

Ref. No.	Part No.	Description			Remark
IC105	8-759-081-01	IC	NJU7305L		
IC106	8-759-603-14	IC	M5229P		
IC110	8-759-634-50	IC	M5218AL (AEP, UK, G, IT)		
IC901	8-759-602-66	IC	M5230L-A		
IC902	8-759-231-53	IC	TA7805S		
		< JACK >			
J101	1-565-320-61	JACK, PIN 6P (VIDEO/PHONO/DAT IN, DAT OUT)			
		< TRANSISTOR >			
Q107	8-729-900-61	TRANSISTOR	DTA114ES		
Q108	8-729-224-62	TRANSISTOR	2SK246-GR		
Q109	8-729-900-80	TRANSISTOR	DTC114ES		
Q901	8-729-209-15	TRANSISTOR	2SD2012		
Q902	8-729-620-05	TRANSISTOR	2SC2603-EF		
Q903	8-729-900-80	TRANSISTOR	DTC114ES		
Q904	8-729-209-15	TRANSISTOR	2SD2012		
Q907	8-729-141-83	TRANSISTOR	2SB1094-LK		
Q908	8-729-209-15	TRANSISTOR	2SD2012		
Q909	8-729-141-83	TRANSISTOR	2SB1094-LK		
Q910	8-729-900-80	TRANSISTOR	DTC114ES		
Q911	8-729-119-76	TRANSISTOR	2SA1175-HFE		
Q912	8-729-620-05	TRANSISTOR	2SC2603-EF		
Q913	8-729-119-76	TRANSISTOR	2SA1175-HFE		
Q929	8-729-900-61	TRANSISTOR	DTA114ES		
Q930	8-729-900-80	TRANSISTOR	DTC114ES		
		< RESISTOR >			
R101	1-249-437-11	CARBON	47K	5%	1/4W
R102	1-249-437-11	CARBON	47K	5%	1/4W
R103	1-249-432-11	CARBON	18K	5%	1/4W
R104	1-249-437-11	CARBON	47K	5%	1/4W
R105	1-249-417-11	CARBON (AEP, UK, G, IT)	1K	5%	1/4W F
R106	1-249-417-11	CARBON (AEP, UK, G, IT)	1K	5%	1/4W F
R107	1-247-897-11	CARBON (AEP, UK, G, IT)	560K	5%	1/4W
R108	1-249-437-11	CARBON (AEP, UK, G, IT)	47K	5%	1/4W
R110	1-249-430-11	CARBON (AEP, UK, G, IT)	12K	5%	1/4W
R111	1-247-883-00	CARBON	150K	5%	1/4W
R112	1-249-437-11	CARBON	47K	5%	1/4W
R113	1-249-423-11	CARBON	3.3K	5%	1/4W F
R114	1-249-423-11	CARBON	3.3K	5%	1/4W F
R115	1-249-437-11	CARBON	47K	5%	1/4W
R120	1-249-417-11	CARBON	1K	5%	1/4W F

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description				Remark
R121	1-249-417-11	CARBON	1K	5%	1/4W	F
R122	1-249-417-11	CARBON	1K	5%	1/4W	F
R125	1-247-887-00	CARBON	220K	5%	1/4W	
R126	1-247-887-00	CARBON	220K	5%	1/4W	
R127	1-249-417-11	CARBON	1K	5%	1/4W	F
R128	1-249-427-11	CARBON	6.8K	5%	1/4W	F
R129	1-247-903-00	CARBON	1M	5%	1/4W	
R130	1-247-903-00	CARBON	1M	5%	1/4W	
R131	1-247-903-00	CARBON	1M	5%	1/4W	
R132	1-247-903-00	CARBON	1M	5%	1/4W	
R133	1-247-903-00	CARBON	1M	5%	1/4W	
R134	1-247-903-00	CARBON	1M	5%	1/4W	
R135	1-247-903-00	CARBON	1M	5%	1/4W	
R136	1-247-895-00	CARBON	470K	5%	1/4W	
R137	1-249-417-11	CARBON	1K	5%	1/4W	F
R151	1-249-437-11	CARBON	47K	5%	1/4W	
R152	1-249-437-11	CARBON	47K	5%	1/4W	
R153	1-249-432-11	CARBON	18K	5%	1/4W	
R154	1-249-437-11	CARBON	47K	5%	1/4W	
R155	1-249-417-11	CARBON (AEP, UK, G, IT)	1K	5%	1/4W	F
R156	1-249-417-11	CARBON (AEP, UK, G, IT)	1K	5%	1/4W	F
R157	1-247-897-11	CARBON (AEP, UK, G, IT)	560K	5%	1/4W	
R158	1-249-437-11	CARBON (AEP, UK, G, IT)	47K	5%	1/4W	
R160	1-249-430-11	CARBON (AEP, UK, G, IT)	12K	5%	1/4W	
R161	1-249-417-11	CARBON	1K	5%	1/4W	F
R162	1-249-417-11	CARBON	1K	5%	1/4W	F
R175	1-247-887-00	CARBON	220K	5%	1/4W	
R176	1-247-887-00	CARBON	220K	5%	1/4W	
R177	1-249-417-11	CARBON	1K	5%	1/4W	F
R178	1-249-427-11	CARBON	6.8K	5%	1/4W	F
R179	1-247-903-00	CARBON	1M	5%	1/4W	
R180	1-247-903-00	CARBON	1M	5%	1/4W	
R181	1-247-903-00	CARBON	1M	5%	1/4W	
R182	1-247-903-00	CARBON	1M	5%	1/4W	
R183	1-247-903-00	CARBON	1M	5%	1/4W	
R184	1-247-903-00	CARBON	1M	5%	1/4W	
R185	1-247-903-00	CARBON	1M	5%	1/4W	
R186	1-247-895-00	CARBON	470K	5%	1/4W	
R187	1-249-417-11	CARBON	1K	5%	1/4W	F
R201	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R202	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R203	1-249-437-11	CARBON (AEP, UK, G, IT)	47K	5%	1/4W	
R204	1-249-437-11	CARBON (AEP, UK, G, IT)	47K	5%	1/4W	

Ref. No.	Part No.	Description				Remark
R205	1-249-432-11	CARBON	18K	5%	1/4W	
R207	1-249-425-11	CARBON (US, Canadian, E, AUS, EA, TR)	4.7K	5%	1/4W	F
R207	1-249-417-11	CARBON (AEP, UK, G, IT)	1K	5%	1/4W	F
R208	1-249-425-11	CARBON (US, Canadian, E, AUS, EA, TR)	4.7K	5%	1/4W	F
R208	1-249-417-11	CARBON (AEP, UK, G, IT)	1K	5%	1/4W	F
R209	1-249-437-11	CARBON	47K	5%	1/4W	
R210	1-249-437-11	CARBON	47K	5%	1/4W	
R211	1-249-437-11	CARBON	47K	5%	1/4W	
R212	1-249-437-11	CARBON	47K	5%	1/4W	
R213	1-249-437-11	CARBON	47K	5%	1/4W	
R214	1-249-437-11	CARBON	47K	5%	1/4W	
R221	1-249-417-11	CARBON	1K	5%	1/4W	F
R223	1-249-417-11	CARBON	1K	5%	1/4W	F
R255	1-249-432-11	CARBON	18K	5%	1/4W	
R902	1-249-413-11	CARBON	470	5%	1/4W	F
R903	1-247-903-00	CARBON	1M	5%	1/4W	
R904	1-249-413-11	CARBON	470	5%	1/4W	F
R905	1-249-431-11	CARBON	15K	5%	1/4W	
R906	1-249-425-11	CARBON	4.7K	5%	1/4W	F
R907	1-249-431-11	CARBON	15K	5%	1/4W	
R908	1-249-431-11	CARBON	15K	5%	1/4W	
R911	1-249-429-11	CARBON	10K	5%	1/4W	
R919	1-249-429-11	CARBON	10K	5%	1/4W	
⚠R920	1-212-857-00	FUSIBLE	10	5%	1/4W	F
⚠R921	1-212-974-00	FUSIBLE	47	5%	1/2W	F
R923	1-249-413-11	CARBON	470	5%	1/4W	F
R924	1-249-441-11	CARBON	100K	5%	1/4W	
R925	1-249-433-11	CARBON	22K	5%	1/4W	
R928	1-249-429-11	CARBON	10K	5%	1/4W	
R929	1-249-429-11	CARBON	10K	5%	1/4W	
R930	1-249-429-11	CARBON	10K	5%	1/4W	
R932	1-219-138-91	FUSIBLE	0.47	10%	1/4W	
R933	1-219-138-91	FUSIBLE	0.47	10%	1/4W	
R940	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R941	1-249-421-11	CARBON	2.2K	5%	1/4W	F
R948	1-249-413-11	CARBON	470	5%	1/4W	F
R949	1-249-441-11	CARBON	100K	5%	1/4W	
R990	1-219-138-21	FUSIBLE	0.47	10%	1/4W	

< TEST PIN >

* TP101 1-565-835-11 SOCKET, CONNECTOR 3P

****

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

MD-A **MD-B**

Ref.No.	Part No.	Description			Remark
*	A-2006-399-A	MD-A BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C11	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C12	1-136-157-00	FILM	0.022uF	5%	50V
C13	1-124-234-00	ELECT	22uF	20%	16V
C18	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C21	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C22	1-136-157-00	FILM	0.022uF	5%	50V
C23	1-124-234-00	ELECT	22uF	20%	16V
C28	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C31	1-124-234-00	ELECT	22uF	20%	16V
C32	1-124-234-00	ELECT	22uF	20%	16V
C71	1-124-499-11	ELECT, NONPOLAR R	1uF	20%	50V
		< CONNECTOR >			
* CNJ31	1-580-782-11	CONNECTOR, BOARD TO BOARD			
* CNJ72	1-580-411-11	SOCKET, CONNECTOR 4P			
* CNP32	1-580-772-11	PIN, CONNECTOR (PC BOARD) 4P			
* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P			
		< IC >			
IC31A	8-759-106-02	IC uPC4570G2			
		< JUMPER RESISTOR >			
JW1	1-216-295-00	METAL CHIP	0	5%	1/10W
JW51	1-216-296-00	METAL CHIP	0	5%	1/8W
JW52	1-216-296-00	METAL CHIP	0	5%	1/8W
JW53	1-216-296-00	METAL CHIP	0	5%	1/8W
JW54	1-216-296-00	METAL CHIP	0	5%	1/8W
		< TRANSISTOR >			
Q71A	8-729-602-36	TRANSISTOR 2SA1602-F			
		< RESISTOR >			
R11	1-216-099-00	METAL CHIP	120K	5%	1/10W
R12	1-216-025-00	METAL CHIP	100	5%	1/10W
R13	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R14	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R21	1-216-099-00	METAL CHIP	120K	5%	1/10W
R22	1-216-025-00	METAL CHIP	100	5%	1/10W
R23	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R24	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R31	1-216-033-00	METAL CHIP	220	5%	1/10W
R32	1-216-033-00	METAL CHIP	220	5%	1/10W
R71	1-216-082-00	METAL GLAZE	24K	5%	1/10W
R72	1-216-081-00	METAL CHIP	22K	5%	1/10W
R73	1-216-089-00	METAL CHIP	47K	5%	1/10W
R74	1-216-089-00	METAL CHIP	47K	5%	1/10W
		< VARIABLE RESISTOR >			
RV11A	1-241-627-11	RES, ADJ, CARBON	1K		
RV21A	1-241-627-11	RES, ADJ, CARBON	1K		
RV71A	1-241-630-11	RES, ADJ, CARBON	10K		
RV72A	1-241-630-11	RES, ADJ, CARBON	10K		
**********					
*	A-2006-400-A	MD-B BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C11	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C12	1-136-157-00	FILM	0.022uF	5%	50V
C13	1-124-234-00	ELECT	22uF	20%	16V
C14	1-136-273-91	FILM	75PF	5%	630V
C15	1-164-080-11	CERAMIC	390PF	10%	50V
C17	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C18	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C21	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C22	1-136-157-00	FILM	0.022uF	5%	50V
C23	1-124-234-00	ELECT	22uF	20%	16V
C24	1-136-273-91	FILM	75PF	5%	630V
C25	1-164-080-11	CERAMIC	390PF	10%	50V
C27	1-163-103-00	CERAMIC CHIP	27PF	5%	50V
C28	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C31	1-124-234-00	ELECT	22uF	20%	16V
C32	1-124-234-00	ELECT	22uF	20%	16V
C33	1-124-234-00	ELECT	22uF	20%	16V
C51	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
C52	1-163-019-00	CERAMIC CHIP	0.0068uF	10%	50V
C53	1-163-022-00	CERAMIC CHIP	0.012uF	10%	50V
C54	1-136-559-11	FILM	0.0047uF	5%	630V
C56	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C57	1-164-346-11	CERAMIC CHIP	1uF		16V
C58	1-163-024-00	CERAMIC CHIP	0.018uF	10%	50V
C71	1-124-499-11	ELECT, NONPOLAR R	1uF	20%	50V
		< CONNECTOR >			
* CNJ31	1-580-782-11	CONNECTOR, BOARD TO BOARD			
* CNJ33	1-580-782-11	CONNECTOR, BOARD TO BOARD			
* CNJ72	1-580-411-11	SOCKET, CONNECTOR 4P			
* CNP32	1-580-781-11	PIN, CONNECTOR (PC BOARD) 7P			
* CNP71	1-564-719-11	PIN, CONNECTOR (SMALL TYPE) 3P			
		< DIODE >			
D31	8-719-016-74	DIODE 1SS352			

MC-Service

Ref. No.	Part No.	Description			Remark
		< IC >			
IC31B	8-759-106-02	IC uPC4570G2			
		< JUMPER RESISTOR >			
JW1	1-216-296-00	METAL CHIP	0	5%	1/8W
JW2	1-216-295-00	METAL CHIP	0	5%	1/10W
JW3	1-216-295-00	METAL CHIP	0	5%	1/10W
JW4	1-216-295-00	METAL CHIP	0	5%	1/10W
JW5	1-216-295-00	METAL CHIP	0	5%	1/10W
JW6	1-216-295-00	METAL CHIP	0	5%	1/10W
JW7	1-216-295-00	METAL CHIP	0	5%	1/10W
JW52	1-216-296-00	METAL CHIP	0	5%	1/8W
JW53	1-216-296-00	METAL CHIP	0	5%	1/8W
JW54	1-216-296-00	METAL CHIP	0	5%	1/8W
JW55	1-216-296-00	METAL CHIP	0	5%	1/8W
JW56	1-216-296-00	METAL CHIP	0	5%	1/8W
JW57	1-216-296-00	METAL CHIP	0	5%	1/8W
JW58	1-216-296-00	METAL CHIP	0	5%	1/8W
JW59	1-216-296-00	METAL CHIP	0	5%	1/8W
JW60	1-216-296-00	METAL CHIP	0	5%	1/8W
JW61	1-216-296-00	METAL CHIP	0	5%	1/8W
		< COIL >			
L11	1-410-780-11	INDUCTOR	27mH		
L21	1-410-780-11	INDUCTOR	27mH		
		< TRANSISTOR >			
Q51	8-729-808-01	TRANSISTOR	2SD1622-S		
Q52	8-729-808-01	TRANSISTOR	2SD1622-S		
Q53	8-729-808-01	TRANSISTOR	2SD1622-S		
Q71B	8-729-602-36	TRANSISTOR	2SA1602-F		
		< RESISTOR >			
R11	1-216-099-00	METAL CHIP	120K	5%	1/10W
R12	1-216-025-00	METAL CHIP	100	5%	1/10W
R13	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R14	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
⚠R15	1-249-430-11	CARBON	12K	5%	1/4W F
R21	1-216-099-00	METAL CHIP	120K	5%	1/10W
R22	1-216-025-00	METAL CHIP	100	5%	1/10W
R23	1-216-100-00	METAL GLAZE	130K	5%	1/10W
R24	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
⚠R25	1-249-430-11	CARBON	12K	5%	1/4W F
R31	1-216-033-00	METAL CHIP	220	5%	1/10W
R32	1-216-033-00	METAL CHIP	220	5%	1/10W
⚠R41	1-249-393-11	CARBON	10	5%	1/4W F
⚠R42	1-249-393-11	CARBON	10	5%	1/4W F
R51	1-216-075-00	METAL CHIP	12K	5%	1/10W
R52	1-216-075-00	METAL CHIP	12K	5%	1/10W
R53	1-216-073-00	METAL CHIP	10K	5%	1/10W
R54	1-216-309-00	METAL CHIP	5.6	5%	1/10W
R55	1-216-309-00	METAL CHIP	5.6	5%	1/10W
R56	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R71	1-216-082-00	METAL GLAZE	24K	5%	1/10W
R72	1-216-081-00	METAL CHIP	22K	5%	1/10W
R73	1-216-089-00	METAL CHIP	47K	5%	1/10W
R74	1-216-089-00	METAL CHIP	47K	5%	1/10W
		< VARIABLE RESISTOR >			
RV11B	1-241-627-11	RES, ADJ, CARBON 1K			
RV12B	1-238-551-11	RES, ADJ, CARBON 220K			
RV21	1-241-627-11	RES, ADJ, CARBON 1K			
RV22	1-238-551-11	RES, ADJ, CARBON 220K			
RV71B	1-241-630-11	RES, ADJ, CARBON 10K			
RV72B	1-241-630-11	RES, ADJ, CARBON 10K			
		< RELAY >			
RY31	1-515-726-11	RELAY			
		< TRANSFORMER >			
T51	1-406-419-11	COIL, BIAS OSCILLATION			

****

*	A-4356-158-A	POWER AMP BOARD, COMPLETE (G, IT)
*	A-4356-189-A	POWER AMP BOARD, COMPLETE (E, EA, TR)
*	A-4356-196-A	POWER AMP BOARD, COMPLETE (US, Canadian)
*	A-4356-200-A	POWER AMP BOARD, COMPLETE (AEP, UK, AUS)

****

		< CAPACITOR >			
C702	1-126-176-11	ELECT	220uF	20%	10V
C704	1-161-379-00	CERAMIC	0.01uF	20%	25V
C706	1-124-927-11	ELECT	4.7uF	20%	100V
C707	1-124-478-11	ELECT	100uF	20%	25V
C801	1-124-443-00	ELECT	100uF	20%	10V
C802	1-162-290-31	CERAMIC	470PF	10%	50V
C803	1-124-122-11	ELECT	100uF	20%	50V
C804	1-162-282-31	CERAMIC	100PF	10%	50V
C806	1-124-910-11	ELECT	47uF	20%	50V
C807	1-124-122-11	ELECT	100uF	20%	50V
C809	1-126-233-11	ELECT	22uF	20%	50V
C810	1-136-165-00	FILM	0.1uF	5%	50V
C811	1-136-165-00	FILM	0.1uF	5%	50V
C812	1-136-165-00	FILM	0.1uF	5%	50V
C814	1-161-379-00	CERAMIC	0.01uF	20%	25V
C816	1-126-233-11	ELECT	22uF	20%	50V
C818	1-126-233-11	ELECT	22uF	20%	50V

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

POWER AMP | POWER

Ref. No.	Part No.	Description			Remark
C819	1-124-903-11	ELECT	1uF	20%	50V
C851	1-124-443-00	ELECT	100uF	20%	10V
C852	1-162-290-31	CERAMIC	470PF	10%	50V
C853	1-124-122-11	ELECT	100uF	20%	50V
C854	1-162-282-31	CERAMIC	100PF	10%	50V
C856	1-124-910-11	ELECT	47uF	20%	50V
C860	1-136-165-00	FILM	0.1uF	5%	50V
C863	1-136-165-00	FILM	0.1uF	5%	50V
C866	1-126-233-11	ELECT	22uF	20%	50V
		< CONNECTOR >			
* CN801	1-564-508-11	PLUG, CONNECTOR 5P			
* CN802	1-564-507-11	PLUG, CONNECTOR 4P			
CN803	1-564-507-11	PLUG, CONNECTOR 4P			
* CN804	1-564-509-11	PLUG, CONNECTOR 6P			
		< DIODE >			
D801	8-719-987-63	DIODE	1N4148M		
D802	8-719-987-63	DIODE	1N4148M		
D851	8-719-987-63	DIODE	1N4148M		
		< IC >			
IC701	8-759-111-68	IC	uPC1237HA		
IC801	8-749-920-09	IC	STK-4152MK2K		
		< COIL >			
* L801	1-420-872-00	COIL, AIR CORE			
* L851	1-420-872-00	COIL, AIR CORE			
		< TRANSISTOR >			
Q701	8-729-119-76	TRANSISTOR	2SA1175-HFE		
Q801	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA		
Q851	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA		
		< RESISTOR >			
R701	1-249-433-11	CARBON	22K	5%	1/4W
R702	1-249-441-11	CARBON	100K	5%	1/4W
R703	1-249-433-11	CARBON	22K	5%	1/4W
R704	1-249-433-11	CARBON	22K	5%	1/4W
R705	1-249-429-11	CARBON	10K	5%	1/4W
R712	1-249-437-11	CARBON	47K	5%	1/4W
⚠R800	1-219-138-91	FUSIBLE	0.47	10%	1/4W F
R801	1-249-414-11	CARBON	560	5%	1/4W F
R802	1-249-438-11	CARBON	56K	5%	1/4W
R803	1-249-414-11	CARBON	560	5%	1/4W F
R804	1-249-438-11	CARBON	56K	5%	1/4W
R805	1-249-421-11	CARBON	2.2K	5%	1/4W F
R806	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R807	1-212-881-11	FUSIBLE	100	5%	1/4W F
⚠R808	1-212-881-11	FUSIBLE	100	5%	1/4W F
⚠R809	1-217-151-00	RES, METAL PLATE	0.22		
R810	1-247-752-11	CARBON	1K	5%	1/2W
R811	1-247-752-11	CARBON	1K	5%	1/2W
R812	1-247-727-11	CARBON	10	5%	1/2W
R813	1-249-417-11	CARBON	1K	5%	1/4W F
R814	1-249-431-11	CARBON	15K	5%	1/4W
R815	1-249-441-11	CARBON	100K	5%	1/4W
R816	1-249-438-11	CARBON	56K	5%	1/4W
R818	1-249-441-11	CARBON	100K	5%	1/4W
R819	1-249-441-11	CARBON	100K	5%	1/4W
R820	1-249-435-11	CARBON	33K	5%	1/4W
R821	1-249-429-11	CARBON	10K	5%	1/4W
R822	1-247-903-00	CARBON	1M	5%	1/4W
R823	1-249-431-11	CARBON	15K	5%	1/4W
R824	1-249-429-11	CARBON	10K	5%	1/4W
R825	1-247-883-00	CARBON	150K	5%	1/4W
R851	1-249-414-11	CARBON	560	5%	1/4W F
R852	1-249-438-11	CARBON	56K	5%	1/4W
R853	1-249-414-11	CARBON	560	5%	1/4W F
R854	1-249-438-11	CARBON	56K	5%	1/4W
R855	1-249-421-11	CARBON	2.2K	5%	1/4W F
R856	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R859	1-217-151-00	RES, METAL PLATE	0.22		
R862	1-247-727-11	CARBON	10	5%	1/2W
R863	1-249-417-11	CARBON	1K	5%	1/4W F
R864	1-249-431-11	CARBON	15K	5%	1/4W
R865	1-249-441-11	CARBON	100K	5%	1/4W
R866	1-249-437-11	CARBON	47K	5%	1/4W
⚠R876	1-212-881-11	FUSIBLE	100	5%	1/4W F

****

*	A-4356-156-A	POWER BOARD, COMPLETE (G, IT)
*	A-4356-186-A	POWER BOARD, COMPLETE (E, TR)
*	A-4356-187-A	POWER BOARD, COMPLETE (EA)
*	A-4356-194-A	POWER BOARD, COMPLETE (US, Canadian)
*	A-4356-197-A	POWER BOARD, COMPLETE (AEP, AUS)
*	A-4356-198-A	POWER BOARD, COMPLETE (UK)

****

*	1-533-213-31	HOLDER, FUSE

< CAPACITOR >

C918	1-124-628-11	ELECT	220uF	20%	100V
C919	1-124-628-11	ELECT	220uF	20%	100V
C920	1-123-605-00	ELECT	100uF	20%	100V
C925	1-164-159-11	CERAMIC	0.1uF		50V
C932	1-164-159-11	CERAMIC (US, Canadian)	0.1uF		50V
C933	1-123-605-00	ELECT	100uF	20%	100V
C934	1-124-907-11	ELECT	10uF	20%	50V

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remark
C935	1-124-907-11	ELECT	10uF	20%	50V
C936	1-164-159-11	CERAMIC	0.1uF		50V
C937	1-124-907-11	ELECT (US, Canadian)	10uF	20%	50V
C951	1-136-153-00	FILM	0.01uF	5%	50V (G, IT)
C952	1-136-153-00	FILM	0.01uF	5%	50V (G, IT)
C953	1-126-224-11	ELECT	4700uF	20%	42V
C954	1-126-224-11	ELECT	4700uF	20%	42V
C955	1-136-171-00	FILM	0.33uF	5%	50V
C956	1-136-171-00	FILM	0.33uF	5%	50V
		< CONNECTOR >			
* CN951	1-564-321-00	PIN, CONNECTOR 2P (EXCEPT, EA, TR)			
CN951	1-568-106-11	PIN, CONNECTOR 4P (E, EA, TR)			
* CN952	1-564-505-11	PLUG, CONNECTOR 2P (US, Canadian)			
* CN953	1-568-828-11	SOCKET, CONNECTOR 9P			
* CN954	1-564-510-11	PLUG, CONNECTOR 7P			
* CN956	1-564-337-00	PIN, CONNECTOR 3P			
		< DIODE >			
D918	8-719-002-73	DIODE UZL-36M			
D919	8-719-934-22	DIODE HZS30-2L (EXCEPT Canadian)			
D919	8-719-934-18	DIODE HZS27-2L (Canadian)			
D931	8-719-987-63	DIODE 1N4148M (US, Canadian)			
D932	8-719-987-63	DIODE 1N4148M (US, Canadian)			
D940	8-719-200-82	DIODE 11ES2			
D941	8-719-200-82	DIODE 11ES2			
D942	8-719-200-82	DIODE 11ES2			
D943	8-719-200-82	DIODE 11ES2			
D944	8-719-014-80	DIODE UZP-6.2BC			
D945	8-719-014-80	DIODE UZP-6.2BC			
D951	8-719-987-63	DIODE 1N4148M			
D952	8-719-987-63	DIODE 1N4148M			
D953	8-719-302-38	DIODE RBV-602-01			
D954	8-719-987-63	DIODE 1N4148M			
		< IC >			
IC910	8-759-987-16	IC LM393P (US, Canadian)			
		< JACK >			
⚠J951	1-526-930-11	INLET, AC (~ AC IN) (US, Canadian, E, TR)			
⚠J951	1-526-931-11	INLET, AC (~ AC IN) (AEP, UK, G, IT, AUS, EA)			
J952	1-537-151-11	TERMINAL BOARD (SPEAKER)			
* J953	1-565-352-91	JACK, PIN 2P (SURROUND SPEAKER) (UK)			
		< COIL >			
⚠L901	1-424-485-11	FILTER, LINE (AEP, UK, G, IT, AUS)			

Ref. No.	Part No.	Description				Remark
		< TRANSISTOR >				
Q915	8-729-188-23	TRANSISTOR 2SD882-P				
Q916	8-729-177-22	TRANSISTOR 2SB772-Q				
Q952	8-729-801-84	TRANSISTOR 2SB1013-4 (US, Canadian)				
Q953	8-729-111-29	TRANSISTOR 2SD1616A-K				
		< RESISTOR >				
R901	1-202-725-00	SOLID (US, Canadian)	3.3M	10%	1/2W	
⚠R912	1-215-868-00	METAL OXIDE	680	5%	1W	F
⚠R913	1-215-869-11	METAL OXIDE	1K	5%	1W	F
R914	1-249-429-11	CARBON	10K	5%	1/4W	
R915	1-249-429-11	CARBON	10K	5%	1/4W	
R916	1-249-434-11	CARBON	27K	5%	1/4W	
R917	1-247-895-00	CARBON	470K	5%	1/4W	
R918	1-247-895-00	CARBON	470K	5%	1/4W	
R931	1-249-429-11	CARBON (US, Canadian)	10K	5%	1/4W	
R934	1-249-441-11	CARBON (US, Canadian)	100K	5%	1/4W	
R935	1-249-429-11	CARBON (US, Canadian)	10K	5%	1/4W	
R936	1-249-441-11	CARBON (US, Canadian)	100K	5%	1/4W	
R937	1-249-429-11	CARBON (US, Canadian)	10K	5%	1/4W	
R951	1-247-727-11	CARBON (G, IT)	10	5%	1/2W	F
R952	1-247-727-11	CARBON (G, IT)	10	5%	1/2W	F
⚠R953	1-247-749-11	CARBON	560	5%	1/2W	F
R954	1-249-441-11	CARBON	100K	5%	1/4W	
R955	1-249-429-11	CARBON	10K	5%	1/4W	
R956	1-249-429-11	CARBON	10K	5%	1/4W	
R957	1-249-429-11	CARBON (US, Canadian)	10K	5%	1/4W	
R958	1-249-429-11	CARBON (US, Canadian)	10K	5%	1/4W	
⚠R991	1-219-138-91	FUSIBLE	0.47	10%	1/4W	F
		< RELAY >				
RY901	1-515-790-11	RELAY				
		< SWITCH >				
⚠S951	1-692-328-11	SELECTOR, VOLTAGE (VOLTAGE SELECTOR) (E, EA, TR)				

****

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

SW-A SW-B TA PANEL

Ref.No.	Part No.	Description				Remark
*	1-634-841-14	SW-A BOARD				
		**********				
	3-343-419-01	HOLDER (S SENSER A)				
		< CONNECTOR >				
* CNP81	1-568-852-11	SOCKET, CONNECTOR 9P				
		< IC >				
IC81A	8-719-710-03	DIODE NJL5165K-B				
		< RESISTOR >				
R84	1-249-417-11	CARBON	1K	5%	1/4W	F
R85	1-249-408-11	CARBON	180	5%	1/4W	F
		< SWITCH >				
S81	1-571-958-11	SWITCH, PUSH (1 KEY) (STOP DET)				
S82	1-571-281-21	SWITCH, LEAF (CrO2 DET)				
S86	1-571-281-21	SWITCH, LEAF (HALF DET)				
**********						
*	1-634-841-14	SW-B BOARD				
		**********				
	3-343-419-01	HOLDER (S SENSER A)				
		< CONNECTOR >				
* CNP81	1-568-852-11	SOCKET, CONNECTOR 9P				
		< IC >				
IC81B	8-719-710-03	DIODE NJL5165K-B				
		< RESISTOR >				
R81	1-249-414-11	CARBON	560	5%	1/4W	F
R82	1-247-818-11	CARBON	300	5%	1/4W	
R83	1-247-834-11	CARBON	1.3K	5%	1/4W	
R84	1-249-417-11	CARBON	1K	5%	1/4W	F
R85	1-249-408-11	CARBON	180	5%	1/4W	F
		< SWITCH >				
S81	1-571-958-11	SWITCH, PUSH (1 KEY) (STOP DET)				
S82	1-571-281-21	SWITCH, LEAF (CrO2 DET)				
S83	1-571-281-21	SWITCH, LEAF (METAL DET)				
S84	1-571-281-21	SWITCH, LEAF (ERASE PROOF (SIDE A))				
S85	1-571-281-21	SWITCH, LEAF (ERASE PROOF (SIDE B))				
S86	1-571-281-21	SWITCH, LEAF (HALF DET)				
**********						

Ref.No.	Part No.	Description				Remark
*	A-4356-160-A	TA PANEL BOARD, COMPLETE (G, IT)				
*	A-4356-191-A	TA PANEL BOARD, COMPLETE (E, EA, TR)				
*	A-4356-202-A	TA PANEL BOARD, COMPLETE (US, Canadian)				
*	A-4356-206-A	TA PANEL BOARD, COMPLETE (AEP, UK, AUS)				
		**********				
*	4-921-941-01	CUSHION (FL)				
*	4-953-602-01	HOLDER (FL TUBE)				
		< CAPACITOR >				
C522	1-164-159-11	CERAMIC	0.1uF		50V	
C523	1-164-159-11	CERAMIC	0.1uF		50V	
		< CONNECTOR >				
* CN521	1-568-858-11	SOCKET, CONNECTOR 15P				
		< DIODE >				
D520	8-719-301-37	LED SEL2210S-CD (DIRECT)				
D521	8-719-301-37	LED SEL2210S-CD (TUNER/PHONO)				
D522	8-719-301-37	LED SEL2210S-CD (CD/TUNER)				
D523	8-719-301-37	LED SEL2210S-CD (DAT/CD)				
D524	8-719-301-37	LED SEL2210S-CD (TAPE/DAT)				
D525	8-719-301-37	LED SEL2210S-CD (VIDEO/TAPE)				
D526	8-719-301-37	LED SEL2210S-CD (ON STANDBY)				
		< FLUORESCENT INDICATOR >				
FL521	1-519-735-11	INDICATOR TUBE, FLUORESCENT				
		< IC >				
IC551	8-759-075-35	IC TD62C950RF				
		< RESISTOR >				
R520	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R521	1-249-413-11	CARBON	470	5%	1/4W	F
R522	1-249-415-11	CARBON	680	5%	1/4W	F
R523	1-249-423-11	CARBON	3.3K	5%	1/4W	F
R524	1-249-413-11	CARBON	470	5%	1/4W	F
R525	1-249-415-11	CARBON	680	5%	1/4W	F
R526	1-249-417-11	CARBON	1K	5%	1/4W	F
R527	1-249-414-11	CARBON	560	5%	1/4W	F
R528	1-249-414-11	CARBON	560	5%	1/4W	F
R550	1-249-417-11	CARBON	1K	5%	1/4W	F
R551	1-249-417-11	CARBON	1K	5%	1/4W	F
R552	1-249-417-11	CARBON	1K	5%	1/4W	F
R553	1-249-417-11	CARBON	1K	5%	1/4W	F
R554	1-249-437-11	CARBON	47K	5%	1/4W	

MC-Service

Ref. No.	Part No.	Description			Remark
		< SWITCH >			
S520	1-554-303-21	SWITCH, TACTILE (SYSTEM POWER)			
S521	1-554-303-21	SWITCH, TACTILE (DISPLAY)			
S522	1-554-303-21	SWITCH, TACTILE (DIRECT)			
S523	1-554-303-21	SWITCH, TACTILE (FUNCTION)			
S524	1-554-303-21	SWITCH, TACTILE (+)			
S525	1-554-303-21	SWITCH, TACTILE (PRESET)			
S526	1-554-303-21	SWITCH, TACTILE (-)			
**********					
*	A-4356-164-A	TC MAIN BOARD, COMPLETE (G, IT)			
*	A-4356-210-A	TC MAIN BOARD, COMPLETE (EXCEPT G, IT)			
		**********			
		< CAPACITOR >			
C201	1-136-158-00	FILM	0.027uF	5%	50V
C202	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C203	1-124-254-00	ELECT	0.68uF	20%	50V
C204	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C205	1-124-925-11	ELECT	2.2uF	20%	100V
C206	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C207	1-126-157-11	ELECT	10uF	20%	16V
C208	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C209	1-126-301-11	ELECT	1uF	20%	50V
C301	1-136-158-00	FILM	0.027uF	5%	50V
C302	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C303	1-124-254-00	ELECT	0.68uF	20%	50V
C304	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C305	1-124-925-11	ELECT	2.2uF	20%	100V
C306	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C307	1-126-157-11	ELECT	10uF	20%	16V
C308	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C309	1-126-301-11	ELECT	1uF	20%	50V
C401	1-124-443-00	ELECT	100uF	20%	10V
C402	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C403	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C404	1-124-473-11	ELECT	1000uF	20%	10V
C405	1-124-443-00	ELECT	100uF	20%	10V
C407	1-124-925-11	ELECT	2.2uF	20%	100V
C408	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C409	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C410	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C411	1-163-133-00	CERAMIC CHIP	470PF	5%	50V
C412	1-126-301-11	ELECT	1uF	20%	50V
C413	1-124-443-00	ELECT	100uF	20%	10V
C414	1-124-443-00	ELECT	100uF	20%	10V
C415	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C416	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C417	1-124-907-11	ELECT	10uF	20%	50V
C419	1-124-473-11	ELECT	1000uF	20%	10V
C420	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C421	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C422	1-163-117-00	CERAMIC CHIP	100PF	5%	50V
C424	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C425	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C426	1-124-478-11	ELECT	100uF	20%	25V
C427	1-124-478-11	ELECT	100uF	20%	25V
C428	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V
C440	1-124-473-11	ELECT	1000uF	20%	10V
C4001	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C4002	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C4003	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C6500	1-124-907-11	ELECT	10uF	20%	50V
		< CONNECTOR >			
CN601	1-573-101-11	SOCKET, CONNECTOR 9P			
CN602	1-580-783-11	CONNECTOR, BOARD TO BOARD			
CN603	1-573-101-11	SOCKET, CONNECTOR 9P			
CN604	1-580-783-11	CONNECTOR, BOARD TO BOARD			
* CN605	1-580-476-11	SOCKET, CONNECTOR 15P			
CN607	1-580-783-11	CONNECTOR, BOARD TO BOARD			
* CN609	1-568-856-11	SOCKET, CONNECTOR 13P			
		< DIODE >			
D401	8-719-210-33	DIODE	EC10DS2		
D404	8-719-021-41	DIODE	UZM5.6X		
D405	8-719-021-77	DIODE	UZM8.2Z		
D407	8-719-801-78	DIODE	1SS184		
D410	8-719-801-78	DIODE	1SS184		
D411	8-719-801-78	DIODE	1SS184		
D412	8-719-801-78	DIODE	1SS184		
D416	8-719-801-78	DIODE	1SS184		
D4001	8-719-800-76	DIODE	1SS226		
		< IC >			
IC201	8-759-516-43	IC	CD4053BCM		
IC202	8-752-050-13	IC	CXA1101M		
IC203	8-759-996-43	IC	RC4558PS		
IC204	8-759-516-47	IC	CD4066BCM		
IC205	8-752-055-60	IC	CXA1578M		
IC401	8-759-076-36	IC	M50964-256FP		
IC402	8-759-207-05	IC	TA7272P		
IC403	8-759-996-43	IC	RC4558PS		
IC404	8-759-925-85	IC	SN74HC32ANS		
IC405	8-759-520-90	IC	PST572E		
IC406	8-759-516-41	IC	CD4052BCM		

TC MAIN

Ref. No.	Part No.	Description			Remark
		< COIL >			
L403	1-410-482-31	INDUCTOR	100uH		
L404	1-410-482-31	INDUCTOR	100uH		
		< TRANSISTOR >			
Q201	8-729-207-56	TRANSISTOR	RN1402		
Q202	8-729-602-21	TRANSISTOR	2SC4154-F		
Q301	8-729-207-56	TRANSISTOR	RN1402		
Q302	8-729-602-21	TRANSISTOR	2SC4154-F		
Q401	8-729-804-41	TRANSISTOR	2SB1122-S		
Q402	8-729-804-41	TRANSISTOR	2SB1122-S		
Q403	8-729-207-68	TRANSISTOR	RN2402		
Q404	8-729-207-56	TRANSISTOR	RN1402		
Q405	8-729-207-68	TRANSISTOR	RN2402		
Q407	8-729-207-68	TRANSISTOR	RN2402		
Q408	8-729-207-56	TRANSISTOR	RN1402		
Q409	8-729-207-68	TRANSISTOR	RN2402		
Q410	8-729-207-70	TRANSISTOR	RN2404		
Q411	8-729-207-56	TRANSISTOR	RN1402		
Q412	8-729-207-68	TRANSISTOR	RN2402		
Q414	8-729-207-68	TRANSISTOR	RN2402		
Q415	8-729-207-68	TRANSISTOR	RN2402		
		< RESISTOR >			
R201	1-216-089-00	METAL CHIP	47K	5%	1/10W
R202	1-216-089-00	METAL CHIP	47K	5%	1/10W
R203	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R204	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R205	1-216-105-00	METAL CHIP	220K	5%	1/10W
R206	1-216-025-00	METAL CHIP	100	5%	1/10W
R207	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R208	1-216-089-00	METAL CHIP	47K	5%	1/10W
R209	1-216-097-00	METAL CHIP	100K	5%	1/10W
R210	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R211	1-216-025-00	METAL CHIP	100	5%	1/10W
R212	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R213	1-216-081-00	METAL CHIP	22K	5%	1/10W
R214	1-216-089-00	METAL CHIP	47K	5%	1/10W
R215	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R220	1-216-049-00	METAL CHIP	1K	5%	1/10W
R301	1-216-089-00	METAL CHIP	47K	5%	1/10W
R302	1-216-089-00	METAL CHIP	47K	5%	1/10W
R303	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R304	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R305	1-216-105-00	METAL CHIP	220K	5%	1/10W
R306	1-216-025-00	METAL CHIP	100	5%	1/10W
R307	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R308	1-216-089-00	METAL CHIP	47K	5%	1/10W
R309	1-216-097-00	METAL CHIP	100K	5%	1/10W
R310	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R311	1-216-025-00	METAL CHIP	100	5%	1/10W
R312	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R313	1-216-081-00	METAL CHIP	22K	5%	1/10W
R314	1-216-089-00	METAL CHIP	47K	5%	1/10W
R315	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R316	1-216-117-00	METAL CHIP	680K	5%	1/10W
R317	1-216-117-00	METAL CHIP	680K	5%	1/10W
R320	1-216-049-00	METAL CHIP	1K	5%	1/10W
R400	1-216-037-00	METAL CHIP	330	5%	1/10W
R401	1-216-037-00	METAL CHIP	330	5%	1/10W
R402	1-216-037-00	METAL CHIP	330	5%	1/10W
R403	1-216-037-00	METAL CHIP	330	5%	1/10W
R404	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R405	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R406	1-216-113-00	METAL CHIP	470K	5%	1/10W
R407	1-216-113-00	METAL CHIP	470K	5%	1/10W
R408	1-216-073-00	METAL CHIP	10K	5%	1/10W
R409	1-216-073-00	METAL CHIP	10K	5%	1/10W
R410	1-216-045-00	METAL CHIP	680	5%	1/10W
R411	1-216-037-00	METAL CHIP	330	5%	1/10W
R412	1-216-073-00	METAL CHIP	10K	5%	1/10W
R413	1-216-045-00	METAL CHIP	680	5%	1/10W
R414	1-216-073-00	METAL CHIP	10K	5%	1/10W
R415	1-216-083-00	METAL CHIP	27K	5%	1/10W
R416	1-216-073-00	METAL CHIP	10K	5%	1/10W
R417	1-216-083-00	METAL CHIP	27K	5%	1/10W
R418	1-216-085-00	METAL CHIP	33K	5%	1/10W
R419	1-216-084-00	METAL CHIP	30K	5%	1/10W
R420	1-216-089-00	METAL CHIP	47K	5%	1/10W
R421	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R422	1-216-090-00	METAL CHIP	51K	5%	1/10W
R423	1-216-080-00	METAL CHIP	20K	5%	1/10W
R424	1-216-090-00	METAL CHIP	51K	5%	1/10W
R425	1-216-025-00	METAL CHIP	100	5%	1/10W
R426	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R427	1-216-085-00	METAL CHIP	33K	5%	1/10W
R428	1-216-089-00	METAL CHIP	47K	5%	1/10W
R429	1-216-090-00	METAL CHIP	51K	5%	1/10W
R430	1-216-084-00	METAL CHIP	30K	5%	1/10W
R431	1-216-080-00	METAL CHIP	20K	5%	1/10W
R432	1-216-090-00	METAL CHIP	51K	5%	1/10W
R433	1-216-025-00	METAL CHIP	100	5%	1/10W
R434	1-216-121-00	METAL CHIP	1M	5%	1/10W
R435	1-216-081-00	METAL CHIP	22K	5%	1/10W
R436	1-216-089-00	METAL CHIP	47K	5%	1/10W
R437	1-216-073-00	METAL CHIP	10K	5%	1/10W
R438	1-216-073-00	METAL CHIP	10K	5%	1/10W

Ref.No.	Part No.	Description			Remark
R440	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R441	1-216-081-00	METAL CHIP	22K	5%	1/10W
R444	1-216-073-00	METAL CHIP	10K	5%	1/10W
R445	1-216-073-00	METAL CHIP	10K	5%	1/10W
R446	1-216-097-00	METAL CHIP	100K	5%	1/10W
R447	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R448	1-216-089-00	METAL CHIP	47K	5%	1/10W
R449	1-216-105-00	METAL CHIP	220K	5%	1/10W
R450	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R451	1-216-097-00	METAL CHIP	100K	5%	1/10W
R452	1-216-097-00	METAL CHIP	100K	5%	1/10W
R453	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R454	1-216-097-00	METAL CHIP	100K	5%	1/10W
R455	1-216-089-00	METAL CHIP	47K	5%	1/10W
R456	1-216-089-00	METAL CHIP	47K	5%	1/10W
R457	1-216-089-00	METAL CHIP	47K	5%	1/10W
R458	1-216-088-00	METAL CHIP	43K	5%	1/10W
R459	1-216-089-00	METAL CHIP	47K	5%	1/10W
R460	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
R461	1-216-081-00	METAL CHIP	22K	5%	1/10W
R462	1-216-082-00	METAL GLAZE	24K	5%	1/10W
R463	1-216-073-00	METAL CHIP	10K	5%	1/10W
R464	1-216-073-00	METAL CHIP	10K	5%	1/10W
R466	1-216-025-00	METAL CHIP	100	5%	1/10W
R467	1-216-025-00	METAL CHIP	100	5%	1/10W
R470	1-216-073-00	METAL CHIP	10K	5%	1/10W
R471	1-216-073-00	METAL CHIP	10K	5%	1/10W
R472	1-216-073-00	METAL CHIP	10K	5%	1/10W
R473	1-216-073-00	METAL CHIP	10K	5%	1/10W
R474	1-216-073-00	METAL CHIP	10K	5%	1/10W
R475	1-216-081-00	METAL CHIP	22K	5%	1/10W
R480	1-216-073-00	METAL CHIP	10K	5%	1/10W
R481	1-216-295-00	METAL CHIP	0	5%	1/10W
R482	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R483	1-216-072-00	METAL CHIP	9.1K	5%	1/10W
R484	1-216-081-00	METAL CHIP	22K	5%	1/10W
R2001	1-216-073-00	METAL CHIP	10K	5%	1/10W
R4000	1-216-049-00	METAL CHIP	1K	5%	1/10W
R4001	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4002	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4003	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4004	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4005	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4006	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4007	1-216-298-00	METAL CHIP	2.2	5%	1/10W
R4008	1-216-298-00	METAL CHIP	2.2	5%	1/10W
⚠R4010	1-212-849-00	FUSIBLE	4.7	5%	1/4W F
R4421	1-216-025-00	METAL CHIP	100	5%	1/10W

Ref.No.	Part No.	Description	Remark
		< VARIABLE RESISTOR >	
RV201	1-241-136-11	RES, ADJ, CARBON 10K	
RV301	1-241-136-11	RES, ADJ, CARBON 10K	
		< TEST PIN >	
* TP101	1-564-518-11	PLUG, CONNECTOR 3P	
* TP201	1-564-518-11	PLUG, CONNECTOR 3P	
* TP401	1-564-517-11	PLUG, CONNECTOR 2P	
		< VIBRATOR >	
X401	1-577-358-21	VIBRATOR, CERAMIC (4MHz)	
**********			
*	A-4356-163-A	TC SW BOARD, COMPLETE (G, IT)	
*	A-4356-209-A	TC SW BOARD, COMPLETE (EXCEPT G, IT)	
		**********	
		< CONNECTOR >	
* CN351	1-580-476-11	SOCKET, CONNECTOR 15P	
		< DIODE >	
D351	8-719-310-24	LED SEL4525C-C (DECK A: ◁)	
D352	8-719-310-24	LED SEL4525C-C (DECK A: ▷)	
D353	8-719-312-37	LED SEL4225C-C (HIGH SPEED)	
D354	8-719-312-37	LED SEL4225C-C (NORMAL SPEED)	
D355	8-719-312-37	LED SEL4225C-C (CD SYNCHRO)	
D356	8-719-310-04	LED SEL4925A-D (DECK B: PAUSE ❚❚)	
D357	8-719-310-24	LED SEL4525C-C (DECK B: ◁)	
D358	8-719-310-24	LED SEL4525C-C (DECK B: ▷)	
D359	8-719-312-37	LED SEL4225C-C (DECK B: REC ●)	
		< RESISTOR >	
R351	1-216-029-00	METAL CHIP 150 5% 1/10W	
R352	1-216-033-00	METAL CHIP 220 5% 1/10W	
R353	1-216-037-00	METAL CHIP 330 5% 1/10W	
R354	1-216-041-00	METAL CHIP 470 5% 1/10W	
R355	1-216-045-00	METAL CHIP 680 5% 1/10W	
R356	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R357	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
R358	1-216-063-00	METAL CHIP 3.9K 5% 1/10W	
R359	1-216-029-00	METAL CHIP 150 5% 1/10W	
R360	1-216-033-00	METAL CHIP 220 5% 1/10W	
R361	1-216-037-00	METAL CHIP 330 5% 1/10W	
R362	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R364	1-216-049-00	METAL CHIP 1K 5% 1/10W	
R365	1-216-067-00	METAL CHIP 5.6K 5% 1/10W	
R366	1-216-075-00	METAL CHIP 12K 5% 1/10W	
R369	1-216-295-00	METAL CHIP 0 5% 1/10W	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

TC SW TRANSFORMER

Ref. No.	Part No.	Description	Remark
R370	1-216-295-00	METAL CHIP 0 5% 1/10W	
R374	1-216-073-00	METAL CHIP 10K 5% 1/10W	
		< SWITCH >	
S351	1-554-303-21	SWITCH, TACTILE (DECK A: □)	
S352	1-554-303-21	SWITCH, TACTILE (DECK A: ▷)	
S353	1-554-303-21	SWITCH, TACTILE (DECK A: ◁)	
S354	1-554-303-21	SWITCH, TACTILE (DECK B: ◀◀)	
S355	1-554-303-21	SWITCH, TACTILE (DECK B: ▶▶)	
S356	1-554-303-21	SWITCH, TACTILE (DECK B: REC ●)	
S357	1-554-303-21	SWITCH, TACTILE (HIGH SPEED)	
S358	1-554-303-21	SWITCH, TACTILE (NORMAL SPEED)	
S359	1-554-303-21	SWITCH, TACTILE (CD SYNCHRO)	
S360	1-554-303-21	SWITCH, TACTILE (DECK B: □)	
S361	1-554-303-21	SWITCH, TACTILE (DECK B: PHASE ▮▮)	
S362	1-554-303-21	SWITCH, TACTILE (DECK B: ▷)	
S363	1-554-303-21	SWITCH, TACTILE (DECK B: ◁)	
S364	1-554-303-21	SWITCH, TACTILE (DECK A: ◀◀)	
S365	1-554-303-21	SWITCH, TACTILE (DECK A: ▶▶)	
S371	1-570-850-21	SWITCH, SLIDE (DIRECTION)	
S372	1-692-319-11	SWITCH, SLIDE (DOLBY NR)	
**********			
*	1-645-181-11	TRANSFORMER BOARD	
		**********	
		< CAPACITOR >	
C957	1-136-165-00	FILM 0.1uF 5% 50V	
C958	1-136-165-00	FILM 0.1uF 5% 50V	
		< CONNECTOR >	
* CN961	1-564-321-00	PIN, CONNECTOR 2P (EXCEPT E, EA, TR)	
CN961	1-568-106-11	PIN, CONNECTOR 4P (E, EA, TR)	
		< FUSE >	
⚠F953	1-532-783-21	FUSE, MICRO (SECONDARY) 125V 5A (US, Canadian)	
⚠F953	1-532-846-11	LINK, IC 5A (EXCEPT US, Canadian)	
⚠F954	1-532-783-21	FUSE, MICRO (SECONDARY) 125V 5A (US, Canadian)	
⚠F954	1-532-846-11	LINK, IC 5A (EXCEPT US, Canadian)	
**********			

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	
		**********	
16	1-575-903-11	WIRE, FLAT TYPE (15 CORE)	
18	1-696-727-11	WIRE (FLAT TYPE) (15 CORE)	
19	1-575-731-11	WIRE, FLAT TYPE (7 CORE)	
20	1-690-588-31	WIRE, FLAT TYPE (9 CORE)	
56	1-541-860-41	MOTOR, DC FAN (US, Canadian)	
118	1-696-731-11	WIRE (FLAT TYPE) (15 CORE)	
119	1-696-725-11	WIRE (FLAT TYPE) (9 CORE)	
120	1-696-726-11	WIRE (FLAT TYPE) (13 CORE)	
167	1-638-983-11	PC BOARD, MOTOR FLEXIBLE	
⚠F901	1-532-078-00	FUSE T1A (AEP, UK, G, IT, AUS)	
⚠F901	1-532-744-11	FUSE, GLASS TUBE 125V/2.5A (US, Canadian)	
⚠F902	1-532-203-00	FUSE T2A (E, EA, TR)	
⚠F903	1-532-078-00	FUSE T1A (E, EA, TR)	
HP101	A-2003-868-F	BASE ASSY, HEAD (DECK A)	
HRPE101	A-2003-838-F	BASE ASSY, HEAD (DECK B)	
M101A	X-3363-501-1	MOTOR ASSY, REEL (DECK A)	
M101B	X-3363-501-1	MOTOR ASSY, REEL (DECK B)	
M102A	X-3359-417-1	MOTOR ASSY, CAPSTAN (DECK A)	
M102B	X-3359-417-1	MOTOR ASSY, CAPSTAN (DECK B)	
⚠T901	1-697-002-11	TRANSFORMER, POWER (E, EA, TR)	
⚠T901	1-697-003-11	TRANSFORMER, POWER (UK, AUS)	
⚠T901	1-697-004-11	TRANSFORMER, POWER (AEP, G, IT)	
⚠T901	1-697-005-11	TRANSFORMER, POWER (US, Canadian)	
**********			

HARDWARE LIST

#1	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
#2	7-682-547-04	SCREW +BVTT 3X6 (S)
#3	7-682-548-04	SCREW +BVTT 3X8 (S)
#4	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3
#5	7-685-645-79	SCREW +BTP 3X6 TYPE2 N-S
#6	7-621-255-15	SCREW +PTT 2X3 (S)
#7	7-627-556-08	SCREW +P 2.6X2.8
#8	7-621-775-00	SCREW +B 2.6X3
#9	7-621-770-67	SCREW +PTT 2.6X6 (S)

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

9-957-398-11

Sony Corporation
Audio Group

English
92H04100-1

© 1992. 8

Published by Customer Relations and Service Group

Printed by: Schaltungsdienst Lange, Berlin (GERMANY)

MC-Service